

Beckwith BECO 2200 Driver

File Name	BECO2200.dll
Manufacturer	Beckwith Electric Co. Inc.
Devices	M3311 and M3425A
Protocol	Derived from Cooper Power Systems Digital Communication Protocol Data 2200 (revision 1) protocol
Version	2.0.1
Last Update	07/11/2025
Platform	Win32
Dependencies	IOKit version 1.8 or later
Superblock Readings	No
Level	0

Introduction

The Beckwith BECO 2200 Driver must be used to perform communication between **Eclipse Software** systems and M3311 and M3425A devices by Beckwith Electric Co. Inc.

Preparing a Device

The M3311 and M3425A devices use the COM1 (RS-232) front port to perform an exclusive communication with BECO 2200 protocol. The COM2 (RS-232) and COM3 (RS-485) rear ports are for exclusive use of Modbus RTU protocol.

The RS-232 serial interface of these devices supports communication rates from 300 up to 9600 bps, 8 (eight) data bits, no parity, and 2 (two) stop bits.

Driver Configuration

This section contains information about the configuration of **[P]** parameters of this Driver.

[P] Parameters

P1	Not used
P2	Not used
P3	Not used
P4	Not used

Tag Reference

This section contains information about the configuration of Tags of this Driver.

Introduction

All Tags of this Driver are configured with number values using the next syntax:

- **PLC Tags:** (N1, N2, N3, N4)
- **Block Tags:** (B1, B2, B3, B4)

Point Tag

Reading and Writing

N1 or B1	Address of a device
N2 or B2	0 (zero)
N3 or B3	Type of point. $(0-14) \times 1000 +$ number of the initial point (0-255)
N4 or B4	Data type. For more information, please check the next table

Data types supported by this Driver

VALUE	DESCRIPTION	LIMITE
000	Unsigned Word	Number of Elements less than or equal to 15
100	Signed Word	Number of Elements less than or equal to 15
200	Unsigned DWord	Number of Elements less than or equal to 7 (seven)
300	Signed DWord	Number of Elements less than or equal to 7 (seven)
400	Float	Number of Elements less than or equal to 7 (seven)
500 + <i>n</i> characters	String	Number of Elements $\times n$ less than or equal to 30

Reset Point Tag

Write-Only

N1	Address of a device
N2	1 (one)
N3	Type of point. $(0-14) \times 1000 +$ point number (0-255)
N4	Not used

This PLC Tag restarts a point number.

Master Reset Point Tag

Write-Only

N1	Address of a device
N2	2 (two)
N3	Type of point. (0-14) × 1000
N4	Not used

This PLC Tag restarts all point numbers of a type of point.

Target Information Events from M3311 Devices

Read-Only

N1	Address of a device
N2	3 (three)
N3	Not used
N4	Not used

This PLC Tag performs a collecting of **Target Information** -type events from an M3311 device. This Tag collects all digital events with a value 1 (one) and a timestamp greater than the **user-defined** base timestamp. An event is identified by the position index shown on the next table. Use an **OnRead** event of this Tag to receive values from these events.

List of Target Information events for M3311 devices

INDEX	EVENT
TARGET RELAY STATUS	
0	Out 8
1	Out 7
2	Out 6
3	Out 5
4	Out 4
5	Out 3
6	Out 2
7	Out 1
TARGET INPUT STATUS	
8	Input 6
9	Input 5
10	Input 4

INDEX	EVENT
11	Input 3
12	Input 2
13	Input 1
FUNCTION STATUS	
14	F50G_W2_1
15	F50_W3_2
16	F50_W3_1
17	F50_W2_2
18	F50_W2_1
19	F50_W1_2
20	F50_W1_1
21	F49
22	F46IT_W3
23	F46DT_W3
24	F46IT_W2
25	F46DT_W2
26	F27
27	F24IT
28	F24DT_2
29	F24DT_1
30	F59G_2
31	F59G_1
32	F51G_W3
33	F51G_W2
34	F51N_W3
35	F51N_W2
36	F51N_W1
37	F51_W3
38	F51_W2
39	F51_W1
40	F50BF_W3
41	F50BF_W2
42	F50BF_W1
43	F50G_W3_2
44	F50G_W3_1
45	F50G_W2_2
46	FEXT_6

INDEX	EVENT
47	FEXT_5
48	FEXT_4
49	FEXT_3
50	FEXT_2
51	FEXT_1
52	F87GD_W3
53	F87GD_W2
54	F87T
55	F87H
56	F81_4
57	F81_3
58	F81_2
59	F81_1
60	FBRKR_W3
61	FBRKR_W2
62	FBRKR_W1
63	F50N_W3_2
64	F50N_W3_1
65	F50N_W2_2
66	F50N_W2_1
67	F50N_W1_2
68	F50N_W1_1
FUNCTION TIMER	
69	F50G_W2_1
70	F50_W3_2
71	F50_W3_1
72	F50_W2_2
73	F50_W2_1
74	F50_W1_2
75	F50_W1_1
76	F49
77	F46IT_W3
78	F46DT_W3
79	F46IT_W2
80	F46DT_W2
81	F27
82	F24IT

INDEX	EVENT
83	F24DT_2
84	F24DT_1
85	F59G_2
86	F59G_1
87	F51G_W3
88	F51G_W2
89	F51N_W3
90	F51N_W2
91	F51N_W1
92	F51_W3
93	F51_W2
94	F51_W1
95	F50BF_W3
96	F50BF_W2
97	F50BF_W1
98	F50G_W3_2
99	F50G_W3_1
100	F50G_W2_2
101	FEXT_6
102	FEXT_5
103	FEXT_4
104	FEXT_3
105	FEXT_2
106	FEXT_1
107	F87GD_W3
108	F87GD_W2
109	F87T
110	F87H
111	F81_4
112	F81_3
113	F81_2
114	F81_1
115	FBRKR_W3
116	FBRKR_W2
117	FBRKR_W1
118	F50N_W3_2
119	F50N_W3_1

INDEX	EVENT
120	F50N_W2_2
121	F50N_W2_1
122	F50N_W1_2
123	F50N_W1_1
50 PHASE	
124	W2 #2 Phase C
125	W2 #2 Phase B
126	W2 #2 Phase A
127	W2 #1 Phase C
128	W2 #1 Phase B
129	W2 #1 Phase A
130	W1 #2 Phase C
131	W1 #2 Phase B
132	W1 #2 Phase A
133	W1 #1 Phase C
134	W1 #1 Phase B
135	W1 #1 Phase A
136	W3 #2 Phase C
137	W3 #2 Phase B
138	W3 #2 Phase A
139	W3 #1 Phase C
140	W3 #1 Phase B
141	W3 #1 Phase A
51 PHASE STATUS/TIMER	
142	W2 Phase C status
143	W2 Phase B status
144	W2 Phase A status
145	W2 Phase C timer
146	W2 Phase B timer
147	W2 Phase A timer
148	W1 Phase C status
149	W1 Phase B status
150	W1 Phase A status
151	W1 Phase C timer
152	W1 Phase B timer
153	W1 Phase A timer
154	W3 Phase C status

INDEX	EVENT
155	W3 Phase B status
156	W3 Phase A status
157	W3 Phase C timer
158	W3 Phase B timer
159	W3 Phase A timer
160	87T Phase C status
161	87T Phase B status
162	87T Phase A status
163	87H Phase C status
164	87H Phase B status
165	87H Phase A status
166	87T Phase C timer
167	87T Phase B timer
168	87T Phase A timer
169	87H Phase C timer
170	87H Phase B timer
171	87H Phase A timer

Target Information Events from M3425A Devices

Read-Only

N1	Address of a device
N2	3 (three)
N3	Not used
N4	Not used

This PLC Tag performs a collecting of **Target Information**-type events from an M3425A device. This Tag collects all digital events with a value 1 (one) and a timestamp greater than the **user-defined** base timestamp. An event is identified by the position index shown on the next table. Use an **OnRead** event of this Tag to receive values from these events.

List of Target Information events for M3425A devices

INDEX	EVENT
TARGET RELAY STATUS	
0	Out 8
1	Out 7
2	Out 6
3	Out 5

INDEX	EVENT
4	Out 4
5	Out 3
6	Out 2
7	Out 1
TARGET INPUT STATUS	
8	Input 14
9	Input 13
10	Input 12
11	Input 11
12	Input 10
13	Input 9
14	Input 8
15	Input 7
16	Fuse Loss
17	Input 6
18	Input 5
19	Input 4
20	Input 3
21	Input 2
22	Input 1
FUNCTION STATUS (PICKED UP)	
23	50 #1
24	46IT
25	46DT
26	40 #2
27	40 #1
28	32 #2
29	32 #1
30	27TN #2
31	27TN #1
32	27 #2
33	27 #1
34	24IT
35	24DT #2
36	24DT #1
37	21 #2
38	21 #1

INDEX	EVENT
39	64F #2
40	64F #1
41	64B
42	60FL
43	59N #2
44	59N #1
45	59 #2
46	59 #1
47	51V
48	21 #3
49	51N
50	50N
51	50DT #2
52	50DT #1
53	50BF
54	5027
55	32 #3
56	27 #3
57	25D
58	25S
59	87GD
60	87
61	81R #2
62	81R #1
63	81 #4
64	81 #3
65	81 #2
66	81 #1
67	78
68	64S
69	81A #4
70	81A #3
71	81A #2
72	81A #1
73	Trip circuit monitor
74	Breaker monitor
75	49 #2

INDEX	EVENT
76	49 #1
77	87 #2
78	67NIT
79	67NDT
80	59N #3
81	59D
82	50 #3
83	50 #2
84	F81A #6
85	F81A #5
86	F59VX 2
87	F59VX 1
88	F40VC #2
89	F40VC #1
90	IPS LOGIC #6
91	IPS LOGIC #5
92	IPS LOGIC #4
93	IPS LOGIC #3
94	IPS LOGIC #2
95	IPS LOGIC #1
FUNCTION STATUS (TIMED OUT)	
96	50
97	46IT
98	46DT
99	40 #2
100	40 #1
101	32 #2
102	32 #1
103	27TN #2
104	27TN #1
105	27 #2
106	27 #1
107	24IT
108	24DT #2
109	24DT #1
110	21 #2
111	21 #1

INDEX	EVENT
112	64F #2
113	64F #1
114	64B
115	60FL
116	59N #2
117	59N #1
118	59 #2
119	59 #1
120	51V
121	21 #3
122	51N
123	50N
124	50DT #2
125	50DT #1
126	50BF
127	5027
128	32 #3
129	27 #3
130	25D
131	25S
132	87GD
133	87
134	81R #2
135	81R #1
136	81 #4
137	81 #3
138	81 #2
139	81 #1
140	78
141	64S
142	81A #4
143	81A #3
144	81A #2
145	81A #1
146	Trip circuit monitor
147	Breaker monitor
148	49 #2

INDEX	EVENT
149	49 #1
150	87 #2
151	67NIT
152	67NDT
153	59N #3
154	59D
155	50 #3
156	50 #2
157	F81A #6
158	F81A #5
159	F59VX 2
160	F59VX 1
161	F40VC #2
162	F40VC #1
163	IPS LOGIC #6
164	IPS LOGIC #5
165	IPS LOGIC #4
166	IPS LOGIC #3
167	IPS LOGIC #2
168	IPS LOGIC #1
21 PHASE STATUS INFORMATION	
169	#3 Phase C status
170	#3 Phase B status
171	#3 Phase A status
172	#2 Phase C status
173	#2 Phase B status
174	#2 Phase A status
175	#1 Phase C status
176	#1 Phase B status
177	#1 Phase A status
21 PHASE TIMER INFORMATION	
178	#3 Phase C timer
179	#3 Phase B timer
180	#3 Phase A timer
181	#2 Phase C timer
182	#2 Phase B timer
183	#2 Phase A timer

INDEX	EVENT
184	#1 Phase C timer
185	#1 Phase B timer
186	#1 Phase A timer
27 PHASE STATUS INFORMATION	
187	#3 Phase C status
188	#3 Phase B status
189	#3 Phase A status
190	#2 Phase C status
191	#2 Phase B status
192	#2 Phase A status
193	#1 Phase C status
194	#1 Phase B status
195	#1 Phase A status
27 PHASE TIMER INFORMATION	
196	#3 Phase C timer
197	#3 Phase B timer
198	#3 Phase A timer
199	#2 Phase C timer
200	#2 Phase B timer
201	#2 Phase A timer
202	#1 Phase C timer
203	#1 Phase B timer
204	#1 Phase A timer
50 PHASE STATUS/TIMER INFORMATION	
205	#2 Phase C status
206	#2 Phase B status
207	#2 Phase A status
208	#1 Phase C status
209	#1 Phase B status
210	#1 Phase A status
211	#2 Phase C timer
212	#2 Phase B timer
213	#2 Phase A timer
214	#1 Phase C timer
215	#1 Phase B timer
216	#1 Phase A timer
50DT PHASE STATUS/TIMER INFORMATION	
217	#2 Phase C status

INDEX	EVENT
218	#2 Phase B status
219	#2 Phase A status
220	#1 Phase C status
221	#1 Phase B status
222	#1 Phase A status
223	#2 Phase C timer
224	#2 Phase B timer
225	#2 Phase A timer
226	#1 Phase C timer
227	#1 Phase B timer
228	#1 Phase A timer
51V PHASE STATUS/TIMER	
229	Phase C status
230	Phase B status
231	Phase A status
232	Phase C timer
233	Phase B timer
234	Phase A timer
59 PHASE STATUS INFORMATION	
235	#3 Phase C status
236	#3 Phase B status
237	#3 Phase A status
238	#2 Phase C status
239	#2 Phase B status
240	#2 Phase A status
241	#1 Phase C status
242	#1 Phase B status
243	#1 Phase A status
59 PHASE TIMER INFORMATION	
244	#3 Phase C timer
245	#3 Phase B timer
246	#3 Phase A timer
247	#2 Phase C timer
248	#2 Phase B timer
249	#2 Phase A timer
250	#1 Phase C timer
251	#1 Phase B timer

INDEX	EVENT
252	#1 Phase A timer
87 PHASE STATUS/TIMER INFORMATION	
253	#2 Phase C status
254	#2 Phase B status
255	#2 Phase A status
256	#1 Phase C status
257	#1 Phase B status
258	#1 Phase A status
259	#2 Phase C timer
260	#2 Phase B timer
261	#2 Phase A timer
262	#1 Phase C timer
263	#1 Phase B timer
264	#1 Phase A timer
TARGET RELAY STATUS EXTENDED	
265	Out 23
266	Out 22
267	Out 21
268	Out 20
269	Out 19
270	Out 18
271	Out 17
272	Out 16
273	Out 15
274	Out 14
275	Out 13
276	Out 12
277	Out 11
278	Out 10
279	Out 9

Define a Base Timestamp

Reading or Writing

N1	Address of a device
N2	9999
N3	Not used
N4	Not used

This Tag defines a base timestamp used as a reference for collecting **Target Information**-type events for **M3311** and **M3425A**. devices. The value written to this Tag must be in **Date and Time** format.

NOTE

The base timestamp is automatically updated by this Driver using the latest timestamp from the stack of **Target Information**-type events whenever this Driver finishes a collecting of these events.

Documentation of I/O Interfaces

This section contains the documentation of I/O Interfaces referring to **BECO2200** Driver.

Configuration of a Driver

I/O Interface configuration is performed on a Driver's configuration dialog box. To access the configuration of this dialog box in **Eclipse E3** in version 1.0, follow these steps:

1. Right-click a Driver object (IODriver).
2. Select the **Properties** item on the contextual menu.
3. Select the **Driver** tab.
4. Click **Other parameters**.

In **Eclipse E3** version 2.0 or later, click **Configure driver**  on a Driver's toolbar. In **Eclipse SCADA**, follow these steps:

1. Open the Organizer.
2. Select a Driver on Organizer's tree.
3. Click **Extras** on the **Driver** tab.

Currently, an I/O Interface allows opening only one connection for each Driver. This means that, if users want to access two serial ports, they must add two Drivers to an application and then configure each one of these Drivers for each serial port.

Configuration Dialog Box

The dialog box of I/O Interfaces allows configuring the I/O connection used by a Driver. This dialog box contains the **Setup**, **Serial**, **Ethernet**, **Modem**, and **RAS** tabs, described on the next topics. If a Driver does not implement a specific I/O connection, its corresponding tab is not available for configuration. Some Drivers may contain additional tabs, specific for that Driver, on the configuration dialog box.

Setup Tab

The **Setup** tab contains general configurations of a Driver. This tab is divided into the following groups:

- **General configurations:** Configurations of a Driver's physical layer, time-out, and initialization mode
- **Connection management:** Configurations on how the I/O Interface keeps a connection and which recovery policy is used on failure
- **Logging options:** Controls the generation of log files

The screenshot shows the 'Setup' tab configuration window. It is divided into several sections:

- Physical Layer:** A dropdown menu set to 'Ethernet'. To the right is a checkbox for 'Start driver OFFLINE' which is unchecked.
- Timeout:** A text input field containing '1000' followed by 'ms'.
- Communication check time:** A text input field containing '5000' followed by 'ms'.
- Connection management:** A sub-section containing:
 - A dropdown menu for 'Mode' set to 'Automatic (managed by the driver)'.
 - A checked checkbox for 'Retry failed connection every' followed by a text input '20' and 'seconds'.
 - An unchecked checkbox for 'Give up after' followed by a text input '1' and 'failed retries'.
 - An unchecked checkbox for 'Disconnect if non-responsive for' followed by a text input '0' and 'seconds'.
- Logging Options:** A sub-section containing:
 - An unchecked checkbox for 'Log to File:' followed by a text input 'C:\eeLogs\MicrolokII_%DATE%.log'.
 - A text input for 'File size limit (MB):' containing '0' with '(0 is unlimited)' in parentheses.

Setup tab

General options on the Setup tab

OPTION	DESCRIPTION
Physical Layer	Select the physical layer on a list. Available options are Serial, Ethernet, Modem, and RAS . The selected interface must be configured on its specific tab
Timeout	Configure a time-out, in milliseconds, for the physical layer. This is the amount of time an I/O interface waits to receive any byte from the reception's buffer
Communication check time	Set the time, in milliseconds, to define the interval at which communication is considered to be in an inactive state. As long as an I/O Driver receives valid data, its communication state is considered active. However, if during operation an I/O Driver does not receive valid data inside this period of time, the state is considered inactive. The communication state is shown in the IO.CommunicationStatus Tag

OPTION	DESCRIPTION
Start driver OFFLINE	Select this option so that a Driver starts in Offline mode or stopped. This means that the I/O interface is not created until this Driver is configured to Online mode by using a Tag in an application. This mode enables a dynamic configuration of an I/O interface at run time

Options on the Connection management group

OPTION	DESCRIPTION
Mode	Selects a management mode of a connection. Selecting the Automatic option allows a Driver to manage the connection automatically, as specified in the next options. Selecting the Manual option allows an application to fully manage a connection
Retry failed connection every ... seconds	Select this option to enable a Driver's connection retry in a certain interval, in seconds. If the Give up after failed retries option is not selected, this Driver keeps retrying until a connection is performed, or until the application is stopped
Give up after ... failed retries	Enable this option to define a maximum number of connection retries. When the specified number of consecutive connection retries is reached, a Driver goes to the Offline mode, assuming that a hardware problem was detected. If a Driver establishes a successful connection, the number of unsuccessful retries is cleared. If this new connection is lost, then the retry counter starts at zero
Disconnect if non-responsive for ... seconds	Enable this option to force a Driver to disconnect if no byte was received by the I/O interface during the specified time-out, in seconds. This time-out must be greater than the time-out configured in the Timeout option

Options on the Logging Options group

OPTION	DESCRIPTION
Log to File	<p>Enable this option and configure the name of a file to write a log. Log files can be large, so use this option for short periods of time, only for testing and debugging purposes. If the %PROCESS% macro is used in the log file name, it is replaced by the identifier of the current process. This option is particularly useful when using several instances of the same Driver in Elipse E3, thus allowing each instance to generate a separate log file. For example, when configuring this option with value "c:\e3logs\drivers\sim_%PROCESS%.log", it generates a file named c:\e3logs\drivers\sim_00000FDA.log for process OFDAh. Users can also use the %DATE% macro in the file name. In this case a log file is generated every day, in the format aaaa_mm_dd. For example, when configuring this option with value "c:\e3logs\drivers\sim_%DATE%.log", it generates a file named c:\e3logs\drivers\sim_2005_12_31.log in 12/31/2005 and a file named c:\e3logs\drivers\sim_2006_01_01.log in 01/01/2006. Similarly, the %DATE_HOUR% macro generates one log file per hour, in the format aaaa_mm_dd_hh</p>
File size limit (MB)	<p>Configure the log file size limit, in megabytes. A value equal to 0 (zero) means that there is no size limit for the log file</p>

Serial Tab

Use this tab to configure parameters for a **Serial** Interface.

Serial

Port:

Baud rate:

Data bits:

Parity:

Stop bits:

Enable 'ECHO' suppression

Handshaking

DTR control:

RTS control:

Wait for CTS before send

CTS timeout: ms

Delay before send: ms

Delay after send: ms

Inter-byte delay (microseconds): μ s

Inter-frame delay (milliseconds): ms

Serial tab

General options on the Serial tab

OPTION	DESCRIPTION
Port	Select a serial port on the list, from COM1 to COM4 , or type the name of a serial port in the format COMn , such as "COM15". When typing the name of a serial port manually, the dialog box only accepts names of serial ports starting with the expression "COM"
Baud rate	Select a baud rate on the list (1200, 2400, 4800, 9600, 19200, 38400, 57600, or 115200) or type a baud rate, such as 600
Data bits	Select 7 (seven) or 8 (eight) data bits on the list
Parity	Select a parity on the list. The available options are None, Even, Odd, Mark, or List
Stop bits	Select the number of stop bits on the list. The available options are 1, 1.5, or 2 stop bits
Enable 'ECHO' suppression	Enable this option to remove the echo received after the I/O Interface sends data via serial port. If this echo is not equal to the bytes just sent, then the I/O Interface aborts communication
Inter-byte delay (microseconds)	Defines a delay between each byte transmitted by the I/O Interface, in millionths of a second, that is, 1000000 is equal to a second. This option must be used with small delays of less than a millisecond
Inter-frame delay (milliseconds)	Defines a delay between packets sent or received by the I/O Interface, in thousandths of a second, that is, 1000 is equal to a second. This delay is applied if the I/O Interface

OPTION	DESCRIPTION
	sends two consecutive packets, or between a received packet and the next sending

The **Handshaking** group configures the usage of **RTS**, **CTS**, and **DTR** signals in the handshaking process, that is, it controls when data can be sent or received via serial line. Most of the time, configuring the **DTR control** option to **ON** and the **RTS control** option to **Toggle** works with **RS232**-type serial lines as well as with **RS485**-type serial lines.

Available options on the Handshaking group

OPTION	DESCRIPTION
DTR control	Select the value ON to keep the DTR signal always on while the serial port is open. Select the value OFF to turn the DTR signal off while the serial port is open. Some devices require the DTR signal always on to allow communication
RTS control	Select the value ON to keep the RTS signal always on while the serial port is open. Select the value OFF to turn the RTS signal off while the serial port is open. Select the value Toggle to turn the RTS signal on while sending bytes via serial port and turn it off when not sending bytes, therefore enabling the reception
Wait for CTS before send	Available only when the RTS control option is configured with the value Toggle . Use this option to force a Driver to check the CTS signal before sending bytes via serial port, after turning the RTS signal on. In this mode, the CTS signal is handled as a permission flag for sending
CTS timeout	Determines a maximum time, in milliseconds, that a Driver waits for the CTS signal after turning the RTS signal on. If the CTS signal is not turned on within this time-out, that Driver then fails the current communication and returns an error
Delay before send	Some serial port devices have a delay when enabling a data sending circuit after the RTS signal is turned on. Configure this option to wait a certain number of milliseconds after turning the RTS signal on and before sending the first byte. IMPORTANT: This delay must be used carefully, because it uses 100% of CPU resources while waiting. System's general performance degrades as this value increases
Delay after send	This is the same effect of the Delay before send option, but in this case the delay is performed after sending the last byte, before turning the RTS signal off

Ethernet Tab

Use this tab to configure parameters of an **Ethernet** Interface. These parameters, except port configurations, must also be configured for use in the **RAS** Interface.

Ethernet

Transport: TCP/IP ▼

PING before connecting

Timeout: 4000 ms

Retries: 1

Listen for connections on port: 0

Share listen port with other processes

Interface: (All Interfaces) ▼

Use IPv6 Use SSL SSL Settings

Enable 'ECHO' supression

IP Filter:

Connect to

<input type="checkbox"/> Main IP:	 	Port:	502	<input type="checkbox"/> Local port:	0
<input type="checkbox"/> Backup IP 1:	 	Port:	0	<input type="checkbox"/> Local port:	0
<input type="checkbox"/> Backup IP 2:	 	Port:	0	<input type="checkbox"/> Local port:	0
<input type="checkbox"/> Backup IP 3:	 	Port:	0	<input type="checkbox"/> Local port:	0

Ethernet tab

Available options on the Ethernet tab

OPTION	DESCRIPTION
Transport	Select the value TCP/IP for a TCP socket (<i>stream</i>) or select the value UDP/IP to use a UDP socket (<i>connectionless datagram</i>)
Listen for connections on port	Use this option to wait for new connections in a specific IP port, common in Slave Drivers. If this option remains unselected, a Driver connects to the address and port specified in the Connect to option
Share listen port with other processes	Select this option to share the listening port with other Drivers and processes
Interface	Select the local network interface, identified by its IP address, that a Driver uses to establish and receive connections, or select the value (All Interfaces) to allow connection in any network interface
Use IPv6	Select this option to force a Driver to use addresses in IPv6 format on all Ethernet connections. Leave this option deselected to use the IPv4 format
Enable 'ECHO' supression	Enable this option to remove the echo from received data. An echo is a copy of sent data, which can be returned before a reply message
IP Filter	List of restricted or allowed IP addresses from where a Driver accepts connections (<i>Firewall</i>). Please check the IO.Ethernet.IPFilter property for more information
PING before connecting	Enable this option to execute a ping command, that is, to check whether a device can be reached on a network, for a device before trying a socket connection. This is a quick way

OPTION	DESCRIPTION
	<p>of determining a successful connection before trying to open a socket with a device. The time-out of a connection with a socket can be very high. The available options are:</p> <ul style="list-style-type: none"> • Timeout: Specify the number of milliseconds to wait for a reply from a ping command. Users must use a ping command to check the normal reply time, configuring this option for a value above that average. Usually this value can be configured between 1000 and 4000 milliseconds, that is, between 1 (one) and 4 (four) seconds • Retries: Number of retries of a ping command, not counting the first attempt. If all attempts fail, then the socket connection is aborted

Available options on the Connect to group

OPTION	DESCRIPTION
Main IP	Type the IP address of a remote device. Users can use an IP address separated by dots, as well as a URL. In case of a URL, a Driver uses the available DNS service to map that URL to an IP address, such as "192.168.0.13" or "Server1"
Port	Type the IP port of a remote device, between 0 (zero) and 65535
Local port	Select this option to use a fixed local IP port when connecting to a remote device
Backup IP 1, 2, and 3	Indicate the IP address, the IP port, and the fixed local IP port of up to 3 (three) backup addresses of a remote device

Modem Tab

Use this tab to configure parameters of a **Modem** Interface. Some options on the **Serial** tab affect the configuration of a modem, therefore users must also configure the **Serial** Interface.

Modem

Select the modem to use:

Dial Number:

Accept incoming calls

Modem tab

The **Modem** Interface uses the TAPI modems installed on the computer.

Available options on the Modem tab

OPTION	DESCRIPTION
Select the modem to use	Select a modem on the list of available modems on the computer. If the value Default modem is selected, then the first available modem is used. Selecting this option is recommended specially when an application is used on another computer
Modem settings	Click to open the configuration window of the selected modem
Dial Number	Type a default number for dialing. This value can be changed at run time. Users can use the w character to represent a pause or a waiting time for a dial tone. For example, "0w33313456" dials the number 0 (zero), waits, and then dials the number "33313456"
Accept incoming calls	Enable this option so that a Driver answers the phone when receiving an external call. To use this option, users must configure the Connection management option on the Setup tab to the value Manual

RAS Tab

Use this tab configure parameters of a **RAS** Interface. Users must also configure the **Ethernet** tab.

A **RAS** Interface opens a socket connection with a RAS device. A RAS device is a server of modems available through TCP/IP, waiting for socket connections on an IP port. For each connection accepted on this port, users have access to one modem.

When connecting to a RAS device, first the I/O Interface **IOKit** connects to the socket on the IP address and port configured on the **Ethernet** tab. After opening the socket, the following initialization or connection steps are performed:

1. Clears the socket, that is, removes any **TELNET** greeting message received from a RAS device.
2. Sends an **AT** dial message, in **ASCII** format, in the socket.
3. Waits for a **CONNECT** reply.
4. If the time-out expires, the connection is aborted.
5. If the **CONNECT** reply is received within the time-out, the socket is available for communication with a device, that is, the connection was established.

If step 5 (five) is successful, then the socket behaves as a normal socket, with the RAS device working as a router between a Driver and the device. Bytes sent by a Driver are received by the RAS device and sent to the destination device using a modem. Bytes received by the modem's RAS device are sent back to a Driver using the same socket.

After establishing a connection, the **RAS** interface monitors data received by a Driver. If a "NO CARRIER" **String** is found, the socket is closed. If the RAS device does not send a **NO CARRIER** signal, the **RAS** Interface cannot detect when the modem connection between the RAS device and the final I/O device fails. To recover from this failure, users are strongly advised to enable the **Disconnect if non-responsive** option on the **Setup** tab.

RAS

AT command:

Connection timeout: seconds

Other socket settings should be configured in the "Ethernet" tab!

RAS tab

Available options on RAS tab

OPTION	DESCRIPTION
AT command	A String with the full AT command used to dial to a destination device. For example, "ATDT33313456" dials by tone to number "33313456"
Connection timeout	Number of seconds to wait for a modem's CONNECT reply, after sending an AT command

General Configurations

This section contains information about the configuration of general **I/O Tags** and **Properties** of I/O Interfaces.

I/O Tags

General I/O Interfaces Tags (N2/B2 = 0)

The Tags described next are provided for all supported I/O Interfaces.

IO.CommunicationStatus

Type of Tag	I/O Tag
Type of Access	Reading
N1 Parameter	-1 (minus one)
N2 Parameter	0 (zero)
N3 Parameter	0 (zero)
N4 Parameter	6 (six)
String Configuration	IO.CommunicationStatus

This Tag informs the communication status of a Driver. It indicates how communication works relative to receiving valid data within a time period arbitrated in the configuration. For more information, please check topic **Setup Tab**. Possible values are **0 - Inactive communication**: The Driver did not receive valid data or stopped receiving data after n milliseconds, as configured in the properties window, or **1 - Active communication**: The Driver is receiving valid data.

IO.IOKitEvent

Type of Tag	Block Tag
Type of Access	Read-Only
B1 Parameter	-1 (minus one)
B2 Parameter	0 (zero)
B3 Parameter	0 (zero)
B4 Parameter	1 (one)
Size Property	4 (four)
ParamItem Property	IO.IOKitEvent

This Block returns Driver events generated by several sources in I/O Interfaces. The **TimeStamp** property of this Block represents the moment this event occurred. The Block Elements are the following:

- **Element 0**: Type of event. Possible values are **0**: Information, **1**: Warning, or **2**: Error
- **Element 1**: Source of an event. Possible values are **0**: Driver (specific of a Driver), **-1**: IOKit (generic events of I/O Interfaces), **-2**: **Serial** Interface, **-3**: **Modem** Interface, **-4**: **Ethernet** Interface, or **-5**: **RAS** Interface
- **Element 2**: Error number, specific for each source of event

- **Element 3:** Message of an event, a **String** specific for each event

NOTE

A Driver keeps a maximum number of 100 events internally. If additional events are reported, older events are discarded.

IO.PhysicalLayerStatus

Type of Tag	I/O Tag
Type of Access	Read-Only
N1 Parameter	-1 (minus one)
N2 Parameter	0 (zero)
N3 Parameter	0 (zero)
N4 Parameter	2 (two)
String Configuration	IO.PhysicalLayerStatus

This Tag indicates the status of a physical layer. Possible values are the following:

- **0:** Physical layer stopped, that is, a Driver is in **Offline** mode, the physical layer failed when initializing, or exceeded the maximum number of reconnection attempts
- **1:** Physical layer started but not connected, that is, a Driver is in **Online** mode but the physical layer is not connected. If the **Connection management** option is configured with the value **Automatic**, the physical layer can be connecting, disconnecting, or waiting for a reconnection attempt. If the **Connection management** option is configured with the value **Manual**, then the physical layer remains in this status until forced to connect
- **2:** Physical layer connected, that is, the physical layer is ready for use. This **DOES NOT** mean a device is connected, only that the access layer is working

IO.SetConfigurationParameters

Type of Tag	Block Tag
Type of Access	Read-Only
B1 Parameter	-1 (minus one)
B2 Parameter	0 (zero)
B3 Parameter	0 (zero)
B4 Parameter	3 (three)
Size Property	2 (two)
ParamItem Property	IO.SetConfigurationParameters

Use this Tag to change any property of a Driver's configuration dialog box at run time.

This Tag works only while a Driver is in **Offline** mode. To start a Driver in **Offline** mode, select the **Start driver OFFLINE** option on that Driver's configuration dialog box. Users can write to a PLC Tag or to a Block Tag containing the parameters to change. Writing individual Block Elements is not supported, the whole Block must be written at once.

In **Elipse SCADA**, users must use a Block Tag. Every parameter to configure uses two Block Elements. For example, if users want to configure 3 (three) parameters, then the size of the Block must be 6 (six, 3×2). The first Element is the property's name, as a **String**, and the second Element is the property's value, according to the next example.

```
// 'Block' must be a Block Tag with automatic reading,
// scan reading, and automatic writings disabled.
// Configure all parameters
Block.element001 = "IO.Type" // Parameter 1
Block.element002 = "Serial"
Block.element003 = "IO.Serial.Port" // Parameter 2
Block.element004 = 1
Block.element005 = "IO.Serial.BaudRate" // Parameter 3
Block.element006 = 19200
// Writes the whole Block
Block.Write()
```

When using **Elipse E3**, the ability to create arrays at run time allows using an I/O Tag as well as a Block Tag. Users can use the **Write** method of a Driver to send the parameters directly to that Driver, without creating a Tag, according to the next example.

```
Dim arr(6)
' Configure all array elements
arr(1) = "IO.Type"
arr(2) = "Serial"
arr(3) = "IO.Serial.Port"
arr(4) = 1
arr(5) = "IO.Serial.BaudRate"
arr(6) = 19200
' There are two methods to send parameters
' Method 1: Using an I/O Tag
tag.WriteEx arr
' Method 2: Without using a Tag
Driver.Write -1, 0, 0, 3, arr
```

A variation of the previous example uses a bidimensional array.

```
Dim arr(10)
' Configure all array elements. Notice the array was resized
' to 10 elements. Empty array elements are ignored by a Driver
arr(1) = Array("IO.Type", "Serial")
arr(2) = Array("IO.Serial.Port", 1)
arr(3) = Array("IO.Serial.BaudRate", 19200)
Driver.Write -1, 0, 0, 3, arr
```

A Driver does not validate parameter names or passed values, therefore be careful when writing parameters and values. The **Write** method fails if the configuration array is incorrectly created. Users can check the log of a Driver or use the *writeStatus* parameter of the **WriteEx** method to find out the exact cause of an error.

```
Dim arr(10), strError
arr(1) = Array("IO.Type", "Serial")
arr(2) = Array("IO.Serial.Port", 1)
arr(3) = Array("IO.Serial.BaudRate", 19200)
If Not Driver.WriteEx -1, 0, 0, 3, arr, , strError Then
    MsgBox "Failed configuring Driver parameters: " + strError
End If
```

IO.WorkOnline

Type of Tag	I/O Tag
Type of Access	Reading or Writing
N1 Parameter	-1 (minus one)
N2 Parameter	0 (zero)
N3 Parameter	0 (zero)
N4 Parameter	4 (four)
String Configuration	IO.WorkOnline

This Tag informs the current status of a Driver and allows starting or stopping the physical layer. Possible values are the following:

- **0 - Driver Offline:** Physical layer is closed or stopped. This mode allows a dynamic configuration of a Driver's parameters using the **IO.SetConfigurationParameters** Tag
- **1 - Driver Online:** Physical layer is open or executing. While in **Online** mode, the physical layer can be connected or disconnected and its current status can be checked using the **IO.PhysicalLayerStatus** Tag

In the next example, using **Eclipse E3**, a Driver is configured to **Offline** mode, its COM port is changed, and then configured to **Online** mode again.

```
'Configure to Offline mode
Driver.Write -1, 0, 0, 4, 0
'Change port to COM2
Driver.Write -1, 0, 0, 3, Array("IO.Serial.Port", 2)
'Configure to Online mode
Driver.Write -1, 0, 0, 4, 1
```

The **Write** method may fail when configuring a Driver to **Online** mode, that is, writing the value 1 (one). In this case, this Driver remains in **Offline** mode. The cause of failure can be:

- Type of physical layer incorrectly configured, probably an invalid value was configured in the **IO.Type** property
- This Driver may have run out of memory
- Physical layer probably did not create its working thread. Search the log file for a message "Failed to create physical layer thread!"
- Physical layer could not start. The cause of this failure depends on the type of physical layer. It can be an invalid serial port number, a failure when starting Windows Sockets, or a failure when starting TAPI (modem), among others. This cause is recorded on the log file

IMPORTANT

Even if the configuration of a Driver to **Online** mode is successful, this does not necessarily mean the physical layer is ready to use, that is, ready to execute input and output operations with an external device. The **IO.PhysicalLayerStatus** Tag must be checked to ensure the physical layer is connected and ready for communication.

Properties

These are general properties of all supported I/O Interfaces.

IO.ConnectionMode

9 Controls the management mode of a Connection. Possible values are **0**: Automatic mode, in which a Driver manages the connection or **1**: Manual mode, in which an application manages the connection.

IO.GiveUpEnable

☑ When configured to True, defines a maximum number of reconnection attempts. If all reconnection attempts fail, a Driver enters the **Offline** mode. When configured to False, a Driver tries until a reconnection is successful.

IO.GiveUpTries

9 Number of reconnection attempts before this one is aborted. For example, if the value of this property is equal to 1 (one), a Driver tries only one reconnection when the connection is lost. If this one fails, this Driver enters the **Offline** mode.

IO.InactivityEnable

☑ Configure to True to enable and to False to disable inactivity detection. The physical layer is disconnected if inactive for a certain period of time. The physical layer is considered inactive only if it is capable of sending data but not capable of receiving it back.

IO.InactivityPeriodSec

9 Number of seconds to check for inactivity. If the physical layer is inactive for this period of time, it is then disconnected.

IO.RecoverEnable

☑ Configure to True to enable a Driver to recover lost connections and to False to leave a Driver in **Offline** mode when a connection is lost.

IO.RecoverPeriodSec

9 Delay time between two connection attempts, in seconds.

NOTE

The first reconnection is executed immediately after a connection is lost.

IO.StartOffline

☑ Configure to True to start a Driver in **Offline** mode and to False to start a Driver in **Online** mode.


NOTE

It is pointless to change this property at run time, as it can only be changed when a Driver is already in **Offline** mode. To configure a Driver in **Online** mode at run time, write the value 1 (one) to the **IO.WorkOnline** Tag.

IO.TimeoutMs

9 Defines a time-out for the physical layer, in milliseconds. One second is equal to 1000 milliseconds.

IO.Type

 Defines the type of physical interface used by a Driver. Possible values are the following:

- **N or None:** Does not use a physical interface, that is, a Driver must provide a customized interface
- **S or Serial:** Uses a local serial port (COM n)
- **M or Modem:** Uses a local modem, internal or external, accessed via TAPI (*Telephony Application Programming Interface*)
- **E or Ethernet:** Uses a TCP/IP or UDP/IP socket
- **R or RAS:** Uses a **RAS** (*Remote Access Server*) Interface. A Driver connects to a RAS device using the **Ethernet** Interface and then sends an **AT** (*dial*) command

Statistical Configuration

This section contains information about the configuration of **I/O Tags** and **Properties** of I/O Interfaces statistics.

I/O Tags

Tags of I/O Interface Statistics (N2/B2 = 0)

The Tags described next display statistics for all I/O Interfaces.

IO.Stats.Partial.BytesRecv

Type of Tag	I/O Tag
Type of Access	Read-Only
N1 Parameter	-1 (minus one)
N2 Parameter	0 (zero)
N3 Parameter	0 (zero)
N4 Parameter	1101
Configuration by String	IO.Stats.Partial.BytesRecv

This Tag returns the number of bytes received in the current connection.

IO.Stats.Partial.BytesSent

Type of Tag	I/O Tag
Type of Access	Read-Only
N1 Parameter	-1 (minus one)
N2 Parameter	0 (zero)
N3 Parameter	0 (zero)
N4 Parameter	1100
Configuration by String	IO.Stats.Partial.BytesSent

This Tag returns the number of bytes sent through the current connection.

IO.Stats.Partial.TimeConnectedSeconds

Type of Tag	I/O Tag
Type of Access	Read-Only
N1 Parameter	-1 (minus one)
N2 Parameter	0 (zero)
N3 Parameter	0 (zero)
N4 Parameter	1102
Configuration by String	IO.Stats.Partial.TimeConnectedSeconds

This Tag returns the number of seconds a Driver is connected in the current connection or 0 (zero) if a Driver is disconnected.

IO.Stats.Partial.TimeDisconnectedSeconds

Type of Tag	I/O Tag
Type of Access	Read-Only
N1 Parameter	-1 (minus one)
N2 Parameter	0 (zero)
N3 Parameter	0 (zero)
N4 Parameter	1103
Configuration by String	IO.Stats.Partial.TimeDisconnectedSeconds

This Tag returns the number of seconds a Driver is disconnected since the last connection ended or 0 (zero) if a Driver is connected.

IO.Stats.Total.BytesRecv

Type of Tag	I/O Tag
Type of Access	Read-Only
N1 Parameter	-1 (minus one)
N2 Parameter	0 (zero)
N3 Parameter	0 (zero)
N4 Parameter	1001
Configuration by String	IO.Stats.Total.BytesRecv

This Tag returns the number of bytes received since a Driver was loaded.

IO.Stats.Total.BytesSent

Type of Tag	I/O Tag
Type of Access	Read-Only
N1 Parameter	-1 (minus one)
N2 Parameter	0 (zero)
N3 Parameter	0 (zero)
N4 Parameter	1000
Configuration by String	IO.Stats.Total.BytesSent

This Tag returns the number of bytes sent since a Driver was loaded.

IO.Stats.Total.ConnectionCount

Type of Tag	I/O Tag
Type of Access	Read-Only
N1 Parameter	-1 (minus one)
N2 Parameter	0 (zero)
N3 Parameter	0 (zero)
N4 Parameter	1004
Configuration by String	IO.Stats.Total.ConnectionCount

This Tag returns the number of connections a Driver already established, successfully, since it was loaded.

IO.Stats.Total.TimeConnectedSeconds

Type of Tag	I/O Tag
Type of Access	Read-Only
N1 Parameter	-1 (minus one)
N2 Parameter	0 (zero)
N3 Parameter	0 (zero)
N4 Parameter	1002
Configuration by String	IO.Stats.Total.TimeConnectedSeconds

This Tag returns the number of seconds a Driver remained connected since it was loaded.

IO.Stats.Total.TimeDisconnectedSeconds

Type of Tag	I/O Tag
Type of Access	Read-Only
N1 Parameter	-1 (minus one)
N2 Parameter	0 (zero)
N3 Parameter	0 (zero)
N4 Parameter	1003
Configuration by String	IO.Stats.Total.TimeDisconnectedSeconds

This Tag returns the number of seconds a Driver remained disconnected since it was loaded.

Properties

Currently, there are no properties defined specifically to display I/O Interface statistics at run time.

Ethernet Interface Configuration

This section contains information about the configuration of **I/O Tags** and **Properties** of an **Ethernet** Interface.

I/O Tags

Tags of an Ethernet Interface (N2/B2 = 4)

The Tags described next allow controlling and identifying an **Ethernet** Interface at run time and they are also valid when the **RAS** Interface is selected.

IMPORTANT

These Tags are available **ONLY** while a Driver is in **Online** mode.

IO.Ethernet.IPSelect

Type of Tag	I/O Tag
Type of Access	Reading or Writing
N1 Parameter	-1 (minus one)
N2 Parameter	0 (zero)
N3 Parameter	4 (four)
N4 Parameter	0 (zero)
String Configuration	IO.Ethernet.IPSelect

Indicates the active IP address. Possible values are **0**: The main IP address is selected, **1**: The first alternative or backup IP address is selected, **2**: The second alternative or backup IP address is selected, or **3**: The third alternative or backup IP address is selected.

If the **Ethernet** or **RAS** Interface is connected, this Tag indicates which one of the four configured IP addresses is in use. If the Interface is disconnected, this Tag indicates which IP address is used first on the next attempt to connect.

During the connection process, if the active IP address is not available, the I/O Interface tries to connect using the other IP address. If the connection with the alternative IP address works, it is configured as the active IP address (automatic switchover).

To force a manual switchover, write values from 0 (zero) to 3 (three) to this Tag. This forces a reconnection with the specified IP address (**0**: Main address or **1, 2, 3**: Alternative address) if a Driver is currently connected. If a Driver is disconnected, this Tag configures the active IP address for the next attempt to connect.

IO.Ethernet.IPSwitch

Type of Tag	I/O Tag
Type of Access	Write-Only
N1 Parameter	-1 (minus one)
N2 Parameter	0 (zero)
N3 Parameter	4 (four)
N4 Parameter	1 (one)
String Configuration	IO.Ethernet.IPSwitch

Any value written to this Tag forces a manual switchover. If the main IP address is active, then the first alternative or backup IP address is activated, and so on for all alternative IP addresses and returning to the main address until a connection is established.

If a Driver is disconnected, this Tag configures the active IP address for the next attempt to connect.

IO.Ethernet.SocketState

Type of Tag	I/O Tag
Type of Access	Read-Only
N1 Parameter	-1 (minus one)
N2 Parameter	0 (zero)
N3 Parameter	4 (four)
N4 Parameter	2 (two)
String Configuration	IO.Ethernet.SocketState

The Value property of this Tag corresponds to socket states as a map of bits:

- **Bit 0**: 0 (zero, not listening) or 1 (one, listening)
- **Bit 1**: 0 (zero, disconnected) or 1 (one, connected)

Properties

These properties control the configuration of an **Ethernet** Interface.

NOTE

The **Ethernet** Interface is also used by the **RAS** Interface.

IO.Ethernet.AcceptConnection

☑ Configure to False if a Driver must not accept external connections, that is, if a Driver behaves as a master, or configure to True to enable the reception of connections, that is, if a Driver behaves as a slave.

IO.Ethernet.BackupEnable[2,3]

☑ Configure to True to enable an alternative or backup IP address. If the reconnection attempt with the main IP address fails, a Driver tries to use an alternative IP address. Configure to False to disable its usage.

IO.Ethernet.BackupIP[2,3]

📌 Alternative or backup IP address of a remote device. Users can use a numerical address, as well as a device's host name, such as "192.168.0.7" or "SERVER2".

IO.Ethernet.BackupLocalPort[2,3]

📌 Local port number to be used when connecting to an alternative IP address of a remote device. Used only if **IO.Ethernet.BackupLocalPortEnable** is equal to True.

IO.Ethernet.BackupLocalPortEnable[2,3]

☑ Configure to True to force the use of a specific local port when connecting to an alternative or backup IP address or configure to False to use any available local port.

IO.Ethernet.BackupPort[2,3]

📌 Port number of an alternative or backup IP address of a remote device, used with the **IO.Ethernet.BackupIP** property.

IO.Ethernet.IPFilter

📌 List with a comma-separated IPv4 or IPv6 addresses, which defines from which addresses a Driver accepts or blocks connections. Users can use asterisks, such as "192.168.*.*", or intervals, such as "192.168.0.41-50", in any part of IP addresses. To block an IP address or a range of IP addresses, use the tilde ("~") character at the beginning of the address, according to the next examples:

- **192.168.0.24**: Accepts only connections from IPv4 address 192.168.0.24
- **192.168.0.41-50**: Accepts connections from IPv4 addresses in the interval between 192.168.0.41 and 192.168.0.50
- **192.168.0.***: Accepts connections from IPv4 addresses in the interval between 192.168.0.0 and 192.168.0.255
- **fe80:3bf:877:::* (expands to fe80:03bf:0877:0000:0000:0000:0000:0000:*)**: Accepts connections from IPv6 addresses in the interval between fe80:03bf:0877:0000:0000:0000:0000:0000 and fe80:03bf:0877:0000:0000:0000:ffff:ffff
- **192.168.0.10, 192.168.0.15, 192.168.0.20**: Accepts connections from IPv4 addresses 192.168.0.10, 192.168.0.15, and 192.168.0.20
- **~192.168.0.95, 192.168.0.***: Accepts connections from IPv4 addresses in the interval between 192.168.0.0 and 192.168.0.255, except the IPv4 address 192.168.0.95

When a Driver receives a connection attempt, the list of filters is scanned sequentially from left to right, searching for a specific authorization or block for the IP address where the connection comes from. If no element on the list corresponds to the IP address, the authorization or block are dictated by the last element of that list:

- If the last element on the list is an authorization, such as "192.168.0.24", then all IP addresses not found on the list are blocked
- If the last element on the list is a block, such as "~192.168.0.24", then all IP addresses not found on the list are authorized

If an IP address appears on more than one filter on the list, the leftmost filter has precedence. For example, in case of "~192.168.0.95, 192.168.0.*", the IP address 192.168.0.95 fits both rules, but the rule that wins is the leftmost one, "~192.168.0.95", and therefore this IP address is blocked.

When **IOKit** blocks a connection, it logs a message "Blocked incoming socket connection from {IP}!".

In case of UDP connections in broadcast listening mode, in which a Driver can receive packets from different IP addresses, blocks or permissions are performed at each packet received. If a packet is received from a blocked IP address, it logs a message "Blocked incoming packet from {IP} (discarding {N} bytes)!".

IO.Ethernet.ListenIP

A IP address of the local network interface that a Driver uses to establish and accept connections. Leave this property empty to establish and accepts connections using any local network interface.

IO.Ethernet.ListenPort

9 Number of the IP port used by a Driver to listen to connections.

IO.Ethernet.MainIP

A IP address of a remote device. Users can use a numerical address, as well as a device's host name, such as "192.168.0.7" or "SERVER2".

IO.Ethernet.MainLocalPort

9 Local port number to use when connecting to the main IP address of a remote device. This value is only used if the **IO.Ethernet.MainLocalPortEnable** property is equal to True.

IO.Ethernet.MainLocalPortEnable

Configure to True to force the use of a specific local port when connecting to the main IP address of a remote device or configure to False to use any available local port.

IO.Ethernet.MainPort

9 Number of the IP port of a remote device, used with the **IO.Ethernet.MainIP** property.

IO.Ethernet.PingEnable

Configure to True to enable sending a **ping** command to the IP address of a remote device, before trying to connect to the socket. This socket's connection time-out cannot be controlled, therefore sending a **ping** command before connecting is a fast way to detect if the connection is going to fail. Configure to False to disable a **ping** command.

IO.Ethernet.PingTimeoutMs

9 Delay time to wait for a response from a **ping** command, in milliseconds.

IO.Ethernet.PingTries

9 Maximum number of attempts of a **ping** command. Minimum value is 1 (one), including the first **ping** command.

IO.Ethernet.ShareListenPort

Configure to True to share a listening port with other Drivers and processes or False to open a listening port in exclusive mode. To successfully share a listening port, all Drivers and processes that use that port must open it in shared mode. When a listening port is shared, each incoming connection is distributed to one of the processes listening. This way, if a Slave Driver only supports one connection at a time, users can use several instances of this Driver listening on the same port, therefore simulating a Driver with support for multiple connections.

IO.Ethernet.SupressEcho

Configure to True to eliminate echoes in communication. An echo is the unwanted reception of an exact copy of all data packets a Driver sent to a device.

IO.Ethernet.Transport

A Defines a transport protocol. Possible values are **T or TCP**: Uses the TCP/IP protocol or **U or UDP**: Uses the UDP/IP protocol.

IO.Ethernet.UseIPv6

Configure to True to use IPv6 addresses on all Ethernet connections or configure to False to use IPv4 addresses (default).

Modem Interface Configuration

This section contains information about the configuration of **I/O Tags** and **Properties** of a **Modem** (TAPI) Interface.

I/O Tags

Tags of a Modem Interface (N2/B2 = 3)

The Tags described next allow controlling and diagnosing a **Modem** (TAPI) Interface at run time.

IMPORTANT

These Tags are available **ONLY** while a Driver is in **Online** mode.

IO.TAPI.ConnectionBaudRate

Type of Tag	I/O Tag
Type of Access	Read-Only
N1 Parameter	-1 (minus one)
N2 Parameter	0 (zero)
N3 Parameter	3 (three)
N4 Parameter	5 (five)
String Configuration	IO.TAPI.ConnectionBaudRate

Indicates a baud rate value for the current connection. If a modem is not connected, returns the value 0 (zero).

IO.TAPI.Dial

Type of Tag	I/O Tag
Type of Access	Write-Only
N1 Parameter	-1 (minus one)
N2 Parameter	0 (zero)
N3 Parameter	3 (three)
N4 Parameter	1 (one)
String Configuration	IO.TAPI.Dial

Write any value to this Tag to force a **Modem** Interface to start a call. This is an asynchronous command, only starting the call process. Users can monitor the **IO.TAPI.IsModemConnected** Tag to detect when a call is established.

IO.TAPI.HangUp

Type of Tag	I/O Tag
Type of Access	Write-Only
N1 Parameter	-1 (minus one)
N2 Parameter	0 (zero)
N3 Parameter	3 (three)
N4 Parameter	4 (four)
String Configuration	IO.TAPI.HangUp

Any value written to this Tag hangs the current call up.

NOTE

Use this command only when managing the physical layer manually or when explicitly trying to force a Driver to restart the communication. If the physical layer is configured for automatic reconnection, a Driver immediately tries to reestablish the connection.

IO.TAPI.IsModemConnected

Type of Tag	I/O Tag
Type of Access	Read-Only
N1 Parameter	-1 (minus one)
N2 Parameter	0 (zero)
N3 Parameter	3 (three)
N4 Parameter	3 (three)
String Configuration	IO.TAPI.IsModemConnected

This Tag indicates the status of a modem connection. Possible values are **0**: The modem is not connected, but it may be performing or receiving an external call or **1**: The modem is connected and a Driver completed or received an external call successfully. While it is in this status, the physical layer can send or receive data.

IO.TAPI.IsModemConnecting

Type of Tag	I/O Tag
Type of Access	Read-Only
N1 Parameter	-1 (minus one)
N2 Parameter	0 (zero)
N3 Parameter	3 (three)
N4 Parameter	6 (six)
String Configuration	IO.TAPI.IsModemConnecting

This Tag indicates the status of a modem connection, with more details than the **IO.TAPI.IsModemConnected** Tag. Possible values are **0**: Modem is not connected, **1**: Modem is connecting, that is, performing or receiving an external call, **2**: Modem is connected. While in this status, the physical layer can send or receive data, or **3**: Modem is disconnecting the current call.

IO.TAPI.ModemStatus

Type of Tag	I/O Tag
Type of Access	Read-Only
N1 Parameter	-1 (minus one)
N2 Parameter	0 (zero)
N3 Parameter	3 (three)
N4 Parameter	2 (two)
String Configuration	IO.TAPI.ModemStatus

Returns a **String** with the current status of a modem. Possible values are the following:

- **"No status!"**: The **Modem** Interface was not open yet or was already closed
- **"Modem initialized OK!"**: The **Modem** Interface was initialized successfully
- **"Modem error at initialization!"**: A Driver could not initialize modem's line. Check that Driver's log file for more details
- **"Modem error at dial!"**: A Driver could not start or accept a call
- **"Connecting..."**: A Driver started a call successfully, and is currently processing that call
- **"Ringing..."**: Indicates that the modem is receiving an external call, but it did not accepted it yet
- **"Connected!"**: A Driver connected successfully, that is, completed or accepted an external call
- **"Disconnecting..."**: A Driver is turning the current call off
- **"Disconnected OK!"**: A Driver turned the current call off
- **"Error: no dial tone!"**: A Driver aborted a call because the available line signal was not detected
- **"Error: busy!"**: A Driver aborted a call because the line was busy
- **"Error: no answer!"**: A Driver aborted a call because no answer was received from the other modem
- **"Error: unknown!"**: Current call was aborted because of an unknown error

IO.TAPI.PhoneNumber

Type of Tag	I/O Tag
Type of Access	Reading or Writing
N1 Parameter	-1 (minus one)
N2 Parameter	0 (zero)
N3 Parameter	3 (three)
N4 Parameter	0 (zero)
String Configuration	IO.TAPI.PhoneNumber

This Tag is a **String** that reads or changes the telephone number used by the **IO.TAPI.Dial** Tag. When changing this Tag, the new value is used only on the next **Dial** command.

Properties

These properties control the configuration of a **Modem** (TAPI) Interface.

IO.TAPI.AcceptIncoming

9 Configure to False if a modem cannot accept external calls, that is, if a Driver behaves as a master, and configure to True to enable receiving calls, that is, if a Driver behaves as a slave.

IO.TAPI.ModemID

9 This is the identification number of a modem. This ID is created by Windows and used internally to identify a modem on a list of devices installed on a computer. This ID may not remain valid if a modem is reinstalled or an application is executed on another computer.

NOTE

It is advisable to configure this property as 0 (zero), indicating that a Driver must use the first available modem.

IO.TAPI.PhoneNumber

A A telephone number used by **Dial** commands, such as "0w01234566", in which the "w" character forces a modem to wait for a call sign.

RAS Interface Configuration

This section contains information about the configuration of **I/O Tags** and **Properties** of a **RAS** Interface.

I/O Tags

Tags of a RAS Interface (N2/B2 = 5)

Currently, there are no Tags defined specifically to manage a **RAS** Interface at run time.

Properties

These properties control the configuration of a **RAS** Interface.

NOTE

A **RAS** Interface uses the **Ethernet** Interface, which therefore must be also configured.

IO.RAS.ATCommand

A An **AT** command to send through a socket to force a RAS device to perform a call using the current RAS channel, such as "ATDT6265545".

IO.RAS.CommandTimeoutSec

9 Time to wait for a **CONNECT** message in response to an **AT** command, in seconds.

Serial Interface Configuration

This section contains information about the configuration of **I/O Tags** and **Properties** of a **Serial** Interface.

I/O Tags

Tags of a Serial Interface (N2/B2 = 2)

Currently, there are no Tags defined specifically to manage a **Serial** Interface at run time.

Properties

These properties control the configuration of a **Serial** Interface.

IO.Serial.Baudrate

9 Specifies a baud rate of a serial port, such as 9600.

IO.Serial.CTSTimeoutMs

9 Time to wait for a **CTS** signal, in milliseconds. After turning the **RTS** signal on, a timer is started to wait for a **CTS** signal. If this timer expires, a Driver aborts sending bytes through the serial port. Available only when the **IO.Serial.RTS** property is configured with the value **Toggle** and the **IO.Serial.WaitCTS** property is configured to True.

IO.Serial.DataBits

9 Specifies the number of data bits to configure a serial port. Possible values are **5**: Five data bits, **6**: Six data bits, **7**: Seven data bits, or **8**: Eight data bits.

IO.Serial.DelayAfterMs

9 Number of milliseconds to delay after the last byte is sent through a serial port, but before turning the **RTS** signal off. Available only when the **IO.Serial.RTS** property is configured with the value **Toggle** and the **IO.Serial.WaitCTS** property is configured to False.

IO.Serial.DelayBeforeMs

9 Number of milliseconds to delay after turning the **RTS** signal on, but before data is sent. Available only when the **IO.Serial.RTS** property is configured with the value **Toggle** and the **IO.Serial.WaitCTS** property is configured to False.

IO.Serial.DTR

A Indicates how a Driver deals with the **DTR** signal. Possible values are **OFF**: **DTR** signal is always turned off or **ON**: **DTR** signal is always turned on.

IO.Serial.InterbyteDelayUs

9 Delay time, in milliseconds (1/1000000 of a second), for each two bytes sent through a **Serial** Interface.

IO.Serial.InterframeDelayMs

9 Delay time, in milliseconds, before sending a packet after the last packet sent or received.

IO.Serial.Parity

A Specifies a parity for the configuration of a serial port. Possible values are **E or Even**: Even parity, **N or None**: No parity, **O or Odd**: Odd parity, **M or Mark**: Mark parity, or **S or Space**: Space parity.

IO.Serial.Port

9 Number of the local serial port. Possible values are **1**: Uses the COM1 port, **2**: Uses the COM2 port, **3**: Uses the COM3 port, or **n**: Uses the COMn port.

IO.Serial.RTS

A Indicates how a Driver deals with the **RTS** signal. Possible values are **OFF**: **RTS** signal always off, **ON**: **RTS** signal always on, or **Toggle**: Turns the **RTS** signal on when transmitting data and turns the **RTS** signal off when not transmitting data.

IO.Serial.StopBits

9 Specifies the number of stop bits for the configuration of a serial port. Possible values are **1**: One stop bit, **2**: One and a half stop bit, or **3**: Two stop bits.

IO.Serial.SuppressEcho

9 Use a value different from 0 (zero) to enable suppressing the echo or 0 (zero) to disable it.

IO.Serial.WaitCTS

▣ Configure to True to force a Driver to wait for the **CTS** signal before sending bytes when the **RTS** signal is turned on. Available only when the **IO.Serial.RTS** property is configured with the value **Toggle**.

Driver Revision_History

VERSION	DATE	AUTHOR	COMMENTS
2.0.1	11/07/2025	M. Ludwig	<ul style="list-style-type: none"> Driver updated to IOKit library version 3.0 and Visual Studio 2022 (<i>Case 38692</i>).
1.1.1	07/25/2008	C. Mello	<ul style="list-style-type: none"> Preventive adjustments for collecting stacked events (<i>Case 9722</i>).
1.0.1	05/26/2008	C. Mello	<ul style="list-style-type: none"> Initial version of this Driver.

Headquarters

**Rua Mostardeiro, 322/Cj. 902, 1001 e
1002**

90510-002 — Porto Alegre — RS

Phone: (+55 51) 3346-4699

Fax: (+55 51) 3222-6226

E-mail: elipse-rs@elipse.com.br

Branch in Taiwan

9F., No.12, Beiping 2nd St., Sanmin Dist.

807 — Kaohsiung City — Taiwan

Phone: (+886 7) 323-8468

Fax: (+886 7) 323-9656

E-mail: evan@elipse.com.br

Check our website for information about a representative in your country.

www.elipse.com.br

kb.elipse.com.br

forum.elipse.com.br

www.youtube.com/elipsesoftware

elipse@elipse.com.br



Gartner, Cool Vendors in Brazil 2014, April 2014.

Gartner does not endorse any vendor, product or service depicted in its research publications, and does not advise technology users to select only those vendors with the highest ratings. Gartner research publications consist of the opinions of Gartner's research organization and should not be construed as statements of fact. Gartner disclaims all warranties, expressed or implied, with respect to this research, including any warranties of merchantability of fitness for a particular purpose.

Microsoft Partner
Gold Independent Software Vendor (ISV)