

Elster-Instromet Instromet999 Driver

| | |
|----------------------------|------------------------------------|
| File Name | Instromet999.dll |
| Manufacturer | Elster-Instromet B.V. |
| Devices | Volume corrector model 999 |
| Protocol | Proprietary protocol for model 999 |
| Version | 2.0.1 |
| Last Update | 01/26/2026 |
| Platform | Win32 |
| Dependencies | IOKit version 1.15 or later |
| Superblock Readings | No |
| Level | 0 |

Introduction

The Elster-Instromet Instromet999 Driver establishes communication between **Eclipse Software** applications and model 999 volume corrector by Elster-Instromet B.V. For more information about the configuration of **IOKit** library, please check topic **Documentation of I/O Interfaces**.

Driver Configuration

The **[P]** configuration parameters can be ignored and left in 0 (zero). This Driver can be configured on the configuration window of an **Eclipse E3**, **Eclipse Power**, or **Eclipse Water** application and, when added to an application, it is loaded with the default configuration for extra parameters for serial port, that is, speed of 9600 bps, 8 (eight) data bits, 1 (one) stop bit, and no parity check. These settings are already in accordance with the definitions of model 999 protocol, and normally they do not need to be changed.

Possibly the address of the serial port can be changed to the address to which users must establish communication, that is, COM2, COM3, and so on. The time-out is already defined as 1000 ms, but this configuration is rather arbitrary relative to requirements of an application.

A device can also be configured with another transmission speed. If that speed is configured below 9600 bps without any special reason, it is recommended to change that configuration on the device to match the speed configured in this Driver.

For other physical layers, the configuration of extra parameters must be carefully observed to meet communication requirements.

Tag Reference

This section contains information about the configuration of **[B]** parameters of each Block Tag of this Driver. Each Block Tag coordinates a full reading of a memory table from a volume corrector.

Information about a Volume Corrector

Read-Only

| | |
|-----------|---|
| B1 | Identifier stored on a device's memory |
| B2 | 0 (zero), which corresponds to table 0 (zero) |
| B3 | 0 (zero) |
| B4 | 0 (zero) |

The Elements of this Block Tag are described on the next table.

Elements of Block Tag Information about a Volume Corrector

| ELEMENT | DESCRIPTION |
|---------|------------------------------|
| 1 | Version number of software |
| 2 | Communication identifier |
| 3 | Details about a manufacturer |
| 4 | Reference number for users |
| 5 | Seconds |
| 6 | Minutes |
| 7 | Hours |
| 8 | Weekday |
| 9 | Day |
| 10 | Month |
| 11 | Year |

Data from Gas Composition

Read-Only

| | |
|-----------|---|
| B1 | Identifier stored on a device's memory |
| B2 | 2 (two), which corresponds to table 2 (two) |
| B3 | 0 (zero) |
| B4 | 0 (zero) |

The Elements of this Block Tag are described on the next table.

Elements of Block Tag Data from Gas Composition

| ELEMENT | DESCRIPTION |
|---------|---|
| 1 | Type of Z equation. The value 0 (zero) indicates pre-configured Z and Zn. The value n indicates Z and Zn defined by calculation. Possible values range between 0 (zero) and 255 |

| ELEMENT | DESCRIPTION |
|---------|--|
| 2 | This value must be defined when the value of the type of Z equation is equal to 0 (zero). Possible values range between 0.9 and 1.0 |
| 3 | The value 0 (zero) indicates pre-configured Z and Zn. The value n indicates Z and Zn defined by calculation. Possible values range between 0.9 and 1.0 |
| 4 | Relative density |
| 5 | Normal density |
| 6 | Air density |
| 7 | Value of heating |
| 8 | CO ₂ |
| 9 | H ₂ |
| 10 | N ₂ |

Configuration of Temperature or Pressure

Read-Only

| | |
|----|---|
| B1 | Identifier stored on a device's memory |
| B2 | 3 (three), which corresponds to table 3 (three) |
| B3 | 0 (zero) |
| B4 | 0 (zero) |

The Elements of this Block Tag are described on the next table.

Elements of Block Tag Configuration of Temperature or Pressure

| ELEMENT | DESCRIPTION |
|---------|---|
| 1 | Pressure control. Bits in 1 (one) define whether high, low, or standard values must be used. Possible values for bits are 0 : Use alarm's high value, 1 : Use alarm's low value, 2 : Use default value when an alarm is high or low, and 3 : Use default value when exceeding pressure over-range |
| 2 | Pressure over-range |
| 3 | Atmospheric pressure |
| 4 | Sensor's pressure scale |
| 5 | Low error setpoint |
| 6 | High alarm setpoint. Configured with value 1E+38 when not used |
| 7 | Low alarm setpoint. Configured with value 1E+38 when not used |

| ELEMENT | DESCRIPTION |
|---------|--|
| 8 | Default pressure used for alarms and errors. Configured with value 1E+38 when not used |
| 9 | Temperature control. Bits in 1 (one) define whether high, low, or default values must be used. Possible values for bits are 0 : Use alarm's high value, 1 : Use alarm's low value, 2 : Use default value when an alarm is high or low, and 3 : Use default value when exceeding low or high value of temperature error |
| 10 | High temperature error setpoint |
| 11 | Low temperature error setpoint |
| 12 | High alarm setpoint. Configured with value 1E+38 when not used |
| 13 | Low alarm setpoint. Configured with value 1E+38 when not used |
| 14 | Default temperature used for alarms and errors. Configured with value 1E+38 when not used |

Configuration of Pulse Inputs

Read-Only

| | |
|----|---|
| B1 | Identifier stored on a device's memory |
| B2 | 4 (four), which corresponds to table 4 (four) |
| B3 | 0 (zero) |
| B4 | 0 (zero) |

The Elements of this Block Tag are described on the next table.

Elements of Block Tag Configuration of Pulse Inputs

| ELEMENT | DESCRIPTION |
|---------|---|
| 1 | Divider of input pulse |
| 2 | Scaling of input pulse |
| 3 | Ratio between divider of input pulse and scaling of input pulse |

Masks for Errors or Alarms

Read-Only

| | |
|-----------|---|
| B1 | Identifier stored on a device's memory |
| B2 | 7 (seven), which corresponds to table 7 (seven) |
| B3 | 0 (zero) |
| B4 | 0 (zero) |

The Elements of this Block Tag are described on the next table.

Elements of Block Tag Masks for Errors or Alarms

| ELEMENT | DESCRIPTION |
|----------|---|
| 1 | Mask for error counter. Please check the next table for information about the bits of this Element |
| 2 | Mask for latched error counter. Please check the next table for information about the bits of this Element |
| 3 | Mask for output error. Please check the next table for information about the bits of this Element |
| 4 | Mask for latched output error. Please check the next table for information about the bits of this Element |
| 5 | Mask for display error. Please check the next table for information about the bits of this Element |
| 6 | Mask for latched display error. Please check the next table for information about the bits of this Element |
| 7 | Control. Bit 0 (zero) indicates excluding from counting with normal <i>Vl</i> counter while in error condition and bit 1 (one) indicates excluding from counting with <i>Vn</i> counter while in error condition |
| 8 | Reset control. Bits with value equal to 1 (one) force a reset of the selected item. Bit 3 (three) indicates a latched output reset, bit 4 (four) indicates a latched display reset, and bit 5 (five) indicates a latched status reset |

Meaning of bits from Elements from 1 (one) to 6 (six)

| BIT | MEANING |
|----------|---------------------------|
| 0 | High pressure alarm |
| 1 | Low pressure alarm |
| 2 | Over-range pressure error |
| 3 | 0 (zero) pressure error |
| 4 | High temperature alarm |
| 5 | Low temperature alarm |
| 6 | Maximum temperature error |
| 7 | Minimum temperature error |

| BIT | MEANING |
|-----|----------------------------|
| 8 | Low battery |
| 9 | Input alarm |
| 10 | O/P1 pulse alarm |
| 11 | O/P2 pulse alarm |
| 12 | Incomplete O/P pulse |
| 13 | Not used |
| 14 | Not used |
| 15 | Default pressure in use |
| 16 | Default temperature in use |

Counters

Read-Only

| | |
|----|---|
| B1 | Identifier stored on a device's memory |
| B2 | 8 (eight), which corresponds to table 8 (eight) |
| B3 | 0 (zero) |
| B4 | 0 (zero) |

The Elements of this Block Tag are described on the next table.

Elements of Block Tag Counters

| ELEMENT | DESCRIPTION |
|---------|---|
| 1 | Current counter uncorrected (<i>Vl</i>) |
| 2 | Current counter corrected (remaining <i>Vl</i>) |
| 3 | Current counter uncorrected (<i>Vn</i>) |
| 4 | Current counter corrected (remaining <i>Vn</i>) |
| 5 | Current counter uncorrected (<i>Vel</i>) |
| 6 | Current counter corrected (remaining <i>Vel</i>) |
| 7 | Current counter uncorrected (<i>Ven</i>) |
| 8 | Current counter corrected (remaining <i>Ven</i>) |
| 9 | Current day counter uncorrected (<i>Vl</i>) |
| 10 | Current day counter corrected (remaining <i>Vl</i>) |
| 11 | Current day counter uncorrected (<i>Vn</i>) |
| 12 | Current day counter corrected (remaining <i>Vn</i>) |
| 13 | Current day counter uncorrected (<i>Vel</i>) |
| 14 | Current day counter corrected (remaining <i>Vel</i>) |

| ELEMENT | DESCRIPTION |
|---------|--|
| 15 | Current day counter uncorrected (<i>Vn</i>) |
| 16 | Current day counter corrected (remaining <i>Vn</i>) |
| 17 | Previous day counter uncorrected (<i>Vl</i>) |
| 18 | Previous day counter corrected (remaining <i>Vl</i>) |
| 19 | Previous day counter uncorrected (<i>Vn</i>) |
| 20 | Previous day counter corrected (remaining <i>Vn</i>) |
| 21 | Previous day counter uncorrected (<i>Vel</i>) |
| 22 | Previous day counter corrected (remaining <i>Vel</i>) |
| 23 | Previous day counter uncorrected (<i>Ven</i>) |
| 24 | Previous day counter corrected (remaining <i>Ven</i>) |
| 25 | Contract time for previous day counter uncorrected (<i>Vl</i>) |
| 26 | Contract time for previous day counter corrected (remaining <i>Vl</i>) |
| 27 | Contract time for previous day counter uncorrected (<i>Vn</i>) |
| 28 | Contract time for previous day counter corrected (remaining <i>Vn</i>) |
| 29 | Contract time for previous day counter uncorrected (<i>Vel</i>) |
| 30 | Contract time for previous day counter corrected (remaining <i>Vel</i>) |
| 31 | Contract time for previous day counter uncorrected (<i>Ven</i>) |
| 32 | Contract time for previous day counter corrected (remaining <i>Ven</i>) |
| 33 | Current month counter uncorrected (<i>Vl</i>) |
| 34 | Current month counter corrected (remaining <i>Vl</i>) |
| 35 | Current month counter uncorrected (<i>Vn</i>) |
| 36 | Current month counter corrected (remaining <i>Vn</i>) |
| 37 | Current month counter uncorrected (<i>Vel</i>) |
| 38 | Current month counter corrected (remaining <i>Vel</i>) |
| 39 | Current month counter uncorrected (<i>Ven</i>) |
| 40 | Current month counter corrected (remaining <i>Ven</i>) |
| 41 | Last month counter uncorrected (<i>Vl</i>) |
| 42 | Last month counter corrected (remaining <i>Vl</i>) |
| 43 | Last month counter uncorrected (<i>Vn</i>) |
| 44 | Last month counter corrected (remaining <i>Vn</i>) |
| 45 | Last month counter uncorrected (<i>Vel</i>) |
| 46 | Last month counter corrected (remaining <i>Vel</i>) |
| 47 | Last month counter uncorrected (<i>Ven</i>) |
| 48 | Last month counter corrected (remaining <i>Ven</i>) |

| ELEMENT | DESCRIPTION |
|---------|--|
| 49 | Contract time for previous month counter uncorrected (<i>Vl</i>) |
| 50 | Contract time for previous month counter corrected (remaining <i>Vl</i>) |
| 51 | Contract time for previous month counter uncorrected (<i>Vn</i>) |
| 52 | Contract time for previous month counter corrected (remaining <i>Vn</i>) |
| 53 | Contract time for previous month counter uncorrected (<i>Vel</i>) |
| 54 | Contract time for previous month counter corrected (remaining <i>Vel</i>) |
| 55 | Contract time for previous month counter uncorrected (<i>Ven</i>) |
| 56 | Contract time for previous month counter corrected (remaining <i>Ven</i>) |

Log Configuration

Read-Only

| | |
|-----------|--|
| B1 | Identifier stored on a device's memory |
| B2 | 10, which corresponds to table 10 |
| B3 | 0 (zero) |
| B4 | 0 (zero) |

The single Element of this Block Tag contains the contract time, which defines the time from when the peak day of this contract is calculated. This value is also used to determine when logs are required.

NOTE

This Tag can also be defined as a PLC Tag.

Active Data

Read-Only

| | |
|-----------|--|
| B1 | Identifier stored on a device's memory |
| B2 | 23, which corresponds to table 23 |
| B3 | 0 (zero) |
| B4 | 0 (zero) |

The Elements of this Block Tag are described on the next table.

Elements of Block Tag Active Data

| ELEMENT | DESCRIPTION |
|---------|---|
| 1 | Pressure |
| 2 | Temperature |
| 3 | Current value of Zb |
| 4 | Current value of Z |
| 5 | Current value of CF |
| 6 | Uncorrected flow rate, or ql |
| 7 | Corrected flow rate, or qn |
| 8 | Current status. Please check the next table for information about the bits of this Element |
| 9 | Latched status. Please check the next table for information about the bits of this Element |
| 10 | Unlatched counter status. Please check the next table for information about the bits of this Element |
| 11 | Unlatched output status. Please check the next table for information about the bits of this Element |
| 12 | Unlatched display status. Please check the next table for information about the bits of this Element |
| 13 | Latched display status. Please check the next table for information about the bits of this Element |
| 14 | Current average for pressure. This value is equal to 0 (zero) if the average calculation is turned off and this value is redefined at the end of this calculation's duration |
| 15 | Last average for pressure. At the end of the average's calculation, the current average is copied to this register |
| 16 | Current average for temperature. This value is equal to 0 (zero) if the average calculation is turned off and this value is redefined at the end of this calculation's duration |
| 17 | Last average for temperature. At the end of the average's calculation, the current average is copied to this register |
| 18 | $K (Z \div Zb)$ |

Meaning of bits from Elements from 8 (eight) to 13

| BIT | MEANING |
|-----|---------------------------|
| 0 | High pressure alarm |
| 1 | Low pressure alarm |
| 2 | Over-range pressure error |

| BIT | MEANING |
|-----|----------------------------|
| 3 | Zero-pressure error |
| 4 | High temperature alarm |
| 5 | Low temperature alarm |
| 6 | Maximum temperature error |
| 7 | Minimum temperature error |
| 8 | Low battery |
| 9 | Input alarm |
| 10 | O/P1 pulse alarm |
| 11 | O/P2 pulse alarm |
| 12 | Incomplete O/P pulse |
| 13 | Not used |
| 14 | Not used |
| 15 | Default pressure in use |
| 16 | Default temperature in use |

Hour and Day Peaks

Read-Only

| | |
|----|--|
| B1 | Identifier stored on a device's memory |
| B2 | 24, which corresponds to table 24 |
| B3 | 0 (zero) |
| B4 | 0 (zero) |

The Elements of this Block Tag are described on the next table.

Elements of Block Tag Hour and Day Peaks

| ELEMENT | DESCRIPTION |
|---------|-------------------------------|
| 1 | Day of maximum peak |
| 2 | Day of remaining maximum peak |
| 3 | Seconds of peak day |
| 4 | Minutes of peak day |
| 5 | Hours of peak day |
| 6 | Weekday of peak day |
| 7 | Day of peak day |
| 8 | Month of peak day |
| 9 | Year of peak day |

| ELEMENT | DESCRIPTION |
|---------|---|
| 10 | Hour of maximum peak |
| 11 | Seconds of peak hour |
| 12 | Minutes of peak hour |
| 13 | Hours of peak hour |
| 14 | Weekday of peak hour |
| 15 | Day of peak hour |
| 16 | Month of peak hour |
| 17 | Year of peak hour |
| 18 | Vn counter in the last 10-minute interval |
| 19 | Remaining Vn counter in the last 10-minute interval |

Documentation of I/O Interfaces

This section contains the documentation of I/O Interfaces referring to **Instromet999** Driver.

Configuration of a Driver

I/O Interface configuration is performed on a Driver's configuration dialog box. To access the configuration of this dialog box in **Eclipse E3** in version 1.0, follow these steps:

1. Right-click a Driver object (IODriver).
2. Select the **Properties** item on the contextual menu.
3. Select the **Driver** tab.
4. Click **Other parameters**.

In **Eclipse E3** version 2.0 or later, click **Configure driver**  on a Driver's toolbar. In **Eclipse SCADA**, follow these steps:

1. Open the Organizer.
2. Select a Driver on Organizer's tree.
3. Click **Extras** on the **Driver** tab.

Currently, an I/O Interface allows opening only one connection for each Driver. This means that, if users want to access two serial ports, they must add two Drivers to an application and then configure each one of these Drivers for each serial port.

Configuration Dialog Box

The dialog box of I/O Interfaces allows configuring the I/O connection used by a Driver. This dialog box contains the **Setup**, **Serial**, **Ethernet**, **Modem**, and **RAS** tabs, described on the next topics. If a Driver does not implement a specific I/O connection, its corresponding tab is not available for configuration. Some Drivers may contain additional tabs, specific for that Driver, on the configuration dialog box.

Setup Tab

The **Setup** tab contains general configurations of a Driver. This tab is divided into the following groups:

- **General configurations:** Configurations of a Driver's physical layer, time-out, and initialization mode
- **Connection management:** Configurations on how the I/O Interface keeps a connection and which recovery policy is used on failure
- **Logging options:** Controls the generation of log files

The screenshot shows the 'Setup' tab configuration window. It is divided into several sections:

- Physical Layer:** A dropdown menu set to 'Ethernet'. To the right is a checkbox for 'Start driver OFFLINE' which is unchecked.
- Timeout:** A text input field containing '1000' followed by 'ms'.
- Communication check time:** A text input field containing '5000' followed by 'ms'.
- Connection management:** A sub-section containing:
 - A dropdown menu for 'Mode' set to 'Automatic (managed by the driver)'.
 - A checked checkbox for 'Retry failed connection every' followed by a text input '20' and 'seconds'.
 - An unchecked checkbox for 'Give up after' followed by a text input '1' and 'failed retries'.
 - An unchecked checkbox for 'Disconnect if non-responsive for' followed by a text input '0' and 'seconds'.
- Logging Options:** A sub-section containing:
 - An unchecked checkbox for 'Log to File:' followed by a text input 'C:\eeLogs\MicrolokII_%DATE%.log'.
 - A text input '0' followed by '(0 is unlimited)' for 'File size limit (MB):'.

Setup tab

General options on the Setup tab

| OPTION | DESCRIPTION |
|---------------------------------|---|
| Physical Layer | Select the physical layer on a list. Available options are Serial , Ethernet , Modem , and RAS . The selected interface must be configured on its specific tab |
| Timeout | Configure a time-out, in milliseconds, for the physical layer. This is the amount of time an I/O interface waits to receive any byte from the reception's buffer |
| Communication check time | Set the time, in milliseconds, to define the interval at which communication is considered to be in an inactive state. As long as an I/O Driver receives valid data, its communication state is considered active. However, if during operation an I/O Driver does not receive valid data inside this period of time, the state is considered inactive. The communication state is shown in the IO.CommunicationStatus Tag |

| OPTION | DESCRIPTION |
|-----------------------------|--|
| Start driver OFFLINE | Select this option so that a Driver starts in Offline mode or stopped. This means that the I/O interface is not created until this Driver is configured to Online mode by using a Tag in an application. This mode enables a dynamic configuration of an I/O interface at run time |

Options on the Connection management group

| OPTION | DESCRIPTION |
|---|---|
| Mode | Selects a management mode of a connection. Selecting the Automatic option allows a Driver to manage the connection automatically, as specified in the next options. Selecting the Manual option allows an application to fully manage a connection |
| Retry failed connection every ... seconds | Select this option to enable a Driver's connection retry in a certain interval, in seconds. If the Give up after failed retries option is not selected, this Driver keeps retrying until a connection is performed, or until the application is stopped |
| Give up after ... failed retries | Enable this option to define a maximum number of connection retries. When the specified number of consecutive connection retries is reached, a Driver goes to the Offline mode, assuming that a hardware problem was detected. If a Driver establishes a successful connection, the number of unsuccessful retries is cleared. If this new connection is lost, then the retry counter starts at zero |
| Disconnect if non-responsive for ... seconds | Enable this option to force a Driver to disconnect if no byte was received by the I/O interface during the specified time-out, in seconds. This time-out must be greater than the time-out configured in the Timeout option |

Options on the Logging Options group

| OPTION | DESCRIPTION |
|-----------------------------|---|
| Log to File | <p>Enable this option and configure the name of a file to write a log. Log files can be large, so use this option for short periods of time, only for testing and debugging purposes. If the %PROCESS% macro is used in the log file name, it is replaced by the identifier of the current process. This option is particularly useful when using several instances of the same Driver in Elipse E3, thus allowing each instance to generate a separate log file. For example, when configuring this option with value "c:\e3logs\drivers\sim_%PROCESS%.log", it generates a file named c:\e3logs\drivers\sim_00000FDA.log for process OFDAh. Users can also use the %DATE% macro in the file name. In this case a log file is generated every day, in the format aaaa_mm_dd. For example, when configuring this option with value "c:\e3logs\drivers\sim_%DATE%.log", it generates a file named c:\e3logs\drivers\sim_2005_12_31.log in 12/31/2005 and a file named c:\e3logs\drivers\sim_2006_01_01.log in 01/01/2006. Similarly, the %DATE_HOUR% macro generates one log file per hour, in the format aaaa_mm_dd_hh</p> |
| File size limit (MB) | <p>Configure the log file size limit, in megabytes. A value equal to 0 (zero) means that there is no size limit for the log file</p> |

Serial Tab

Use this tab to configure parameters for a **Serial** Interface.

Serial

Port:

Baud rate:

Data bits:

Parity:

Stop bits:

Enable 'ECHO' suppression

Handshaking

DTR control:

RTS control:

Wait for CTS before send

CTS timeout: ms

Delay before send: ms

Delay after send: ms

Inter-byte delay (microseconds): μ s

Inter-frame delay (milliseconds): ms

Serial tab

General options on the Serial tab

| OPTION | DESCRIPTION |
|---|---|
| Port | Select a serial port on the list, from COM1 to COM4 , or type the name of a serial port in the format COMn , such as "COM15". When typing the name of a serial port manually, the dialog box only accepts names of serial ports starting with the expression "COM" |
| Baud rate | Select a baud rate on the list (1200, 2400, 4800, 9600, 19200, 38400, 57600, or 115200) or type a baud rate, such as 600 |
| Data bits | Select 7 (seven) or 8 (eight) data bits on the list |
| Parity | Select a parity on the list. The available options are None, Even, Odd, Mark, or List |
| Stop bits | Select the number of stop bits on the list. The available options are 1, 1.5, or 2 stop bits |
| Enable 'ECHO' suppression | Enable this option to remove the echo received after the I/O Interface sends data via serial port. If this echo is not equal to the bytes just sent, then the I/O Interface aborts communication |
| Inter-byte delay (microseconds) | Defines a delay between each byte transmitted by the I/O Interface, in millionths of a second, that is, 1000000 is equal to a second. This option must be used with small delays of less than a millisecond |
| Inter-frame delay (milliseconds) | Defines a delay between packets sent or received by the I/O Interface, in thousandths of a second, that is, 1000 is equal to a second. This delay is applied if the I/O Interface |

| OPTION | DESCRIPTION |
|--------|--|
| | sends two consecutive packets, or between a received packet and the next sending |

The **Handshaking** group configures the usage of **RTS**, **CTS**, and **DTR** signals in the handshaking process, that is, it controls when data can be sent or received via serial line. Most of the time, configuring the **DTR control** option to **ON** and the **RTS control** option to **Toggle** works with **RS232**-type serial lines as well as with **RS485**-type serial lines.

Available options on the Handshaking group

| OPTION | DESCRIPTION |
|---------------------------------|--|
| DTR control | Select the value ON to keep the DTR signal always on while the serial port is open. Select the value OFF to turn the DTR signal off while the serial port is open. Some devices require the DTR signal always on to allow communication |
| RTS control | Select the value ON to keep the RTS signal always on while the serial port is open. Select the value OFF to turn the RTS signal off while the serial port is open. Select the value Toggle to turn the RTS signal on while sending bytes via serial port and turn it off when not sending bytes, therefore enabling the reception |
| Wait for CTS before send | Available only when the RTS control option is configured with the value Toggle . Use this option to force a Driver to check the CTS signal before sending bytes via serial port, after turning the RTS signal on. In this mode, the CTS signal is handled as a permission flag for sending |
| CTS timeout | Determines a maximum time, in milliseconds, that a Driver waits for the CTS signal after turning the RTS signal on. If the CTS signal is not turned on within this time-out, that Driver then fails the current communication and returns an error |
| Delay before send | Some serial port devices have a delay when enabling a data sending circuit after the RTS signal is turned on. Configure this option to wait a certain number of milliseconds after turning the RTS signal on and before sending the first byte. IMPORTANT : This delay must be used carefully, because it uses 100% of CPU resources while waiting. System's general performance degrades as this value increases |
| Delay after send | This is the same effect of the Delay before send option, but in this case the delay is performed after sending the last byte, before turning the RTS signal off |

Ethernet Tab

Use this tab to configure parameters of an **Ethernet** Interface. These parameters, except port configurations, must also be configured for use in the **RAS** Interface.

Ethernet

Transport: TCP/IP ▾

PING before connecting
 Timeout: 4000 ms
 Retries: 1

Listen for connections on port: 0

Share listen port with other processes

Interface: (All Interfaces) ▾

Use IPv6 Use SSL SSL Settings

Enable 'ECHO' suppression

IP Filter:

Connect to

| | | | | | |
|---------------------------------------|--|-------|--|--------------------------------------|--|
| <input type="checkbox"/> Main IP: | <input style="width: 90%;" type="text"/> | Port: | 502 | <input type="checkbox"/> Local port: | 0 |
| <input type="checkbox"/> Backup IP 1: | <input style="width: 90%;" type="text"/> | Port: | 0 | <input type="checkbox"/> Local port: | 0 |
| <input type="checkbox"/> Backup IP 2: | <input style="width: 90%;" type="text"/> | Port: | 0 | <input type="checkbox"/> Local port: | 0 |
| <input type="checkbox"/> Backup IP 3: | <input style="width: 90%;" type="text"/> | Port: | 0 | <input type="checkbox"/> Local port: | 0 |

Ethernet tab

Available options on the Ethernet tab

| OPTION | DESCRIPTION |
|---|---|
| Transport | Select the value TCP/IP for a TCP socket (<i>stream</i>) or select the value UDP/IP to use a UDP socket (<i>connectionless datagram</i>) |
| Listen for connections on port | Use this option to wait for new connections in a specific IP port, common in Slave Drivers. If this option remains unselected, a Driver connects to the address and port specified in the Connect to option |
| Share listen port with other processes | Select this option to share the listening port with other Drivers and processes |
| Interface | Select the local network interface, identified by its IP address, that a Driver uses to establish and receive connections, or select the value (All Interfaces) to allow connection in any network interface |
| Use IPv6 | Select this option to force a Driver to use addresses in IPv6 format on all Ethernet connections. Leave this option deselected to use the IPv4 format |
| Enable 'ECHO' suppression | Enable this option to remove the echo from received data. An echo is a copy of sent data, which can be returned before a reply message |
| IP Filter | List of restricted or allowed IP addresses from where a Driver accepts connections (<i>Firewall</i>). Please check the IO.Ethernet.IPFilter property for more information |
| PING before connecting | Enable this option to execute a ping command, that is, to check whether a device can be reached on a network, for a device before trying a socket connection. This is a quick way |

| OPTION | DESCRIPTION |
|--------|---|
| | <p>of determining a successful connection before trying to open a socket with a device. The time-out of a connection with a socket can be very high. The available options are:</p> <ul style="list-style-type: none"> • Timeout: Specify the number of milliseconds to wait for a reply from a ping command. Users must use a ping command to check the normal reply time, configuring this option for a value above that average. Usually this value can be configured between 1000 and 4000 milliseconds, that is, between 1 (one) and 4 (four) seconds • Retries: Number of retries of a ping command, not counting the first attempt. If all attempts fail, then the socket connection is aborted |

Available options on the Connect to group

| OPTION | DESCRIPTION |
|------------------------------|--|
| Main IP | Type the IP address of a remote device. Users can use an IP address separated by dots, as well as a URL. In case of a URL, a Driver uses the available DNS service to map that URL to an IP address, such as "192.168.0.13" or "Server1" |
| Port | Type the IP port of a remote device, between 0 (zero) and 65535 |
| Local port | Select this option to use a fixed local IP port when connecting to a remote device |
| Backup IP 1, 2, and 3 | Indicate the IP address, the IP port, and the fixed local IP port of up to 3 (three) backup addresses of a remote device |

Modem Tab

Use this tab to configure parameters of a **Modem** Interface. Some options on the **Serial** tab affect the configuration of a modem, therefore users must also configure the **Serial** Interface.

Modem

Select the modem to use:

Dial Number:

Accept incoming calls

Modem tab

The **Modem** Interface uses the TAPI modems installed on the computer.

Available options on the Modem tab

| OPTION | DESCRIPTION |
|--------------------------------|---|
| Select the modem to use | Select a modem on the list of available modems on the computer. If the value Default modem is selected, then the first available modem is used. Selecting this option is recommended specially when an application is used on another computer |
| Modem settings | Click to open the configuration window of the selected modem |
| Dial Number | Type a default number for dialing. This value can be changed at run time. Users can use the w character to represent a pause or a waiting time for a dial tone. For example, "0w33313456" dials the number 0 (zero), waits, and then dials the number "33313456" |
| Accept incoming calls | Enable this option so that a Driver answers the phone when receiving an external call. To use this option, users must configure the Connection management option on the Setup tab to the value Manual |

RAS Tab

Use this tab configure parameters of a **RAS** Interface. Users must also configure the **Ethernet** tab.


A **RAS** Interface opens a socket connection with a RAS device. A RAS device is a server of modems available through TCP/IP, waiting for socket connections on an IP port. For each connection accepted on this port, users have access to one modem.

When connecting to a RAS device, first the I/O Interface **IOKit** connects to the socket on the IP address and port configured on the **Ethernet** tab. After opening the socket, the following initialization or connection steps are performed:

1. Clears the socket, that is, removes any **TELNET** greeting message received from a RAS device.
2. Sends an **AT** dial message, in **ASCII** format, in the socket.
3. Waits for a **CONNECT** reply.
4. If the time-out expires, the connection is aborted.
5. If the **CONNECT** reply is received within the time-out, the socket is available for communication with a device, that is, the connection was established.

If step 5 (five) is successful, then the socket behaves as a normal socket, with the RAS device working as a router between a Driver and the device. Bytes sent by a Driver are received by the RAS device and sent to the destination device using a modem. Bytes received by the modem's RAS device are sent back to a Driver using the same socket.

After establishing a connection, the **RAS** interface monitors data received by a Driver. If a "NO CARRIER" **String** is found, the socket is closed. If the RAS device does not send a **NO CARRIER** signal, the **RAS** Interface cannot detect when the modem connection between the RAS device and the final I/O device fails. To recover from this failure, users are strongly advised to enable the **Disconnect if non-responsive** option on the **Setup** tab.

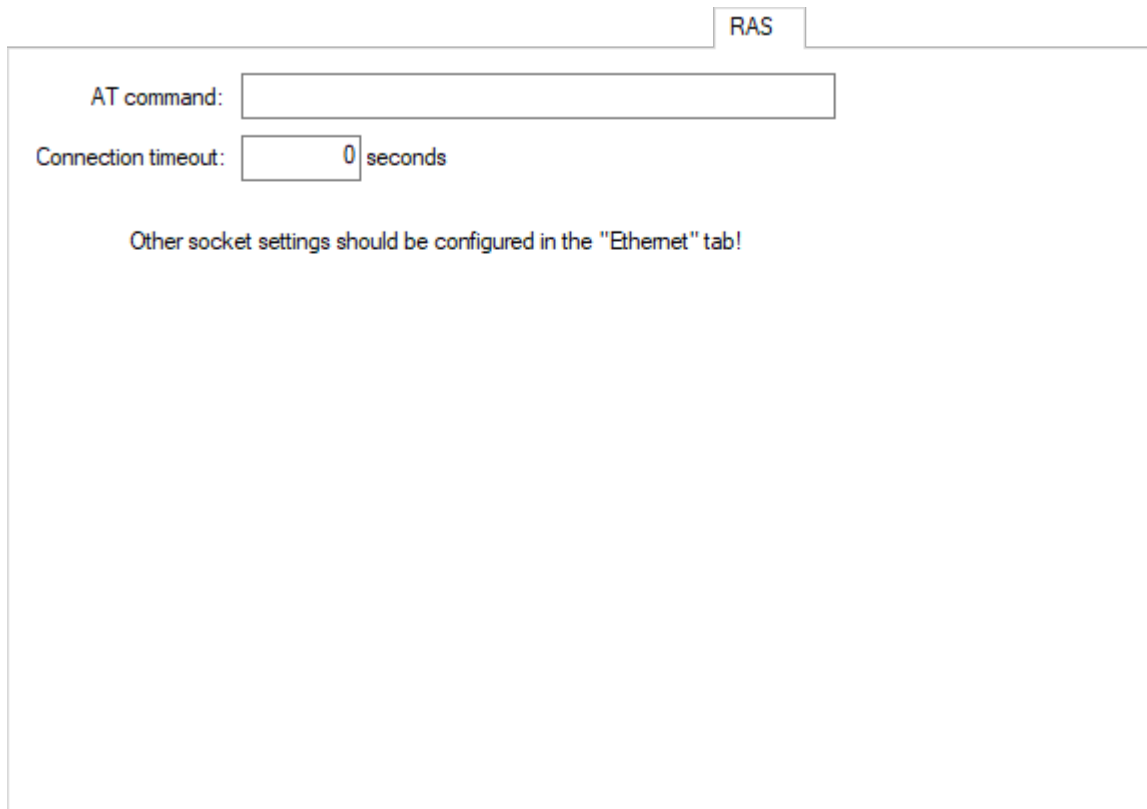

RAS tab

Available options on RAS tab

| OPTION | DESCRIPTION |
|---------------------------|--|
| AT command | A String with the full AT command used to dial to a destination device. For example, "ATDT33313456" dials by tone to number "33313456" |
| Connection timeout | Number of seconds to wait for a modem's CONNECT reply, after sending an AT command |

General Configurations

This section contains information about the configuration of general **I/O Tags** and **Properties** of I/O Interfaces.

I/O Tags

General I/O Interfaces Tags (N2/B2 = 0)

The Tags described next are provided for all supported I/O Interfaces.

IO.CommunicationStatus

| | |
|-----------------------------|------------------------|
| Type of Tag | I/O Tag |
| Type of Access | Reading |
| N1 Parameter | -1 (minus one) |
| N2 Parameter | 0 (zero) |
| N3 Parameter | 0 (zero) |
| N4 Parameter | 6 (six) |
| String Configuration | IO.CommunicationStatus |

This Tag informs the communication status of a Driver. It indicates how communication works relative to receiving valid data within a time period arbitrated in the configuration. For more information, please check topic **Setup Tab**. Possible values are **0 - Inactive communication**: The Driver did not receive valid data or stopped receiving data after n milliseconds, as configured in the properties window, or **1 - Active communication**: The Driver is receiving valid data.

IO.IOKitEvent

| | |
|---------------------------|----------------|
| Type of Tag | Block Tag |
| Type of Access | Read-Only |
| B1 Parameter | -1 (minus one) |
| B2 Parameter | 0 (zero) |
| B3 Parameter | 0 (zero) |
| B4 Parameter | 1 (one) |
| Size Property | 4 (four) |
| ParamItem Property | IO.IOKitEvent |

This Block returns Driver events generated by several sources in I/O Interfaces. The **TimeStamp** property of this Block represents the moment this event occurred. The Block Elements are the following:

- **Element 0**: Type of event. Possible values are **0**: Information, **1**: Warning, or **2**: Error
- **Element 1**: Source of an event. Possible values are **0**: Driver (specific of a Driver), **-1**: IOKit (generic events of I/O Interfaces), **-2**: **Serial** Interface, **-3**: **Modem** Interface, **-4**: **Ethernet** Interface, or **-5**: **RAS** Interface
- **Element 2**: Error number, specific for each source of event

- **Element 3:** Message of an event, a **String** specific for each event

NOTE

A Driver keeps a maximum number of 100 events internally. If additional events are reported, older events are discarded.

IO.PhysicalLayerStatus

| | |
|-----------------------------|------------------------|
| Type of Tag | I/O Tag |
| Type of Access | Read-Only |
| N1 Parameter | -1 (minus one) |
| N2 Parameter | 0 (zero) |
| N3 Parameter | 0 (zero) |
| N4 Parameter | 2 (two) |
| String Configuration | IO.PhysicalLayerStatus |

This Tag indicates the status of a physical layer. Possible values are the following:

- **0:** Physical layer stopped, that is, a Driver is in **Offline** mode, the physical layer failed when initializing, or exceeded the maximum number of reconnection attempts
- **1:** Physical layer started but not connected, that is, a Driver is in **Online** mode but the physical layer is not connected. If the **Connection management** option is configured with the value **Automatic**, the physical layer can be connecting, disconnecting, or waiting for a reconnection attempt. If the **Connection management** option is configured with the value **Manual**, then the physical layer remains in this status until forced to connect
- **2:** Physical layer connected, that is, the physical layer is ready for use. This **DOES NOT** mean a device is connected, only that the access layer is working

IO.SetConfigurationParameters

| | |
|---------------------------|-------------------------------|
| Type of Tag | Block Tag |
| Type of Access | Read-Only |
| B1 Parameter | -1 (minus one) |
| B2 Parameter | 0 (zero) |
| B3 Parameter | 0 (zero) |
| B4 Parameter | 3 (three) |
| Size Property | 2 (two) |
| ParamItem Property | IO.SetConfigurationParameters |

Use this Tag to change any property of a Driver's configuration dialog box at run time.

This Tag works only while a Driver is in **Offline** mode. To start a Driver in **Offline** mode, select the **Start driver OFFLINE** option on that Driver's configuration dialog box. Users can write to a PLC Tag or to a Block Tag containing the parameters to change. Writing individual Block Elements is not supported, the whole Block must be written at once.

In **Elipse SCADA**, users must use a Block Tag. Every parameter to configure uses two Block Elements. For example, if users want to configure 3 (three) parameters, then the size of the Block must be 6 (six, 3 × 2). The first Element is the property's name, as a **String**, and the second Element is the property's value, according to the next example.

```
// 'Block' must be a Block Tag with automatic reading,
// scan reading, and automatic writings disabled.
// Configure all parameters
Block.element001 = "IO.Type" // Parameter 1
Block.element002 = "Serial"
Block.element003 = "IO.Serial.Port" // Parameter 2
Block.element004 = 1
Block.element005 = "IO.Serial.BaudRate" // Parameter 3
Block.element006 = 19200
// Writes the whole Block
Block.Write()
```

When using **Elipse E3**, the ability to create arrays at run time allows using an I/O Tag as well as a Block Tag. Users can use the **Write** method of a Driver to send the parameters directly to that Driver, without creating a Tag, according to the next example.

```
Dim arr(6)
' Configure all array elements
arr(1) = "IO.Type"
arr(2) = "Serial"
arr(3) = "IO.Serial.Port"
arr(4) = 1
arr(5) = "IO.Serial.BaudRate"
arr(6) = 19200
' There are two methods to send parameters
' Method 1: Using an I/O Tag
tag.WriteEx arr
' Method 2: Without using a Tag
Driver.Write -1, 0, 0, 3, arr
```

A variation of the previous example uses a bidimensional array.

```
Dim arr(10)
' Configure all array elements. Notice the array was resized
' to 10 elements. Empty array elements are ignored by a Driver
arr(1) = Array("IO.Type", "Serial")
arr(2) = Array("IO.Serial.Port", 1)
arr(3) = Array("IO.Serial.BaudRate", 19200)
Driver.Write -1, 0, 0, 3, arr
```

A Driver does not validate parameter names or passed values, therefore be careful when writing parameters and values. The **Write** method fails if the configuration array is incorrectly created. Users can check the log of a Driver or use the *writeStatus* parameter of the **WriteEx** method to find out the exact cause of an error.

```
Dim arr(10), strError
arr(1) = Array("IO.Type", "Serial")
arr(2) = Array("IO.Serial.Port", 1)
arr(3) = Array("IO.Serial.BaudRate", 19200)
If Not Driver.WriteEx -1, 0, 0, 3, arr, , strError Then
    MsgBox "Failed configuring Driver parameters: " + strError
End If
```

IO.WorkOnline

| | |
|-----------------------------|--------------------|
| Type of Tag | I/O Tag |
| Type of Access | Reading or Writing |
| N1 Parameter | -1 (minus one) |
| N2 Parameter | 0 (zero) |
| N3 Parameter | 0 (zero) |
| N4 Parameter | 4 (four) |
| String Configuration | IO.WorkOnline |

This Tag informs the current status of a Driver and allows starting or stopping the physical layer. Possible values are the following:

- **0 - Driver Offline:** Physical layer is closed or stopped. This mode allows a dynamic configuration of a Driver's parameters using the **IO.SetConfigurationParameters** Tag
- **1 - Driver Online:** Physical layer is open or executing. While in **Online** mode, the physical layer can be connected or disconnected and its current status can be checked using the **IO.PhysicalLayerStatus** Tag

In the next example, using **Elipse E3**, a Driver is configured to **Offline** mode, its COM port is changed, and then configured to **Online** mode again.

```
'Configure to Offline mode
Driver.Write -1, 0, 0, 4, 0
'Change port to COM2
Driver.Write -1, 0, 0, 3, Array("IO.Serial.Port", 2)
'Configure to Online mode
Driver.Write -1, 0, 0, 4, 1
```

The **Write** method may fail when configuring a Driver to **Online** mode, that is, writing the value 1 (one). In this case, this Driver remains in **Offline** mode. The cause of failure can be:

- Type of physical layer incorrectly configured, probably an invalid value was configured in the **IO.Type** property
- This Driver may have run out of memory
- Physical layer probably did not create its working thread. Search the log file for a message "Failed to create physical layer thread!"
- Physical layer could not start. The cause of this failure depends on the type of physical layer. It can be an invalid serial port number, a failure when starting Windows Sockets, or a failure when starting TAPI (modem), among others. This cause is recorded on the log file

IMPORTANT

Even if the configuration of a Driver to **Online** mode is successful, this does not necessarily mean the physical layer is ready to use, that is, ready to execute input and output operations with an external device. The **IO.PhysicalLayerStatus** Tag must be checked to ensure the physical layer is connected and ready for communication.

Properties

These are general properties of all supported I/O Interfaces.

IO.ConnectionMode

9 Controls the management mode of a Connection. Possible values are **0**: Automatic mode, in which a Driver manages the connection or **1**: Manual mode, in which an application manages the connection.

IO.GiveUpEnable

☑ When configured to True, defines a maximum number of reconnection attempts. If all reconnection attempts fail, a Driver enters the **Offline** mode. When configured to False, a Driver tries until a reconnection is successful.

IO.GiveUpTries

9 Number of reconnection attempts before this one is aborted. For example, if the value of this property is equal to 1 (one), a Driver tries only one reconnection when the connection is lost. If this one fails, this Driver enters the **Offline** mode.

IO.InactivityEnable

☑ Configure to True to enable and to False to disable inactivity detection. The physical layer is disconnected if inactive for a certain period of time. The physical layer is considered inactive only if it is capable of sending data but not capable of receiving it back.

IO.InactivityPeriodSec

9 Number of seconds to check for inactivity. If the physical layer is inactive for this period of time, it is then disconnected.

IO.RecoverEnable

☑ Configure to True to enable a Driver to recover lost connections and to False to leave a Driver in **Offline** mode when a connection is lost.

IO.RecoverPeriodSec

9 Delay time between two connection attempts, in seconds.

NOTE

The first reconnection is executed immediately after a connection is lost.

IO.StartOffline

☑ Configure to True to start a Driver in **Offline** mode and to False to start a Driver in **Online** mode.


NOTE

It is pointless to change this property at run time, as it can only be changed when a Driver is already in **Offline** mode. To configure a Driver in **Online** mode at run time, write the value 1 (one) to the **IO.WorkOnline** Tag.

IO.TimeoutMs

9 Defines a time-out for the physical layer, in milliseconds. One second is equal to 1000 milliseconds.

IO.Type

 Defines the type of physical interface used by a Driver. Possible values are the following:

- **N or None:** Does not use a physical interface, that is, a Driver must provide a customized interface
- **S or Serial:** Uses a local serial port (COM n)
- **M or Modem:** Uses a local modem, internal or external, accessed via TAPI (*Telephony Application Programming Interface*)
- **E or Ethernet:** Uses a TCP/IP or UDP/IP socket
- **R or RAS:** Uses a **RAS** (*Remote Access Server*) Interface. A Driver connects to a RAS device using the **Ethernet** Interface and then sends an **AT** (*dial*) command

Statistical Configuration

This section contains information about the configuration of **I/O Tags** and **Properties** of I/O Interfaces statistics.

I/O Tags

Tags of I/O Interface Statistics (N2/B2 = 0)

The Tags described next display statistics for all I/O Interfaces.

IO.Stats.Partial.BytesRecv

| | |
|--------------------------------|----------------------------|
| Type of Tag | I/O Tag |
| Type of Access | Read-Only |
| N1 Parameter | -1 (minus one) |
| N2 Parameter | 0 (zero) |
| N3 Parameter | 0 (zero) |
| N4 Parameter | 1101 |
| Configuration by String | IO.Stats.Partial.BytesRecv |

This Tag returns the number of bytes received in the current connection.

IO.Stats.Partial.BytesSent

| | |
|--------------------------------|----------------------------|
| Type of Tag | I/O Tag |
| Type of Access | Read-Only |
| N1 Parameter | -1 (minus one) |
| N2 Parameter | 0 (zero) |
| N3 Parameter | 0 (zero) |
| N4 Parameter | 1100 |
| Configuration by String | IO.Stats.Partial.BytesSent |

This Tag returns the number of bytes sent through the current connection.

IO.Stats.Partial.TimeConnectedSeconds

| | |
|--------------------------------|---------------------------------------|
| Type of Tag | I/O Tag |
| Type of Access | Read-Only |
| N1 Parameter | -1 (minus one) |
| N2 Parameter | 0 (zero) |
| N3 Parameter | 0 (zero) |
| N4 Parameter | 1102 |
| Configuration by String | IO.Stats.Partial.TimeConnectedSeconds |

This Tag returns the number of seconds a Driver is connected in the current connection or 0 (zero) if a Driver is disconnected.

IO.Stats.Partial.TimeDisconnectedSeconds

| | |
|--------------------------------|--|
| Type of Tag | I/O Tag |
| Type of Access | Read-Only |
| N1 Parameter | -1 (minus one) |
| N2 Parameter | 0 (zero) |
| N3 Parameter | 0 (zero) |
| N4 Parameter | 1103 |
| Configuration by String | IO.Stats.Partial.TimeDisconnectedSeconds |

This Tag returns the number of seconds a Driver is disconnected since the last connection ended or 0 (zero) if a Driver is connected.

IO.Stats.Total.BytesRecv

| | |
|--------------------------------|--------------------------|
| Type of Tag | I/O Tag |
| Type of Access | Read-Only |
| N1 Parameter | -1 (minus one) |
| N2 Parameter | 0 (zero) |
| N3 Parameter | 0 (zero) |
| N4 Parameter | 1001 |
| Configuration by String | IO.Stats.Total.BytesRecv |

This Tag returns the number of bytes received since a Driver was loaded.

IO.Stats.Total.BytesSent

| | |
|--------------------------------|--------------------------|
| Type of Tag | I/O Tag |
| Type of Access | Read-Only |
| N1 Parameter | -1 (minus one) |
| N2 Parameter | 0 (zero) |
| N3 Parameter | 0 (zero) |
| N4 Parameter | 1000 |
| Configuration by String | IO.Stats.Total.BytesSent |

This Tag returns the number of bytes sent since a Driver was loaded.

IO.Stats.Total.ConnectionCount

| | |
|--------------------------------|--------------------------------|
| Type of Tag | I/O Tag |
| Type of Access | Read-Only |
| N1 Parameter | -1 (minus one) |
| N2 Parameter | 0 (zero) |
| N3 Parameter | 0 (zero) |
| N4 Parameter | 1004 |
| Configuration by String | IO.Stats.Total.ConnectionCount |

This Tag returns the number of connections a Driver already established, successfully, since it was loaded.

IO.Stats.Total.TimeConnectedSeconds

| | |
|--------------------------------|-------------------------------------|
| Type of Tag | I/O Tag |
| Type of Access | Read-Only |
| N1 Parameter | -1 (minus one) |
| N2 Parameter | 0 (zero) |
| N3 Parameter | 0 (zero) |
| N4 Parameter | 1002 |
| Configuration by String | IO.Stats.Total.TimeConnectedSeconds |

This Tag returns the number of seconds a Driver remained connected since it was loaded.

IO.Stats.Total.TimeDisconnectedSeconds

| | |
|-------------------------|--|
| Type of Tag | I/O Tag |
| Type of Access | Read-Only |
| N1 Parameter | -1 (minus one) |
| N2 Parameter | 0 (zero) |
| N3 Parameter | 0 (zero) |
| N4 Parameter | 1003 |
| Configuration by String | IO.Stats.Total.TimeDisconnectedSeconds |

This Tag returns the number of seconds a Driver remained disconnected since it was loaded.

Properties

Currently, there are no properties defined specifically to display I/O Interface statistics at run time.

Ethernet Interface Configuration

This section contains information about the configuration of **I/O Tags** and **Properties** of an **Ethernet** Interface.

I/O Tags

Tags of an Ethernet Interface (N2/B2 = 4)

The Tags described next allow controlling and identifying an **Ethernet** Interface at run time and they are also valid when the **RAS** Interface is selected.

IMPORTANT

These Tags are available **ONLY** while a Driver is in **Online** mode.

IO.Ethernet.IPSelect

| | |
|----------------------|----------------------|
| Type of Tag | I/O Tag |
| Type of Access | Reading or Writing |
| N1 Parameter | -1 (minus one) |
| N2 Parameter | 0 (zero) |
| N3 Parameter | 4 (four) |
| N4 Parameter | 0 (zero) |
| String Configuration | IO.Ethernet.IPSelect |

Indicates the active IP address. Possible values are **0**: The main IP address is selected, **1**: The first alternative or backup IP address is selected, **2**: The second alternative or backup IP address is selected, or **3**: The third alternative or backup IP address is selected.

If the **Ethernet** or **RAS** Interface is connected, this Tag indicates which one of the four configured IP addresses is in use. If the Interface is disconnected, this Tag indicates which IP address is used first on the next attempt to connect.

During the connection process, if the active IP address is not available, the I/O Interface tries to connect using the other IP address. If the connection with the alternative IP address works, it is configured as the active IP address (automatic switchover).

To force a manual switchover, write values from 0 (zero) to 3 (three) to this Tag. This forces a reconnection with the specified IP address (**0**: Main address or **1, 2, 3**: Alternative address) if a Driver is currently connected. If a Driver is disconnected, this Tag configures the active IP address for the next attempt to connect.

IO.Ethernet.IPSwitch

| | |
|-----------------------------|----------------------|
| Type of Tag | I/O Tag |
| Type of Access | Write-Only |
| N1 Parameter | -1 (minus one) |
| N2 Parameter | 0 (zero) |
| N3 Parameter | 4 (four) |
| N4 Parameter | 1 (one) |
| String Configuration | IO.Ethernet.IPSwitch |

Any value written to this Tag forces a manual switchover. If the main IP address is active, then the first alternative or backup IP address is activated, and so on for all alternative IP addresses and returning to the main address until a connection is established.

If a Driver is disconnected, this Tag configures the active IP address for the next attempt to connect.

IO.Ethernet.SocketState

| | |
|-----------------------------|-------------------------|
| Type of Tag | I/O Tag |
| Type of Access | Read-Only |
| N1 Parameter | -1 (minus one) |
| N2 Parameter | 0 (zero) |
| N3 Parameter | 4 (four) |
| N4 Parameter | 2 (two) |
| String Configuration | IO.Ethernet.SocketState |

The Value property of this Tag corresponds to socket states as a map of bits:

- **Bit 0**: 0 (zero, not listening) or 1 (one, listening)
- **Bit 1**: 0 (zero, disconnected) or 1 (one, connected)

Properties

These properties control the configuration of an **Ethernet** Interface.

NOTE

The **Ethernet** Interface is also used by the **RAS** Interface.

IO.Ethernet.AcceptConnection

☑ Configure to False if a Driver must not accept external connections, that is, if a Driver behaves as a master, or configure to True to enable the reception of connections, that is, if a Driver behaves as a slave.

IO.Ethernet.BackupEnable[2,3]

☑ Configure to True to enable an alternative or backup IP address. If the reconnection attempt with the main IP address fails, a Driver tries to use an alternative IP address. Configure to False to disable its usage.

IO.Ethernet.BackupIP[2,3]

📌 Alternative or backup IP address of a remote device. Users can use a numerical address, as well as a device's host name, such as "192.168.0.7" or "SERVER2".

IO.Ethernet.BackupLocalPort[2,3]

📌 Local port number to be used when connecting to an alternative IP address of a remote device. Used only if **IO.Ethernet.BackupLocalPortEnable** is equal to True.

IO.Ethernet.BackupLocalPortEnable[2,3]

☑ Configure to True to force the use of a specific local port when connecting to an alternative or backup IP address or configure to False to use any available local port.

IO.Ethernet.BackupPort[2,3]

📌 Port number of an alternative or backup IP address of a remote device, used with the **IO.Ethernet.BackupIP** property.

IO.Ethernet.IPFilter

📌 List with a comma-separated IPv4 or IPv6 addresses, which defines from which addresses a Driver accepts or blocks connections. Users can use asterisks, such as "192.168.*.*", or intervals, such as "192.168.0.41-50", in any part of IP addresses. To block an IP address or a range of IP addresses, use the tilde ("~") character at the beginning of the address, according to the next examples:

- **192.168.0.24**: Accepts only connections from IPv4 address 192.168.0.24
- **192.168.0.41-50**: Accepts connections from IPv4 addresses in the interval between 192.168.0.41 and 192.168.0.50
- **192.168.0.***: Accepts connections from IPv4 addresses in the interval between 192.168.0.0 and 192.168.0.255
- **fe80:3bf:877:::* (expands to fe80:03bf:0877:0000:0000:0000:0000:*)**: Accepts connections from IPv6 addresses in the interval between fe80:03bf:0877:0000:0000:0000:0000:0000 and fe80:03bf:0877:0000:0000:0000:ffff:ffff
- **192.168.0.10, 192.168.0.15, 192.168.0.20**: Accepts connections from IPv4 addresses 192.168.0.10, 192.168.0.15, and 192.168.0.20
- **~192.168.0.95, 192.168.0.***: Accepts connections from IPv4 addresses in the interval between 192.168.0.0 and 192.168.0.255, except the IPv4 address 192.168.0.95

When a Driver receives a connection attempt, the list of filters is scanned sequentially from left to right, searching for a specific authorization or block for the IP address where the connection comes from. If no element on the list corresponds to the IP address, the authorization or block are dictated by the last element of that list:

- If the last element on the list is an authorization, such as "192.168.0.24", then all IP addresses not found on the list are blocked
- If the last element on the list is a block, such as "~192.168.0.24", then all IP addresses not found on the list are authorized

If an IP address appears on more than one filter on the list, the leftmost filter has precedence. For example, in case of "~192.168.0.95, 192.168.0.*", the IP address 192.168.0.95 fits both rules, but the rule that wins is the leftmost one, "~192.168.0.95", and therefore this IP address is blocked.

When **IOKit** blocks a connection, it logs a message "Blocked incoming socket connection from {IP}!".

In case of UDP connections in broadcast listening mode, in which a Driver can receive packets from different IP addresses, blocks or permissions are performed at each packet received. If a packet is received from a blocked IP address, it logs a message "Blocked incoming packet from {IP} (discarding {N} bytes)!".

IO.Ethernet.ListenIP

A IP address of the local network interface that a Driver uses to establish and accept connections. Leave this property empty to establish and accepts connections using any local network interface.

IO.Ethernet.ListenPort

9 Number of the IP port used by a Driver to listen to connections.

IO.Ethernet.MainIP

A IP address of a remote device. Users can use a numerical address, as well as a device's host name, such as "192.168.0.7" or "SERVER2".

IO.Ethernet.MainLocalPort

9 Local port number to use when connecting to the main IP address of a remote device. This value is only used if the **IO.Ethernet.MainLocalPortEnable** property is equal to True.

IO.Ethernet.MainLocalPortEnable

Configure to True to force the use of a specific local port when connecting to the main IP address of a remote device or configure to False to use any available local port.

IO.Ethernet.MainPort

9 Number of the IP port of a remote device, used with the **IO.Ethernet.MainIP** property.

IO.Ethernet.PingEnable

Configure to True to enable sending a **ping** command to the IP address of a remote device, before trying to connect to the socket. This socket's connection time-out cannot be controlled, therefore sending a **ping** command before connecting is a fast way to detect if the connection is going to fail. Configure to False to disable a **ping** command.

IO.Ethernet.PingTimeoutMs

9 Delay time to wait for a response from a **ping** command, in milliseconds.

IO.Ethernet.PingTries

9 Maximum number of attempts of a **ping** command. Minimum value is 1 (one), including the first **ping** command.

IO.Ethernet.ShareListenPort

☑ Configure to True to share a listening port with other Drivers and processes or False to open a listening port in exclusive mode. To successfully share a listening port, all Drivers and processes that use that port must open it in shared mode. When a listening port is shared, each incoming connection is distributed to one of the processes listening. This way, if a Slave Driver only supports one connection at a time, users can use several instances of this Driver listening on the same port, therefore simulating a Driver with support for multiple connections.

IO.Ethernet.SupressEcho

☑ Configure to True to eliminate echoes in communication. An echo is the unwanted reception of an exact copy of all data packets a Driver sent to a device.

IO.Ethernet.Transport

A Defines a transport protocol. Possible values are **T or TCP**: Uses the TCP/IP protocol or **U or UDP**: Uses the UDP/IP protocol.

IO.Ethernet.UseIPv6

☑ Configure to True to use IPv6 addresses on all Ethernet connections or configure to False to use IPv4 addresses (default).

Modem Interface Configuration

This section contains information about the configuration of **I/O Tags** and **Properties** of a **Modem** (TAPI) Interface.

I/O Tags

Tags of a Modem Interface (N2/B2 = 3)

The Tags described next allow controlling and diagnosing a **Modem** (TAPI) Interface at run time.

IMPORTANT

These Tags are available **ONLY** while a Driver is in **Online** mode.

IO.TAPI.ConnectionBaudRate

| | |
|-----------------------------|----------------------------|
| Type of Tag | I/O Tag |
| Type of Access | Read-Only |
| N1 Parameter | -1 (minus one) |
| N2 Parameter | 0 (zero) |
| N3 Parameter | 3 (three) |
| N4 Parameter | 5 (five) |
| String Configuration | IO.TAPI.ConnectionBaudRate |

Indicates a baud rate value for the current connection. If a modem is not connected, returns the value 0 (zero).

IO.TAPI.Dial

| | |
|-----------------------------|----------------|
| Type of Tag | I/O Tag |
| Type of Access | Write-Only |
| N1 Parameter | -1 (minus one) |
| N2 Parameter | 0 (zero) |
| N3 Parameter | 3 (three) |
| N4 Parameter | 1 (one) |
| String Configuration | IO.TAPI.Dial |

Write any value to this Tag to force a **Modem** Interface to start a call. This is an asynchronous command, only starting the call process. Users can monitor the **IO.TAPI.IsModemConnected** Tag to detect when a call is established.

IO.TAPI.HangUp

| | |
|-----------------------------|----------------|
| Type of Tag | I/O Tag |
| Type of Access | Write-Only |
| N1 Parameter | -1 (minus one) |
| N2 Parameter | 0 (zero) |
| N3 Parameter | 3 (three) |
| N4 Parameter | 4 (four) |
| String Configuration | IO.TAPI.HangUp |

Any value written to this Tag hangs the current call up.

NOTE

Use this command only when managing the physical layer manually or when explicitly trying to force a Driver to restart the communication. If the physical layer is configured for automatic reconnection, a Driver immediately tries to reestablish the connection.

IO.TAPI.IsModemConnected

| | |
|-----------------------------|--------------------------|
| Type of Tag | I/O Tag |
| Type of Access | Read-Only |
| N1 Parameter | -1 (minus one) |
| N2 Parameter | 0 (zero) |
| N3 Parameter | 3 (three) |
| N4 Parameter | 3 (three) |
| String Configuration | IO.TAPI.IsModemConnected |

This Tag indicates the status of a modem connection. Possible values are **0**: The modem is not connected, but it may be performing or receiving an external call or **1**: The modem is connected and a Driver completed or received an external call successfully. While it is in this status, the physical layer can send or receive data.

IO.TAPI.IsModemConnecting

| | |
|-----------------------------|---------------------------|
| Type of Tag | I/O Tag |
| Type of Access | Read-Only |
| N1 Parameter | -1 (minus one) |
| N2 Parameter | 0 (zero) |
| N3 Parameter | 3 (three) |
| N4 Parameter | 6 (six) |
| String Configuration | IO.TAPI.IsModemConnecting |

This Tag indicates the status of a modem connection, with more details than the **IO.TAPI.IsModemConnected** Tag. Possible values are **0**: Modem is not connected, **1**: Modem is connecting, that is, performing or receiving an external call, **2**: Modem is connected. While in this status, the physical layer can send or receive data, or **3**: Modem is disconnecting the current call.

IO.TAPI.ModemStatus

| | |
|----------------------|---------------------|
| Type of Tag | I/O Tag |
| Type of Access | Read-Only |
| N1 Parameter | -1 (minus one) |
| N2 Parameter | 0 (zero) |
| N3 Parameter | 3 (three) |
| N4 Parameter | 2 (two) |
| String Configuration | IO.TAPI.ModemStatus |

Returns a **String** with the current status of a modem. Possible values are the following:

- **"No status!"**: The **Modem** Interface was not open yet or was already closed
- **"Modem initialized OK!"**: The **Modem** Interface was initialized successfully
- **"Modem error at initialization!"**: A Driver could not initialize modem's line. Check that Driver's log file for more details
- **"Modem error at dial!"**: A Driver could not start or accept a call
- **"Connecting..."**: A Driver started a call successfully, and is currently processing that call
- **"Ringing..."**: Indicates that the modem is receiving an external call, but it did not accepted it yet
- **"Connected!"**: A Driver connected successfully, that is, completed or accepted an external call
- **"Disconnecting..."**: A Driver is turning the current call off
- **"Disconnected OK!"**: A Driver turned the current call off
- **"Error: no dial tone!"**: A Driver aborted a call because the available line signal was not detected
- **"Error: busy!"**: A Driver aborted a call because the line was busy
- **"Error: no answer!"**: A Driver aborted a call because no answer was received from the other modem
- **"Error: unknown!"**: Current call was aborted because of an unknown error

IO.TAPI.PhoneNumber

| | |
|----------------------|---------------------|
| Type of Tag | I/O Tag |
| Type of Access | Reading or Writing |
| N1 Parameter | -1 (minus one) |
| N2 Parameter | 0 (zero) |
| N3 Parameter | 3 (three) |
| N4 Parameter | 0 (zero) |
| String Configuration | IO.TAPI.PhoneNumber |

This Tag is a **String** that reads or changes the telephone number used by the **IO.TAPI.Dial** Tag. When changing this Tag, the new value is used only on the next **Dial** command.

Properties

These properties control the configuration of a **Modem** (TAPI) Interface.

IO.TAPI.AcceptIncoming

9 Configure to False if a modem cannot accept external calls, that is, if a Driver behaves as a master, and configure to True to enable receiving calls, that is, if a Driver behaves as a slave.

IO.TAPI.ModemID

9 This is the identification number of a modem. This ID is created by Windows and used internally to identify a modem on a list of devices installed on a computer. This ID may not remain valid if a modem is reinstalled or an application is executed on another computer.

NOTE

It is advisable to configure this property as 0 (zero), indicating that a Driver must use the first available modem.

IO.TAPI.PhoneNumber

A A telephone number used by **Dial** commands, such as "0w01234566", in which the "w" character forces a modem to wait for a call sign.

RAS Interface Configuration

This section contains information about the configuration of **I/O Tags** and **Properties** of a **RAS** Interface.

I/O Tags

Tags of a RAS Interface (N2/B2 = 5)

Currently, there are no Tags defined specifically to manage a **RAS** Interface at run time.

Properties

These properties control the configuration of a **RAS** Interface.

NOTE

A **RAS** Interface uses the **Ethernet** Interface, which therefore must be also configured.

IO.RAS.ATCommand

A An **AT** command to send through a socket to force a RAS device to perform a call using the current RAS channel, such as "ATDT6265545".

IO.RAS.CommandTimeoutSec

9 Time to wait for a **CONNECT** message in response to an **AT** command, in seconds.

Serial Interface Configuration

This section contains information about the configuration of **I/O Tags** and **Properties** of a **Serial** Interface.

I/O Tags

Tags of a Serial Interface (N2/B2 = 2)

Currently, there are no Tags defined specifically to manage a **Serial** Interface at run time.

Properties

These properties control the configuration of a **Serial** Interface.

IO.Serial.Baudrate

9 Specifies a baud rate of a serial port, such as 9600.

IO.Serial.CTSTimeoutMs

9 Time to wait for a **CTS** signal, in milliseconds. After turning the **RTS** signal on, a timer is started to wait for a **CTS** signal. If this timer expires, a Driver aborts sending bytes through the serial port. Available only when the **IO.Serial.RTS** property is configured with the value **Toggle** and the **IO.Serial.WaitCTS** property is configured to True.

IO.Serial.DataBits

9 Specifies the number of data bits to configure a serial port. Possible values are **5**: Five data bits, **6**: Six data bits, **7**: Seven data bits, or **8**: Eight data bits.

IO.Serial.DelayAfterMs

9 Number of milliseconds to delay after the last byte is sent through a serial port, but before turning the **RTS** signal off. Available only when the **IO.Serial.RTS** property is configured with the value **Toggle** and the **IO.Serial.WaitCTS** property is configured to False.

IO.Serial.DelayBeforeMs

9 Number of milliseconds to delay after turning the **RTS** signal on, but before data is sent. Available only when the **IO.Serial.RTS** property is configured with the value **Toggle** and the **IO.Serial.WaitCTS** property is configured to False.

IO.Serial.DTR

A Indicates how a Driver deals with the **DTR** signal. Possible values are **OFF**: **DTR** signal is always turned off or **ON**: **DTR** signal is always turned on.

IO.Serial.InterbyteDelayUs

9 Delay time, in milliseconds (1/1000000 of a second), for each two bytes sent through a **Serial** Interface.

IO.Serial.InterframeDelayMs

9 Delay time, in milliseconds, before sending a packet after the last packet sent or received.

IO.Serial.Parity

A Specifies a parity for the configuration of a serial port. Possible values are **E or Even**: Even parity, **N or None**: No parity, **O or Odd**: Odd parity, **M or Mark**: Mark parity, or **S or Space**: Space parity.

IO.Serial.Port

9 Number of the local serial port. Possible values are **1**: Uses the COM1 port, **2**: Uses the COM2 port, **3**: Uses the COM3 port, or **n**: Uses the COMn port.

IO.Serial.RTS

A Indicates how a Driver deals with the **RTS** signal. Possible values are **OFF**: **RTS** signal always off, **ON**: **RTS** signal always on, or **Toggle**: Turns the **RTS** signal on when transmitting data and turns the **RTS** signal off when not transmitting data.

IO.Serial.StopBits

9 Specifies the number of stop bits for the configuration of a serial port. Possible values are **1**: One stop bit, **2**: One and a half stop bit, or **3**: Two stop bits.

IO.Serial.SuppressEcho

9 Use a value different from 0 (zero) to enable suppressing the echo or 0 (zero) to disable it.

IO.Serial.WaitCTS

☑ Configure to True to force a Driver to wait for the **CTS** signal before sending bytes when the **RTS** signal is turned on. Available only when the **IO.Serial.RTS** property is configured with the value **Toggle**.

Driver Revision History

| VERSION | DATE | AUTHOR | COMMENTS |
|---------|------------|-----------|---|
| 2.0.1 | 26/01/2026 | M. Ludwig | <ul style="list-style-type: none"> Driver updated to IOKit library version 3.0 and Visual Studio 2022 (<i>Case 38846</i>). |
| 1.0.1 | 08/31/2011 | M. Ludwig | <ul style="list-style-type: none"> Initial version of this Driver. |

Headquarters

**Rua Mostardeiro, 322/Cj. 902, 1001 e
1002**

90510-002 — Porto Alegre — RS

Phone: (+55 51) 3346-4699

Fax: (+55 51) 3222-6226

E-mail: elipse-rs@elipse.com.br

Branch in Taiwan

9F., No.12, Beiping 2nd St., Sanmin Dist.

807 — Kaohsiung City — Taiwan

Phone: (+886 7) 323-8468

Fax: (+886 7) 323-9656

E-mail: evan@elipse.com.br

Check our website for information about a representative in your country.

www.elipse.com.br

kb.elipse.com.br

forum.elipse.com.br

www.youtube.com/elipsesoftware

elipse@elipse.com.br



Gartner, Cool Vendors in Brazil 2014, April 2014.

Gartner does not endorse any vendor, product or service depicted in its research publications, and does not advise technology users to select only those vendors with the highest ratings. Gartner research publications consist of the opinions of Gartner's research organization and should not be construed as statements of fact. Gartner disclaims all warranties, expressed or implied, with respect to this research, including any warranties of merchantability of fitness for a particular purpose.

Microsoft Partner
Gold Independent Software Vendor (ISV)