

Elgama ElgamaEPQS Driver

File Name	ElgamaEPQS.dll
Manufacturer	UAB Elgama-Elektronika
Devices	Elgama EPQS and Elgama EPQM
Protocol	EPQS Proprietary
Version	1.0.24
Last Update	09/02/2025
Platform	Win32
Dependencies	IOKit version 2.0 or later
Superblock Readings	No
Level	0

Introduction


This Driver implements UAB Elgama-Elektronika's EPQS Proprietary protocol, which allows **Eclipse Software's** products to communicate with Elgama EPQS and Elgama EPQM devices.

The Elgama ElgamaEPQS Driver was developed using **Eclipse Software's IOKit** library. This library, after configuration, is responsible for implementing the physical layer access, **Serial, Ethernet, Modem, or RAS**. For more information, please check topic **Documentation of I/O Interfaces**.

Driver Configuration

The **[P]** configuration parameters are not used. All settings are performed on this Driver's configuration dialog box. For more information about the **Setup, Serial, Ethernet, Modem, and RAS** tabs, please check topic **Documentation of I/O Interfaces**.

The **ElgamaEPQS** tab, shown on the next figure, contains specific configurations for this Driver.

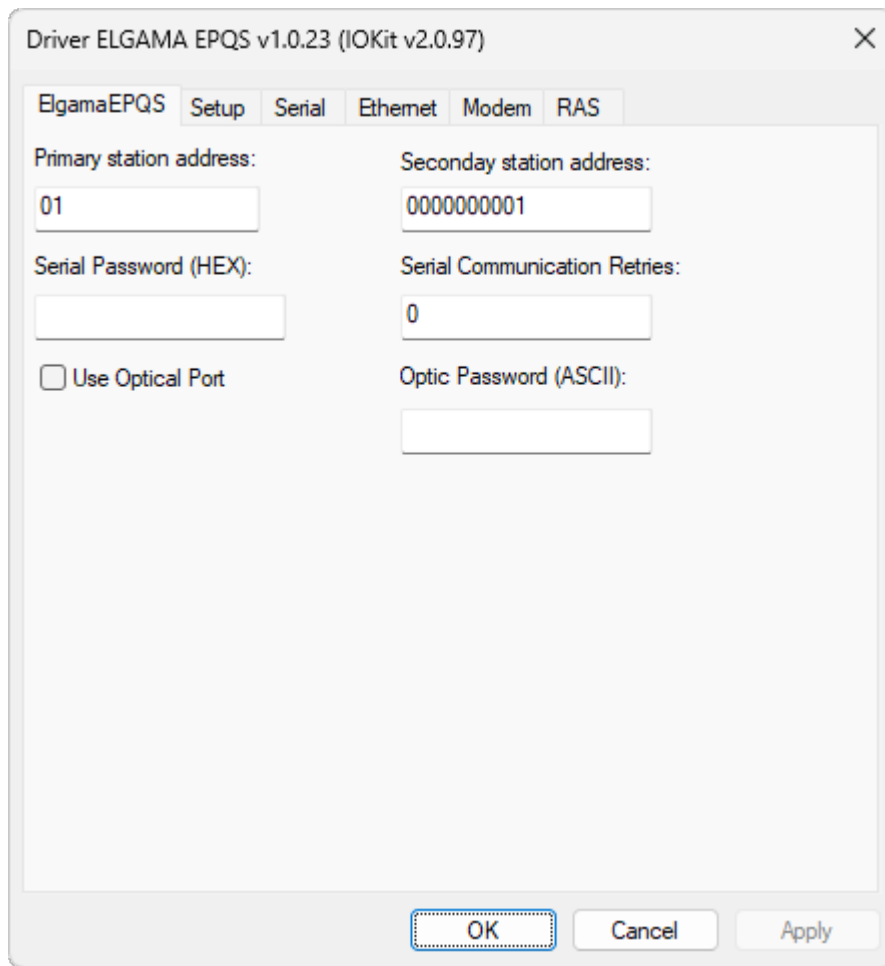

ElgamaEPQS tab

The available options on this tab are described on the next table.

Available options on ElgamaEPQS tab

OPTION	DESCRIPTION
Primary station address	Address of the primary station
Secondary station address	Address of the secondary station, usually printed on a device's front side
Serial Password (HEX)	Password used for authentication on a device when the optical port is not used
Use Optical Port	Indicates whether this Driver must use the protocol of the optical port
Optic Password (ASCII)	Password used for the optical port

Requirements for a Serial Password

A password must be provided on the configuration window for a correct behavior of clock syncing feature. All other operations do not require such information to work properly.

Valid passwords are composed by hexadecimal characters, that is, characters in the range between 0 (zero) and 9 (nine) and in the range between "A" and "F".

The **Optic Password (ASCII)** option is always displayed blank for privacy reasons. After configured, there is no need to provide it when this window is opened.

Optical Port

Select the **Use Optical Port** option on the configuration window to indicate that this Driver must communicate using the optical or serial protocol. When selecting this option, this Driver uses the password configured in the **Optic Password (ASCII)** option for authentication, which is a password in **ASCII** format with a maximum of 8 (eight) digits.

When the optical port is used, a password is mandatory for readings and for writings. Due to device specifications, users must use a password with higher privileges to perform a clock syncing. For more information, please check a device's manual.

For a correct usage of the optical port, users must configure this Driver to use **Serial** communication on the **Setup** tab. Recommended values are the following:

- **Baudrate:** 300
- **Databits:** 7 (seven)
- **Parity:** Even Parity
- **Stop bits:** One stop bit

Currently, the optical port is only compatible with **Elgama EPQS** devices.

Tag Reference for EPQS Meters

This section contains information about the configuration of this Driver's **[N/B]** Tags for **EPQS** meters.

Date and Time

Read-Only

N1	0 (zero)
N2	Not used
N3	Not used
N4	Not used

This Tag returns the current date and time of a meter.

Total Log Entries

Read-Only

N1	1 (one)
N2	Not used
N3	Not used
N4	Not used

This Tag returns the total number of log entries of a meter.

Integration Period

Read-Only

N1	2
N2	Not used
N3	Not used
N4	Not used

This Tag returns the integration period, in seconds, used by a meter.

Snapshot Values

Read-Only

B1	3 (three)
B2	Not used
B3	Not used
B4	Not used
Size	23

This is a Block Tag with 23 Elements. The **L1**, **L2**, and **L3** indications represent input ports of a meter. The description of their Elements are the following:

- Frequency
- Voltage in **L1**, **L2**, and **L3**
- Current in **L1**, **L2**, and **L3**
- Active power in **L1**, **L2**, and **L3**
- Reactive power in **L1**, **L2**, and **L3**
- Apparent power in **L1**, **L2**, and **L3**
- Power factor in **L1**, **L2**, and **L3**
- Line voltage in **L12**, **L13**, and **L23**
- Quadrants and phase sequence:
 - **Bits 0 and 1**: Load quadrant in phase **L1**

- **Bits 2 and 3:** Load quadrant in phase **L2**
- **Bits 4 and 5:** Load quadrant in phase **L3**
- **Bit 6:** 0 (zero) for normal phase sequence (1 -> 2 -> 3) or 1 (one) for reverse phase sequence (1 -> 3 -> 2)

Configuration Parameters

Read-Only

B1	4
B2	Varies from 0 (zero) to 23 or from 27 to 33
B3	Not used
B4	Not used
Size	Between 0 (zero) and 8 (eight)

This is a Block Tag with a variable size, depending on the value used in the *B2* parameter.

Block Tags returned by the Configuration Parameters Tag

B2	BLOCK SIZE	PARAMETERS
0	2 (two)	Clock calibration constant, nominal temperature
1	2 (two)	Energy quantity, starting current
2	7 (seven)	Temperature calibration constant, voltage, and current calibration constants (six values)
3	3 (three)	Phase shift calibration constant (three values)
4	3 (three)	Active energy offset (three values)
5	3 (three)	Reactive energy offset (three values)
6	3 (three)	Hilbert transformation coefficients (three values)
7	3 (three)	Meter constant (imp/kWh), pulse duration, minimum pause duration
8	3 (three)	Telemeter output constant, pulse duration, minimum pause duration
9	0 (zero)	Manufacturer
10	0 (zero)	Model
11	0 (zero)	Firmware version
12	0 (zero)	Factory number
13	0 (zero)	User
14	0 (zero)	Location

B2	BLOCK SIZE	PARAMETERS
15	2 (two)	Configuration bits
16	4 (four)	Numerator of current transformation coefficient, numerator of voltage transformation coefficient, denominator of current transformation coefficient, denominator of voltage transformation coefficient
17	8 (eight)	Nominal voltage, nominal current, nominal frequency, maximum current, maximum voltage, minimum frequency, maximum frequency
18	8 (eight)	Beginning of daylight savings (hour, day, and month), daylight savings deviation in hours, end of daylight savings (hour, day, and month), deviation for GMT (<i>Greenwich Mean Time</i>) format
19	2 (two)	Cyclic display duration in seconds, static display duration in seconds
20	3 (three)	Integration period, amount of periods averaged, billing day
21	4 (four)	Number of maximum demand (four most significant bits) and energy (four least significant bits), emergency tariff for maximum demand (four most significant bits), and energy (four least significant bits)
22	0 (zero)	Period in seconds for programmable channels
23	0 (zero)	Starting day of power quality monitoring
27	2 (two)	Function of telemeter outputs
28	2 (two)	Minimum temperature, maximum temperature
29	0 (zero)	Activation date of passive seasons
30	0 (zero)	Factory configuration
31	0 (zero)	Date and time of last clock change
32	4 (four)	Configuration of relay one
33	4 (four)	Configuration of relay two

Requesting Logs

Write-Only

N1	5 (five)
N2	Not used
N3	Not used
N4	Not used

This Tag starts a request for log entries for this Driver. Only logs within the user-specified range of timestamps are read.

Reading Logs

Read-Only

N1	6 (six)
N2	Not used
N3	Not used
N4	Not used

This Tag returns a list with all logs requested by the **Requesting Logs** Tag, that is, all logs that match the timestamps of a request. The returned values are two 16-bit flags with indicators of **statuses** and **events**, described on the next topics.

Status Flags

The first value returned, a status flag, can contain the following values:

- **Bit 0:** Voltage **L1** is on
- **Bit 1:** Voltage **L2** is on
- **Bit 2:** Voltage **L3** is on
- **Bit 3:** External magnetic field
- **Bit 4:** Unfavorable environment temperature
- **Bit 5:** Communication blocked due to four wrong passwords attempts
- **Bit 6:** Manufacturer access is enabled
- **Bit 7:** Reverse phase sequence
- **Bit 8:** Invalid time
- **Bit 9:** Hardware problems (fatal error)
- **Bit 10:** Status of relay 1 (one)
- **Bit 11:** Status of relay 2 (two)
- **Bits 12 and 13:** Not used

- **Bit 14:** Low battery
- **Bit 15:** Daylight saving time

Event Flags

The second value returned, an event flag, contains the following values:

- **Bit 0:** Device protection was opened
- **Bit 1:** Not used
- **Bit 2:** Clock configuration
- **Bit 3:** Accumulation or reset
- **Bit 4:** Remote configuration
- **Bit 5:** Local configuration
- **Bit 6:** Reset of daily maximum demand
- **Bit 7:** Reset of monthly maximum demand
- **Bit 8:** Reset of daily energies
- **Bit 9:** Reset of monthly energies
- **Bit 10:** Clock adjusted forward
- **Bit 11:** Error without firmware reset
- **Bit 12:** Error with firmware reset
- **Bit 13:** Watchdog reset
- **Bit 14:** Illegal operation
- **Bit 15:** Clock adjusted backwards

Requesting Load Profiles

Write-Only

N1	7 (seven)
N2	Varies from 0 (zero) to 15
N3	Not used
N4	Not used

This Tag starts a request for load profiles for this Driver. Only load profiles within the user-specified range of timestamps are read. Request values for the N2 parameter are described on the next table.

Available options for the N2 parameter

B2	PARAMETERS
0	+P active power entries
1	-P active power entries
2	Q1 reactive power (quadrant 1) entries
3	Q2 reactive power (quadrant 2) entries
4	Q3 reactive power (quadrant 3) entries
5	Q4 reactive power (quadrant 4) entries
6	+S apparent power entries
7	-S apparent power entries
8	+A active energy entries
9	-A active energy entries
10	R1 reactive energy (quadrant 1) entries
11	R2 reactive energy (quadrant 2) entries
12	R3 reactive energy (quadrant 3) entries
13	R4 reactive energy (quadrant 4) entries
14	+W apparent energy entries
15	-W apparent energy entries

After performing this request, these values can be read by using the **Reading Load Profiles** Tag.

Reading Load Profiles

Read-Only

N1	8 (eight)
N2	Not used
N3	Not used
N4	Not used

This Tag returns a list with all load profiles requested by the **Requesting Load Profiles** Tag.

Clock Syncing

Write-Only

N1	9 (nine)
N2	Not used
N3	Not used
N4	Not used

This Tag attempts to sync the clock of a meter with the clock of a host, that is, this Driver. The value of this Tag must be set with the timezone, in **UTC** (*Coordinated Universal Time*) format, in which a meter is, in minutes. The returned timestamp is this Driver's date and time minus the communication latency with a device.

The password typed in the **Serial Password (HEX)** option on this Driver's configuration window is used for authentication. If this option was not configured, this Driver uses the default password of a device.

NOTES

- In many cases, it is normal that this Tag succeeds and the time of a meter remains unchanged. In this case, it is recommended to wait a few minutes, or even a few hours, before the next syncing attempts.
- Due to technical restrictions, users can only adjust the clock of a meter in plus or minus 10 minutes from a central time. Please be sure that the given timezone is correct. For larger adjustments, users must perform a manual intervention in a meter. To do so, please check manufacturer's documentation.

Tag Reference for EPQM Meters

This section contains information about the configuration of this Driver's **[N/B]** Tags for **EPQM** meters.

Date and Time

Read-Only

N1	20
N2	Not used
N3	Not used
N4	Not used

This Tag returns the current date and time of a meter.

ProgV Meter Variable

Read-Only

N1	21
N2	Not used
N3	Not used
N4	Not used

This Tag returns a meter's **ProgV** variable.

Integration Period

Read-Only

N1	22
N2	Not used
N3	Not used
N4	Not used

This Tag returns the integration period, in seconds, used by a meter.

Cyclic Request

Read-Only

B1	23
B2	Not used
B3	Not used
B4	Not used
Size	Between 6 (six) and 9 (nine)

This Tag returns a Block Tag with 6 (six) or 9 (nine) Elements. This size depends on the value of a meter's **ProgV** variable, in which a value greater or equal to 5 (five) returns a Block Tag with 9 (nine) Elements or otherwise with 6 (six) Elements. The values returned in this Tag are the following:

- Status of a meter, a bit field with a size of 16:
 - **Bit 0:** New blackout value
 - **Bit 1:** New phase number value
 - **Bit 2:** New value of malfunctioning

- **Bit 3:** Communication via optical head for configuration
- **Bit 4:** Not used
- **Bit 5:** Communication via optical head for reading
- **Bit 6:** No load
- **Bit 7:** Meter exposed to a magnetic field
- **Bit 8:** End of integration period
- **Bit 9:** End of a day
- **Bit 10:** End of a month
- **Bit 11:** End of a year
- **Bit 12:** Time correction in progress
- **Bit 13:** Time correction limit reached
- **Bit 14:** Invalid array of user-defined constants
- **Bit 15:** Clock malfunctioning
- Index of a period: 1 (one) to 60 minutes, 2 (two) to 30 minutes, and 4 (four) to 15 minutes. To get a numerical value in seconds, use the **Integration Period** Tag
- Type of a meter
- **Sec** variable
- **ProgV** variable
- Battery supply

If a meter's **ProgV** variable is greater or equal to 5 (five), the following bit fields are also transmitted:

- Variable of **KtrU** number factor
- Variable of **Ktrl** number factor
- Exponent variable of number factor

Operational Information

Read-Only

B1	24
B2	Not used
B3	Not used
B4	Not used
Size	12

This Block Tag contains 12 Elements. The returned values are the following:

- Current date and time of a meter
- Status of a meter, as described in the **Cyclic Request** Tag
- Date and time of initialization
- Date and time of the last reset
- Number of resets
- Date and time of the last configuration
- Number of configurations
- Time, in seconds, of exposure to a magnetic field
- Time, in minutes, of exposure to a magnetic field
- Time, in hours, of exposure to a magnetic field

Requesting Load Profiles

Write-Only

N1	25
N2	Varies between 0 (zero) and 3 (three)
N3	Not used
N4	Not used

This Tag starts a request for load profiles for this Driver. Only load profiles within the range of user-specified timestamps are read. The request values for the *N2* parameter are described on the next table.

Available options for the N2 parameter

B2	PARAMETERS
0	P+ power readings (active power)
1	P- power readings (active power)
2	Q+ power readings (reactive power)
3	Q- power readings (reactive power)

After performing this request, these values can be read by using the **Reading Load Profiles** Tag.

Reading Load Profiles

Read-Only

N1	26
N2	Not used
N3	Not used
N4	Not used

This Tag returns a list with all load profiles requested by the **Requesting Load Profiles** Tag.

Power Request

Write-Only

N1	27
N2	Varies between 0 (zero) and 2 (two)
N3	Not used
N4	Not used

This Tag starts a request for power integrations for this Driver. Only values within the range of user-specified timestamps are read. The request values for the *N2* parameter are described on the next table.

Available options for the N2 parameter

B2	PARAMETERS
0	Daily power integrations
1	Monthly power integrations
2	Telemetry power integrations

After performing this request, these values can be read by using the **Power Reading** Tag.

Power Reading

Read-Only

N1	28
N2	Not used
N3	Not used
N4	Not used

This Tag returns a list with power consumption values requested by the **Power Request** Tag. Each element on this list is composed by an array with 16 positions:

- Four P+ (active power in Wh) tariffs
- Four P- (active power in Wh) tariffs
- Four Q+ (reactive power in varh) tariffs
- Four Q- (reactive power in varh) tariffs

Dynamic Values

Read-Only

B1	29
B2	Not used
B3	Not used
B4	Not used
Size	17

This Block Tag returns a list with all values dynamically read from a meter. The values on this list are the following:

- Three fields with P (power in kWh)
- Three fields with Q (reactive power in kvar)
- Three fields with U (voltage in V)
- Three fields with I (current in A)
- Frequency (in Hz)
- Quadrants
- Signals

Blackouts

Read-Only

N1	30
N2	Not used
N3	Not used
N4	Not used

This Tag returns a list with time pairs representing periods with blackouts.

Malfunctioning

Read-Only

N1	31
N2	Not used
N3	Not used
N4	Not used

This Tag returns a list with malfunctioning flags and their timestamps.

Configuration Events

Read-Only

N1	32
N2	Not used
N3	Not used
N4	Not used

This Tag returns a list with the latest configuration events. Each event contains the following fields:

- Factor of number values, **Ktr**
- Configuration flags

Requesting Integration Values

Write-Only

N1	33
N2	Not used
N3	Not used
N4	Not used

This Tag starts a request for values of integration periods for this Driver. Only values within the user-specified range of timestamps are read. After performing this request, these values can be read by using the **Reading Integration Values** Tag.

Reading Integration Values

Read-Only

N1	34
N2	Not used
N3	Not used
N4	Not used

This Tag returns a list with all values of integration periods requested by the **Requesting Integration Values** Tag. Each element on this list is composed by 4 (four) values:

- Values for P+
- Values for P-
- Values for Q+
- Values for Q-

Clock Syncing

Write-Only

N1	35
N2	Not used
N3	Not used
N4	Not used

This Tag syncs the clock of a meter with the clock of a host, that is, this Driver. In the value of this Tag users must inform a timezone, in **UTC** (*Coordinated Universal Time*) format, in which a meter is, in minutes. The returned timestamp is the date and time of this Driver minus the communication latency with a device.

The password typed in the **Serial Password (HEX)** option on this Driver's configuration window is used for authentication. If this option was not configured, this Driver uses the default password of a device.

Documentation of I/O Interfaces

This section contains the documentation of I/O Interfaces referring to **ElgamaEPQS** Driver.

Configuration of a Driver

I/O Interface configuration is performed on a Driver's configuration dialog box. To access the configuration of this dialog box in **Eclipse E3** in version 1.0, follow these steps:

1. Right-click a Driver object (IODriver).
2. Select the **Properties** item on the contextual menu.
3. Select the **Driver** tab.
4. Click **Other parameters**.

In **Eclipse E3** version 2.0 or later, click **Configure driver**  on a Driver's toolbar. In **Eclipse SCADA**, follow these steps:

1. Open the Organizer.
2. Select a Driver on Organizer's tree.
3. Click **Extras** on the **Driver** tab.

Currently, an I/O Interface allows opening only one connection for each Driver. This means that, if users want to access two serial ports, they must add two Drivers to an application and then configure each one of these Drivers for each serial port.

Configuration Dialog Box

The dialog box of I/O Interfaces allows configuring the I/O connection used by a Driver. This dialog box contains the **Setup**, **Serial**, **Ethernet**, **Modem**, and **RAS** tabs, described on the next topics. If a Driver does not implement a specific I/O connection, its corresponding tab is not available for configuration. Some Drivers may contain additional tabs, specific for that Driver, on the configuration dialog box.

Setup Tab

The **Setup** tab contains general configurations of a Driver. This tab is divided into the following groups:

- **General configurations:** Configurations of a Driver's physical layer, time-out, and initialization mode
- **Connection management:** Configurations on how the I/O Interface keeps a connection and which recovery policy is used on failure
- **Logging options:** Controls the generation of log files

Setup

Physical Layer: Ethernet Start driver OFFLINE

Timeout: 1000 ms Communication check time: 5000 ms

Connection management

Mode: Automatic (managed by the driver)

Retry failed connection every 20 seconds

Give up after 1 failed retries

Disconnect if non-responsive for 0 seconds

Logging Options

Log to File: C:\eeLogs\MicrolokII_%DATE%.log

File size limit (MB): 0 ('0' is unlimited)

Setup tab

General options on the Setup tab

OPTION	DESCRIPTION
Physical Layer	Select the physical layer on a list. Available options are Serial , Ethernet , Modem , and RAS . The selected interface must be configured on its specific tab
Timeout	Configure a time-out, in milliseconds, for the physical layer. This is the amount of time an I/O interface waits to receive any byte from the reception's buffer
Communication check time	Set the time, in milliseconds, to define the interval at which communication is considered to be in an inactive state. As long as an I/O Driver receives valid data, its communication state is considered active. However, if during operation an I/O Driver does not receive valid data inside this period of time, the state is considered inactive. The communication state is shown in the IO.CommunicationStatus Tag
Start driver OFFLINE	Select this option so that a Driver starts in Offline mode or stopped. This means that the I/O interface is not created until this Driver is configured to Online mode by using a Tag in an application. This mode enables a dynamic configuration of an I/O interface at run time

Options on the Connection management group

OPTION	DESCRIPTION
Mode	Selects a management mode of a connection. Selecting the Automatic option allows a Driver to manage the connection automatically, as specified in the next options. Selecting the Manual option allows an application to fully manage a connection
Retry failed connection every ... seconds	Select this option to enable a Driver's connection retry in a certain interval, in seconds. If the Give up after failed retries option is not selected, this Driver keeps retrying until a connection is performed, or until the application is stopped
Give up after ... failed retries	Enable this option to define a maximum number of connection retries. When the specified number of consecutive connection retries is reached, a Driver goes to the Offline mode, assuming that a hardware problem was detected. If a Driver establishes a successful connection, the number of unsuccessful retries is cleared. If this new connection is lost, then the retry counter starts at zero
Disconnect if non-responsive for ... seconds	Enable this option to force a Driver to disconnect if no byte was received by the I/O interface during the specified time-out, in seconds. This time-out must be greater than the time-out configured in the Timeout option

Options on the Logging Options group

OPTION	DESCRIPTION
Log to File	<p>Enable this option and configure the name of a file to write a log. Log files can be large, so use this option for short periods of time, only for testing and debugging purposes. If the %PROCESS% macro is used in the log file name, it is replaced by the identifier of the current process. This option is particularly useful when using several instances of the same Driver in Elipse E3, thus allowing each instance to generate a separate log file. For example, when configuring this option with value "c:\e3logs\drivers\sim_%PROCESS%.log", it generates a file named c:\e3logs\drivers\sim_00000FDA.log for process OFDAh. Users can also use the %DATE% macro in the file name. In this case a log file is generated every day, in the format aaaa_mm_dd. For example, when configuring this option with value "c:\e3logs\drivers\sim_%DATE%.log", it generates a file named c:\e3logs\drivers\sim_2005_12_31.log in 12/31/2005 and a file named c:\e3logs\drivers\sim_2006_01_01.log in 01/01/2006. Similarly, the %DATE_HOUR% macro generates one log file per hour, in the format aaaa_mm_dd_hh</p>
File size limit (MB)	<p>Configure the log file size limit, in megabytes. A value equal to 0 (zero) means that there is no size limit for the log file</p>

Serial Tab

Use this tab to configure parameters for a **Serial** Interface.

Serial

Port:

Baud rate:

Data bits:

Parity:

Stop bits:

Enable 'ECHO' suppression

Handshaking

DTR control:

RTS control:

Wait for CTS before send

CTS timeout: ms

Delay before send: ms

Delay after send: ms

Inter-byte delay (microseconds): μ s

Inter-frame delay (milliseconds): ms

Serial tab

General options on the Serial tab

OPTION	DESCRIPTION
Port	Select a serial port on the list, from COM1 to COM4 , or type the name of a serial port in the format COMn , such as "COM15". When typing the name of a serial port manually, the dialog box only accepts names of serial ports starting with the expression "COM"
Baud rate	Select a baud rate on the list (1200, 2400, 4800, 9600, 19200, 38400, 57600, or 115200) or type a baud rate, such as 600
Data bits	Select 7 (seven) or 8 (eight) data bits on the list
Parity	Select a parity on the list. The available options are None, Even, Odd, Mark, or List
Stop bits	Select the number of stop bits on the list. The available options are 1, 1.5, or 2 stop bits
Enable 'ECHO' suppression	Enable this option to remove the echo received after the I/O Interface sends data via serial port. If this echo is not equal to the bytes just sent, then the I/O Interface aborts communication
Inter-byte delay (microseconds)	Defines a delay between each byte transmitted by the I/O Interface, in millionths of a second, that is, 1000000 is equal to a second. This option must be used with small delays of less than a millisecond
Inter-frame delay (milliseconds)	Defines a delay between packets sent or received by the I/O Interface, in thousandths of a second, that is, 1000 is equal to a second. This delay is applied if the I/O Interface

OPTION	DESCRIPTION
	sends two consecutive packets, or between a received packet and the next sending

The **Handshaking** group configures the usage of **RTS**, **CTS**, and **DTR** signals in the handshaking process, that is, it controls when data can be sent or received via serial line. Most of the time, configuring the **DTR control** option to **ON** and the **RTS control** option to **Toggle** works with **RS232**-type serial lines as well as with **RS485**-type serial lines.

Available options on the Handshaking group

OPTION	DESCRIPTION
DTR control	Select the value ON to keep the DTR signal always on while the serial port is open. Select the value OFF to turn the DTR signal off while the serial port is open. Some devices require the DTR signal always on to allow communication
RTS control	Select the value ON to keep the RTS signal always on while the serial port is open. Select the value OFF to turn the RTS signal off while the serial port is open. Select the value Toggle to turn the RTS signal on while sending bytes via serial port and turn it off when not sending bytes, therefore enabling the reception
Wait for CTS before send	Available only when the RTS control option is configured with the value Toggle . Use this option to force a Driver to check the CTS signal before sending bytes via serial port, after turning the RTS signal on. In this mode, the CTS signal is handled as a permission flag for sending
CTS timeout	Determines a maximum time, in milliseconds, that a Driver waits for the CTS signal after turning the RTS signal on. If the CTS signal is not turned on within this time-out, that Driver then fails the current communication and returns an error
Delay before send	Some serial port devices have a delay when enabling a data sending circuit after the RTS signal is turned on. Configure this option to wait a certain number of milliseconds after turning the RTS signal on and before sending the first byte. IMPORTANT : This delay must be used carefully, because it uses 100% of CPU resources while waiting. System's general performance degrades as this value increases
Delay after send	This is the same effect of the Delay before send option, but in this case the delay is performed after sending the last byte, before turning the RTS signal off

Ethernet Tab

Use this tab to configure parameters of an **Ethernet** Interface. These parameters, except port configurations, must also be configured for use in the **RAS** Interface.

Ethernet

Transport: TCP/IP ▼

PING before connecting
 Timeout: 4000 ms
 Retries: 1

Listen for connections on port: 0
 Share listen port with other processes
 Interface: (All Interfaces) ▼
 Use IPv6 Use SSL SSL Settings
 Enable 'ECHO' supression
 IP Filter:

Connect to

<input type="checkbox"/> Main IP:	<input style="width: 90%;" type="text"/>	Port:	502	<input type="checkbox"/> Local port:	0
<input type="checkbox"/> Backup IP 1:	<input style="width: 90%;" type="text"/>	Port:	0	<input type="checkbox"/> Local port:	0
<input type="checkbox"/> Backup IP 2:	<input style="width: 90%;" type="text"/>	Port:	0	<input type="checkbox"/> Local port:	0
<input type="checkbox"/> Backup IP 3:	<input style="width: 90%;" type="text"/>	Port:	0	<input type="checkbox"/> Local port:	0

Ethernet tab

Available options on the Ethernet tab

OPTION	DESCRIPTION
Transport	Select the value TCP/IP for a TCP socket (<i>stream</i>) or select the value UDP/IP to use a UDP socket (<i>connectionless datagram</i>)
Listen for connections on port	Use this option to wait for new connections in a specific IP port, common in Slave Drivers. If this option remains unselected, a Driver connects to the address and port specified in the Connect to option
Share listen port with other processes	Select this option to share the listening port with other Drivers and processes
Interface	Select the local network interface, identified by its IP address, that a Driver uses to establish and receive connections, or select the value (All Interfaces) to allow connection in any network interface
Use IPv6	Select this option to force a Driver to use addresses in IPv6 format on all Ethernet connections. Leave this option deselected to use the IPv4 format
Enable 'ECHO' supression	Enable this option to remove the echo from received data. An echo is a copy of sent data, which can be returned before a reply message
IP Filter	List of restricted or allowed IP addresses from where a Driver accepts connections (<i>Firewall</i>). Please check the IO.Ethernet.IPFilter property for more information
PING before connecting	Enable this option to execute a ping command, that is, to check whether a device can be reached on a network, for a device before trying a socket connection. This is a quick way

OPTION	DESCRIPTION
	<p>of determining a successful connection before trying to open a socket with a device. The time-out of a connection with a socket can be very high. The available options are:</p> <ul style="list-style-type: none"> • Timeout: Specify the number of milliseconds to wait for a reply from a ping command. Users must use a ping command to check the normal reply time, configuring this option for a value above that average. Usually this value can be configured between 1000 and 4000 milliseconds, that is, between 1 (one) and 4 (four) seconds • Retries: Number of retries of a ping command, not counting the first attempt. If all attempts fail, then the socket connection is aborted

Available options on the Connect to group

OPTION	DESCRIPTION
Main IP	Type the IP address of a remote device. Users can use an IP address separated by dots, as well as a URL. In case of a URL, a Driver uses the available DNS service to map that URL to an IP address, such as "192.168.0.13" or "Server1"
Port	Type the IP port of a remote device, between 0 (zero) and 65535
Local port	Select this option to use a fixed local IP port when connecting to a remote device
Backup IP 1, 2, and 3	Indicate the IP address, the IP port, and the fixed local IP port of up to 3 (three) backup addresses of a remote device

Modem Tab

Use this tab to configure parameters of a **Modem** Interface. Some options on the **Serial** tab affect the configuration of a modem, therefore users must also configure the **Serial** Interface.

Modem

Select the modem to use:

▼ Modem settings...

Dial Number:

Accept incoming calls

Modem tab

The **Modem** Interface uses the TAPI modems installed on the computer.

Available options on the Modem tab

OPTION	DESCRIPTION
Select the modem to use	Select a modem on the list of available modems on the computer. If the value Default modem is selected, then the first available modem is used. Selecting this option is recommended specially when an application is used on another computer
Modem settings	Click to open the configuration window of the selected modem
Dial Number	Type a default number for dialing. This value can be changed at run time. Users can use the w character to represent a pause or a waiting time for a dial tone. For example, "0w33313456" dials the number 0 (zero), waits, and then dials the number "33313456"
Accept incoming calls	Enable this option so that a Driver answers the phone when receiving an external call. To use this option, users must configure the Connection management option on the Setup tab to the value Manual

RAS Tab

Use this tab configure parameters of a **RAS** Interface. Users must also configure the **Ethernet** tab.

A **RAS** Interface opens a socket connection with a RAS device. A RAS device is a server of modems available through TCP/IP, waiting for socket connections on an IP port. For each connection accepted on this port, users have access to one modem.

When connecting to a RAS device, first the I/O Interface **IOKit** connects to the socket on the IP address and port configured on the **Ethernet** tab. After opening the socket, the following initialization or connection steps are performed:

1. Clears the socket, that is, removes any **TELNET** greeting message received from a RAS device.
2. Sends an **AT** dial message, in **ASCII** format, in the socket.
3. Waits for a **CONNECT** reply.
4. If the time-out expires, the connection is aborted.
5. If the **CONNECT** reply is received within the time-out, the socket is available for communication with a device, that is, the connection was established.

If step 5 (five) is successful, then the socket behaves as a normal socket, with the RAS device working as a router between a Driver and the device. Bytes sent by a Driver are received by the RAS device and sent to the destination device using a modem. Bytes received by the modem's RAS device are sent back to a Driver using the same socket.

After establishing a connection, the **RAS** interface monitors data received by a Driver. If a "NO CARRIER" **String** is found, the socket is closed. If the RAS device does not send a **NO CARRIER** signal, the **RAS** Interface cannot detect when the modem connection between the RAS device and the final I/O device fails. To recover from this failure, users are strongly advised to enable the **Disconnect if non-responsive** option on the **Setup** tab.

RAS

AT command:

Connection timeout: seconds

Other socket settings should be configured in the "Ethernet" tab!

RAS tab

Available options on RAS tab

OPTION	DESCRIPTION
AT command	A String with the full AT command used to dial to a destination device. For example, "ATDT33313456" dials by tone to number "33313456"
Connection timeout	Number of seconds to wait for a modem's CONNECT reply, after sending an AT command

General Configurations

This section contains information about the configuration of general **I/O Tags** and **Properties** of I/O Interfaces.

I/O Tags

General I/O Interfaces Tags (N2/B2 = 0)

The Tags described next are provided for all supported I/O Interfaces.

IO.CommunicationStatus

Type of Tag	I/O Tag
Type of Access	Reading
N1 Parameter	-1 (minus one)
N2 Parameter	0 (zero)
N3 Parameter	0 (zero)
N4 Parameter	6 (six)
String Configuration	IO.CommunicationStatus

This Tag informs the communication status of a Driver. It indicates how communication works relative to receiving valid data within a time period arbitrated in the configuration. For more information, please check topic **Setup Tab**. Possible values are **0 - Inactive communication**: The Driver did not receive valid data or stopped receiving data after *n* milliseconds, as configured in the properties window, or **1 - Active communication**: The Driver is receiving valid data.

IO.IOKitEvent

Type of Tag	Block Tag
Type of Access	Read-Only
B1 Parameter	-1 (minus one)
B2 Parameter	0 (zero)
B3 Parameter	0 (zero)
B4 Parameter	1 (one)
Size Property	4 (four)
ParamItem Property	IO.IOKitEvent

This Block returns Driver events generated by several sources in I/O Interfaces. The **TimeStamp** property of this Block represents the moment this event occurred. The Block Elements are the following:

- **Element 0**: Type of event. Possible values are **0**: Information, **1**: Warning, or **2**: Error
- **Element 1**: Source of an event. Possible values are **0**: Driver (specific of a Driver), **-1**: IOKit (generic events of I/O Interfaces), **-2**: **Serial** Interface, **-3**: **Modem** Interface, **-4**: **Ethernet** Interface, or **-5**: **RAS** Interface
- **Element 2**: Error number, specific for each source of event

- **Element 3:** Message of an event, a **String** specific for each event

NOTE

A Driver keeps a maximum number of 100 events internally. If additional events are reported, older events are discarded.

IO.PhysicalLayerStatus

Type of Tag	I/O Tag
Type of Access	Read-Only
N1 Parameter	-1 (minus one)
N2 Parameter	0 (zero)
N3 Parameter	0 (zero)
N4 Parameter	2 (two)
String Configuration	IO.PhysicalLayerStatus

This Tag indicates the status of a physical layer. Possible values are the following:

- **0:** Physical layer stopped, that is, a Driver is in **Offline** mode, the physical layer failed when initializing, or exceeded the maximum number of reconnection attempts
- **1:** Physical layer started but not connected, that is, a Driver is in **Online** mode but the physical layer is not connected. If the **Connection management** option is configured with the value **Automatic**, the physical layer can be connecting, disconnecting, or waiting for a reconnection attempt. If the **Connection management** option is configured with the value **Manual**, then the physical layer remains in this status until forced to connect
- **2:** Physical layer connected, that is, the physical layer is ready for use. This **DOES NOT** mean a device is connected, only that the access layer is working

IO.SetConfigurationParameters

Type of Tag	Block Tag
Type of Access	Read-Only
B1 Parameter	-1 (minus one)
B2 Parameter	0 (zero)
B3 Parameter	0 (zero)
B4 Parameter	3 (three)
Size Property	2 (two)
ParamItem Property	IO.SetConfigurationParameters

Use this Tag to change any property of a Driver's configuration dialog box at run time.

This Tag works only while a Driver is in **Offline** mode. To start a Driver in **Offline** mode, select the **Start driver OFFLINE** option on that Driver's configuration dialog box. Users can write to a PLC Tag or to a Block Tag containing the parameters to change. Writing individual Block Elements is not supported, the whole Block must be written at once.

In **Elipse SCADA**, users must use a Block Tag. Every parameter to configure uses two Block Elements. For example, if users want to configure 3 (three) parameters, then the size of the Block must be 6 (six, 3×2). The first Element is the property's name, as a **String**, and the second Element is the property's value, according to the next example.

```
// 'Block' must be a Block Tag with automatic reading,
// scan reading, and automatic writings disabled.
// Configure all parameters
Block.element001 = "IO.Type" // Parameter 1
Block.element002 = "Serial"
Block.element003 = "IO.Serial.Port" // Parameter 2
Block.element004 = 1
Block.element005 = "IO.Serial.BaudRate" // Parameter 3
Block.element006 = 19200
// Writes the whole Block
Block.Write()
```

When using **Elipse E3**, the ability to create arrays at run time allows using an I/O Tag as well as a Block Tag. Users can use the **Write** method of a Driver to send the parameters directly to that Driver, without creating a Tag, according to the next example.

```
Dim arr(6)
' Configure all array elements
arr(1) = "IO.Type"
arr(2) = "Serial"
arr(3) = "IO.Serial.Port"
arr(4) = 1
arr(5) = "IO.Serial.BaudRate"
arr(6) = 19200
' There are two methods to send parameters
' Method 1: Using an I/O Tag
tag.WriteEx arr
' Method 2: Without using a Tag
Driver.Write -1, 0, 0, 3, arr
```

A variation of the previous example uses a bidimensional array.

```
Dim arr(10)
' Configure all array elements. Notice the array was resized
' to 10 elements. Empty array elements are ignored by a Driver
arr(1) = Array("IO.Type", "Serial")
arr(2) = Array("IO.Serial.Port", 1)
arr(3) = Array("IO.Serial.BaudRate", 19200)
Driver.Write -1, 0, 0, 3, arr
```

A Driver does not validate parameter names or passed values, therefore be careful when writing parameters and values. The **Write** method fails if the configuration array is incorrectly created. Users can check the log of a Driver or use the *writeStatus* parameter of the **WriteEx** method to find out the exact cause of an error.

```
Dim arr(10), strError
arr(1) = Array("IO.Type", "Serial")
arr(2) = Array("IO.Serial.Port", 1)
arr(3) = Array("IO.Serial.BaudRate", 19200)
If Not Driver.WriteEx -1, 0, 0, 3, arr, , , strError Then
    MsgBox "Failed configuring Driver parameters: " + strError
End If
```

IO.WorkOnline

Type of Tag	I/O Tag
Type of Access	Reading or Writing
N1 Parameter	-1 (minus one)
N2 Parameter	0 (zero)
N3 Parameter	0 (zero)
N4 Parameter	4 (four)
String Configuration	IO.WorkOnline

This Tag informs the current status of a Driver and allows starting or stopping the physical layer. Possible values are the following:

- **0 - Driver Offline:** Physical layer is closed or stopped. This mode allows a dynamic configuration of a Driver's parameters using the **IO.SetConfigurationParameters** Tag
- **1 - Driver Online:** Physical layer is open or executing. While in **Online** mode, the physical layer can be connected or disconnected and its current status can be checked using the **IO.PhysicalLayerStatus** Tag

In the next example, using **Elipse E3**, a Driver is configured to **Offline** mode, its COM port is changed, and then configured to **Online** mode again.

```
'Configure to Offline mode
Driver.Write -1, 0, 0, 4, 0
'Change port to COM2
Driver.Write -1, 0, 0, 3, Array("IO.Serial.Port", 2)
'Configure to Online mode
Driver.Write -1, 0, 0, 4, 1
```

The **Write** method may fail when configuring a Driver to **Online** mode, that is, writing the value 1 (one). In this case, this Driver remains in **Offline** mode. The cause of failure can be:

- Type of physical layer incorrectly configured, probably an invalid value was configured in the **IO.Type** property
- This Driver may have run out of memory
- Physical layer probably did not create its working thread. Search the log file for a message "Failed to create physical layer thread!"
- Physical layer could not start. The cause of this failure depends on the type of physical layer. It can be an invalid serial port number, a failure when starting Windows Sockets, or a failure when starting TAPI (modem), among others. This cause is recorded on the log file

IMPORTANT

Even if the configuration of a Driver to **Online** mode is successful, this does not necessarily mean the physical layer is ready to use, that is, ready to execute input and output operations with an external device. The **IO.PhysicalLayerStatus** Tag must be checked to ensure the physical layer is connected and ready for communication.

Properties

These are general properties of all supported I/O Interfaces.

IO.ConnectionMode

9 Controls the management mode of a Connection. Possible values are **0**: Automatic mode, in which a Driver manages the connection or **1**: Manual mode, in which an application manages the connection.

IO.GiveUpEnable

☑ When configured to True, defines a maximum number of reconnection attempts. If all reconnection attempts fail, a Driver enters the **Offline** mode. When configured to False, a Driver tries until a reconnection is successful.

IO.GiveUpTries

9 Number of reconnection attempts before this one is aborted. For example, if the value of this property is equal to 1 (one), a Driver tries only one reconnection when the connection is lost. If this one fails, this Driver enters the **Offline** mode.

IO.InactivityEnable

☑ Configure to True to enable and to False to disable inactivity detection. The physical layer is disconnected if inactive for a certain period of time. The physical layer is considered inactive only if it is capable of sending data but not capable of receiving it back.

IO.InactivityPeriodSec

9 Number of seconds to check for inactivity. If the physical layer is inactive for this period of time, it is then disconnected.

IO.RecoverEnable

☑ Configure to True to enable a Driver to recover lost connections and to False to leave a Driver in **Offline** mode when a connection is lost.

IO.RecoverPeriodSec

9 Delay time between two connection attempts, in seconds.

NOTE

The first reconnection is executed immediately after a connection is lost.

IO.StartOffline

☑ Configure to True to start a Driver in **Offline** mode and to False to start a Driver in **Online** mode.


NOTE

It is pointless to change this property at run time, as it can only be changed when a Driver is already in **Offline** mode. To configure a Driver in **Online** mode at run time, write the value 1 (one) to the **IO.WorkOnline** Tag.

IO.TimeoutMs

9 Defines a time-out for the physical layer, in milliseconds. One second is equal to 1000 milliseconds.

IO.Type

 Defines the type of physical interface used by a Driver. Possible values are the following:

- **N or None:** Does not use a physical interface, that is, a Driver must provide a customized interface
- **S or Serial:** Uses a local serial port (COM n)
- **M or Modem:** Uses a local modem, internal or external, accessed via TAPI (*Telephony Application Programming Interface*)
- **E or Ethernet:** Uses a TCP/IP or UDP/IP socket
- **R or RAS:** Uses a **RAS** (*Remote Access Server*) Interface. A Driver connects to a RAS device using the **Ethernet** Interface and then sends an **AT** (*dial*) command

Statistical Configuration

This section contains information about the configuration of **I/O Tags** and **Properties** of I/O Interfaces statistics.

I/O Tags

Tags of I/O Interface Statistics (N2/B2 = 0)

The Tags described next display statistics for all I/O Interfaces.

IO.Stats.Partial.BytesRecv

Type of Tag	I/O Tag
Type of Access	Read-Only
N1 Parameter	-1 (minus one)
N2 Parameter	0 (zero)
N3 Parameter	0 (zero)
N4 Parameter	1101
Configuration by String	IO.Stats.Partial.BytesRecv

This Tag returns the number of bytes received in the current connection.

IO.Stats.Partial.BytesSent

Type of Tag	I/O Tag
Type of Access	Read-Only
N1 Parameter	-1 (minus one)
N2 Parameter	0 (zero)
N3 Parameter	0 (zero)
N4 Parameter	1100
Configuration by String	IO.Stats.Partial.BytesSent

This Tag returns the number of bytes sent through the current connection.

IO.Stats.Partial.TimeConnectedSeconds

Type of Tag	I/O Tag
Type of Access	Read-Only
N1 Parameter	-1 (minus one)
N2 Parameter	0 (zero)
N3 Parameter	0 (zero)
N4 Parameter	1102
Configuration by String	IO.Stats.Partial.TimeConnectedSeconds

This Tag returns the number of seconds a Driver is connected in the current connection or 0 (zero) if a Driver is disconnected.

IO.Stats.Partial.TimeDisconnectedSeconds

Type of Tag	I/O Tag
Type of Access	Read-Only
N1 Parameter	-1 (minus one)
N2 Parameter	0 (zero)
N3 Parameter	0 (zero)
N4 Parameter	1103
Configuration by String	IO.Stats.Partial.TimeDisconnectedSeconds

This Tag returns the number of seconds a Driver is disconnected since the last connection ended or 0 (zero) if a Driver is connected.

IO.Stats.Total.BytesRecv

Type of Tag	I/O Tag
Type of Access	Read-Only
N1 Parameter	-1 (minus one)
N2 Parameter	0 (zero)
N3 Parameter	0 (zero)
N4 Parameter	1001
Configuration by String	IO.Stats.Total.BytesRecv

This Tag returns the number of bytes received since a Driver was loaded.

IO.Stats.Total.BytesSent

Type of Tag	I/O Tag
Type of Access	Read-Only
N1 Parameter	-1 (minus one)
N2 Parameter	0 (zero)
N3 Parameter	0 (zero)
N4 Parameter	1000
Configuration by String	IO.Stats.Total.BytesSent

This Tag returns the number of bytes sent since a Driver was loaded.

IO.Stats.Total.ConnectionCount

Type of Tag	I/O Tag
Type of Access	Read-Only
N1 Parameter	-1 (minus one)
N2 Parameter	0 (zero)
N3 Parameter	0 (zero)
N4 Parameter	1004
Configuration by String	IO.Stats.Total.ConnectionCount

This Tag returns the number of connections a Driver already established, successfully, since it was loaded.

IO.Stats.Total.TimeConnectedSeconds

Type of Tag	I/O Tag
Type of Access	Read-Only
N1 Parameter	-1 (minus one)
N2 Parameter	0 (zero)
N3 Parameter	0 (zero)
N4 Parameter	1002
Configuration by String	IO.Stats.Total.TimeConnectedSeconds

This Tag returns the number of seconds a Driver remained connected since it was loaded.

IO.Stats.Total.TimeDisconnectedSeconds

Type of Tag	I/O Tag
Type of Access	Read-Only
N1 Parameter	-1 (minus one)
N2 Parameter	0 (zero)
N3 Parameter	0 (zero)
N4 Parameter	1003
Configuration by String	IO.Stats.Total.TimeDisconnectedSeconds

This Tag returns the number of seconds a Driver remained disconnected since it was loaded.

Properties

Currently, there are no properties defined specifically to display I/O Interface statistics at run time.

Serial Interface Configuration

This section contains information about the configuration of **I/O Tags** and **Properties** of a **Serial** Interface.

I/O Tags

Tags of a Serial Interface (N2/B2 = 2)

Currently, there are no Tags defined specifically to manage a **Serial** Interface at run time.

Properties

These properties control the configuration of a **Serial** Interface.

IO.Serial.Baudrate

9 Specifies a baud rate of a serial port, such as 9600.

IO.Serial.CTSTimeoutMs

9 Time to wait for a **CTS** signal, in milliseconds. After turning the **RTS** signal on, a timer is started to wait for a **CTS** signal. If this timer expires, a Driver aborts sending bytes through the serial port. Available only when the **IO.Serial.RTS** property is configured with the value **Toggle** and the **IO.Serial.WaitCTS** property is configured to True.

IO.Serial.DataBits

9 Specifies the number of data bits to configure a serial port. Possible values are **5**: Five data bits, **6**: Six data bits, **7**: Seven data bits, or **8**: Eight data bits.

IO.Serial.DelayAfterMs

9 Number of milliseconds to delay after the last byte is sent through a serial port, but before turning the **RTS** signal off. Available only when the **IO.Serial.RTS** property is configured with the value **Toggle** and the **IO.Serial.WaitCTS** property is configured to False.

IO.Serial.DelayBeforeMs

9 Number of milliseconds to delay after turning the **RTS** signal on, but before data is sent. Available only when the **IO.Serial.RTS** property is configured with the value **Toggle** and the **IO.Serial.WaitCTS** property is configured to False.

IO.Serial.DTR

A Indicates how a Driver deals with the **DTR** signal. Possible values are **OFF**: **DTR** signal is always turned off or **ON**: **DTR** signal is always turned on.

IO.Serial.InterbyteDelayUs

9 Delay time, in milliseconds (1/1000000 of a second), for each two bytes sent through a **Serial** Interface.

IO.Serial.InterframeDelayMs

9 Delay time, in milliseconds, before sending a packet after the last packet sent or received.

IO.Serial.Parity

A Specifies a parity for the configuration of a serial port. Possible values are **E or Even**: Even parity, **N or None**: No parity, **O or Odd**: Odd parity, **M or Mark**: Mark parity, or **S or Space**: Space parity.

IO.Serial.Port

9 Number of the local serial port. Possible values are **1**: Uses the COM1 port, **2**: Uses the COM2 port, **3**: Uses the COM3 port, or **n**: Uses the COMn port.

IO.Serial.RTS

A Indicates how a Driver deals with the **RTS** signal. Possible values are **OFF**: **RTS** signal always off, **ON**: **RTS** signal always on, or **Toggle**: Turns the **RTS** signal on when transmitting data and turns the **RTS** signal off when not transmitting data.

IO.Serial.StopBits

9 Specifies the number of stop bits for the configuration of a serial port. Possible values are **1**: One stop bit, **2**: One and a half stop bit, or **3**: Two stop bits.

IO.Serial.SuppressEcho

9 Use a value different from 0 (zero) to enable suppressing the echo or 0 (zero) to disable it.

IO.Serial.WaitCTS

Configure to True to force a Driver to wait for the **CTS** signal before sending bytes when the **RTS** signal is turned on. Available only when the **IO.Serial.RTS** property is configured with the value **Toggle**.

Ethernet Interface Configuration

This section contains information about the configuration of **I/O Tags** and **Properties** of an **Ethernet** Interface.

I/O Tags

Tags of an Ethernet Interface (N2/B2 = 4)

The Tags described next allow controlling and identifying an **Ethernet** Interface at run time and they are also valid when the **RAS** Interface is selected.

IMPORTANT

These Tags are available **ONLY** while a Driver is in **Online** mode.

IO.Ethernet.IPSelect

Type of Tag	I/O Tag
Type of Access	Reading or Writing
N1 Parameter	-1 (minus one)
N2 Parameter	0 (zero)
N3 Parameter	4 (four)
N4 Parameter	0 (zero)
String Configuration	IO.Ethernet.IPSelect

Indicates the active IP address. Possible values are **0**: The main IP address is selected, **1**: The first alternative or backup IP address is selected, **2**: The second alternative or backup IP address is selected, or **3**: The third alternative or backup IP address is selected.

If the **Ethernet** or **RAS** Interface is connected, this Tag indicates which one of the four configured IP addresses is in use. If the Interface is disconnected, this Tag indicates which IP address is used first on the next attempt to connect.

During the connection process, if the active IP address is not available, the I/O Interface tries to connect using the other IP address. If the connection with the alternative IP address works, it is configured as the active IP address (automatic switchover).

To force a manual switchover, write values from 0 (zero) to 3 (three) to this Tag. This forces a reconnection with the specified IP address (**0**: Main address or **1, 2, 3**: Alternative address) if a Driver is currently connected. If a Driver is disconnected, this Tag configures the active IP address for the next attempt to connect.

IO.Ethernet.IPSwitch

Type of Tag	I/O Tag
Type of Access	Write-Only
N1 Parameter	-1 (minus one)
N2 Parameter	0 (zero)
N3 Parameter	4 (four)
N4 Parameter	1 (one)
String Configuration	IO.Ethernet.IPSwitch

Any value written to this Tag forces a manual switchover. If the main IP address is active, then the first alternative or backup IP address is activated, and so on for all alternative IP addresses and returning to the main address until a connection is established.

If a Driver is disconnected, this Tag configures the active IP address for the next attempt to connect.

IO.Ethernet.SocketState

Type of Tag	I/O Tag
Type of Access	Read-Only
N1 Parameter	-1 (minus one)
N2 Parameter	0 (zero)
N3 Parameter	4 (four)
N4 Parameter	2 (two)
String Configuration	IO.Ethernet.SocketState

The Value property of this Tag corresponds to socket states as a map of bits:

- **Bit 0:** 0 (zero, not listening) or 1 (one, listening)
- **Bit 1:** 0 (zero, disconnected) or 1 (one, connected)

Properties

These properties control the configuration of an **Ethernet** Interface.

NOTE

The **Ethernet** Interface is also used by the **RAS** Interface.

IO.Ethernet.AcceptConnection

Configure to False if a Driver must not accept external connections, that is, if a Driver behaves as a master, or configure to True to enable the reception of connections, that is, if a Driver behaves as a slave.

IO.Ethernet.BackupEnable[2,3]

Configure to True to enable an alternative or backup IP address. If the reconnection attempt with the main IP address fails, a Driver tries to use an alternative IP address. Configure to False to disable its usage.

IO.Ethernet.BackupIP[2,3]

A Alternative or backup IP address of a remote device. Users can use a numerical address, as well as a device's host name, such as "192.168.0.7" or "SERVER2".

IO.Ethernet.BackupLocalPort[2,3]

9 Local port number to be used when connecting to an alternative IP address of a remote device. Used only if **IO.Ethernet.BackupLocalPortEnable** is equal to True.

IO.Ethernet.BackupLocalPortEnable[2,3]

Configure to True to force the use of a specific local port when connecting to an alternative or backup IP address or configure to False to use any available local port.

IO.Ethernet.BackupPort[2,3]

9 Port number of an alternative or backup IP address of a remote device, used with the **IO.Ethernet.BackupIP** property.

IO.Ethernet.IPFilter

A List with a comma-separated IPv4 or IPv6 addresses, which defines from which addresses a Driver accepts or blocks connections. Users can use asterisks, such as "192.168.*.*", or intervals, such as "192.168.0.41-50", in any part of IP addresses. To block an IP address or a range of IP addresses, use the tilde ("~") character at the beginning of the address, according to the next examples:

- **192.168.0.24**: Accepts only connections from IPv4 address 192.168.0.24
- **192.168.0.41-50**: Accepts connections from IPv4 addresses in the interval between 192.168.0.41 and 192.168.0.50
- **192.168.0.***: Accepts connections from IPv4 addresses in the interval between 192.168.0.0 and 192.168.0.255
- **fe80:3bf:877::*:*** (**expands to fe80:03bf:0877:0000:0000:0000:0000:0000:***): Accepts connections from IPv6 addresses in the interval between fe80:03bf:0877:0000:0000:0000:0000:0000 and fe80:03bf:0877:0000:0000:0000:ffff:ffff
- **192.168.0.10, 192.168.0.15, 192.168.0.20**: Accepts connections from IPv4 addresses 192.168.0.10, 192.168.0.15, and 192.168.0.20
- **~192.168.0.95, 192.168.0.***: Accepts connections from IPv4 addresses in the interval between 192.168.0.0 and 192.168.0.255, except the IPv4 address 192.168.0.95

When a Driver receives a connection attempt, the list of filters is scanned sequentially from left to right, searching for a specific authorization or block for the IP address where the connection comes from. If no element on the list corresponds to the IP address, the authorization or block are dictated by the last element of that list:

- If the last element on the list is an authorization, such as "192.168.0.24", then all IP addresses not found on the list are blocked
- If the last element on the list is a block, such as "~192.168.0.24", then all IP addresses not found on the list are authorized

If an IP address appears on more than one filter on the list, the leftmost filter has precedence. For example, in case of "~192.168.0.95, 192.168.0.*", the IP address 192.168.0.95 fits both rules, but the rule that wins is the leftmost one, "~192.168.0.95", and therefore this IP address is blocked.

When **IOKit** blocks a connection, it logs a message "Blocked incoming socket connection from {IP}!".

In case of UDP connections in broadcast listening mode, in which a Driver can receive packets from different IP addresses, blocks or permissions are performed at each packet received. If a packet is received from a blocked IP address, it logs a message "Blocked incoming packet from {IP} (discarding {N} bytes)!".

IO.Ethernet.ListenIP

A IP address of the local network interface that a Driver uses to establish and accept connections. Leave this property empty to establish and accepts connections using any local network interface.

IO.Ethernet.ListenPort

9 Number of the IP port used by a Driver to listen to connections.

IO.Ethernet.MainIP

A IP address of a remote device. Users can use a numerical address, as well as a device's host name, such as "192.168.0.7" or "SERVER2".

IO.Ethernet.MainLocalPort

9 Local port number to use when connecting to the main IP address of a remote device. This value is only used if the **IO.Ethernet.MainLocalPortEnable** property is equal to True.

IO.Ethernet.MainLocalPortEnable

Configure to True to force the use of a specific local port when connecting to the main IP address of a remote device or configure to False to use any available local port.

IO.Ethernet.MainPort

9 Number of the IP port of a remote device, used with the **IO.Ethernet.MainIP** property.

IO.Ethernet.PingEnable

Configure to True to enable sending a **ping** command to the IP address of a remote device, before trying to connect to the socket. This socket's connection time-out cannot be controlled, therefore sending a **ping** command before connecting is a fast way to detect if the connection is going to fail. Configure to False to disable a **ping** command.

IO.Ethernet.PingTimeoutMs

9 Delay time to wait for a response from a **ping** command, in milliseconds.

IO.Ethernet.PingTries

9 Maximum number of attempts of a **ping** command. Minimum value is 1 (one), including the first **ping** command.

IO.Ethernet.ShareListenPort

Configure to True to share a listening port with other Drivers and processes or False to open a listening port in exclusive mode. To successfully share a listening port, all Drivers and processes that use that port must open it in shared mode. When a listening port is shared, each incoming connection is distributed to one of the processes listening. This way, if a Slave Driver only supports one connection at a time, users can use several instances of this Driver listening on the same port, therefore simulating a Driver with support for multiple connections.

IO.Ethernet.SupressEcho

Configure to True to eliminate echoes in communication. An echo is the unwanted reception of an exact copy of all data packets a Driver sent to a device.

IO.Ethernet.Transport

A Defines a transport protocol. Possible values are **T or TCP**: Uses the TCP/IP protocol or **U or UDP**: Uses the UDP/IP protocol.

IO.Ethernet.UseIPv6

Configure to True to use IPv6 addresses on all Ethernet connections or configure to False to use IPv4 addresses (default).

Modem Interface Configuration

This section contains information about the configuration of **I/O Tags** and **Properties** of a **Modem** (TAPI) Interface.

I/O Tags

Tags of a Modem Interface (N2/B2 = 3)

The Tags described next allow controlling and diagnosing a **Modem** (TAPI) Interface at run time.

IMPORTANT

These Tags are available **ONLY** while a Driver is in **Online** mode.

IO.TAPI.ConnectionBaudRate

Type of Tag	I/O Tag
Type of Access	Read-Only
N1 Parameter	-1 (minus one)
N2 Parameter	0 (zero)
N3 Parameter	3 (three)
N4 Parameter	5 (five)
String Configuration	IO.TAPI.ConnectionBaudRate

Indicates a baud rate value for the current connection. If a modem is not connected, returns the value 0 (zero).

IO.TAPI.Dial

Type of Tag	I/O Tag
Type of Access	Write-Only
N1 Parameter	-1 (minus one)
N2 Parameter	0 (zero)
N3 Parameter	3 (three)
N4 Parameter	1 (one)
String Configuration	IO.TAPI.Dial

Write any value to this Tag to force a **Modem** Interface to start a call. This is an asynchronous command, only starting the call process. Users can monitor the **IO.TAPI.IsModemConnected** Tag to detect when a call is established.

IO.TAPI.HangUp

Type of Tag	I/O Tag
Type of Access	Write-Only
N1 Parameter	-1 (minus one)
N2 Parameter	0 (zero)
N3 Parameter	3 (three)
N4 Parameter	4 (four)
String Configuration	IO.TAPI.HangUp

Any value written to this Tag hangs the current call up.

NOTE

Use this command only when managing the physical layer manually or when explicitly trying to force a Driver to restart the communication. If the physical layer is configured for automatic reconnection, a Driver immediately tries to reestablish the connection.

IO.TAPI.IsModemConnected

Type of Tag	I/O Tag
Type of Access	Read-Only
N1 Parameter	-1 (minus one)
N2 Parameter	0 (zero)
N3 Parameter	3 (three)
N4 Parameter	3 (three)
String Configuration	IO.TAPI.IsModemConnected

This Tag indicates the status of a modem connection. Possible values are **0**: The modem is not connected, but it may be performing or receiving an external call or **1**: The modem is connected and a Driver completed or received an external call successfully. While it is in this status, the physical layer can send or receive data.

IO.TAPI.IsModemConnecting

Type of Tag	I/O Tag
Type of Access	Read-Only
N1 Parameter	-1 (minus one)
N2 Parameter	0 (zero)
N3 Parameter	3 (three)
N4 Parameter	6 (six)
String Configuration	IO.TAPI.IsModemConnecting

This Tag indicates the status of a modem connection, with more details than the **IO.TAPI.IsModemConnected** Tag. Possible values are **0**: Modem is not connected, **1**: Modem is connecting, that is, performing or receiving an external call, **2**: Modem is connected. While in this status, the physical layer can send or receive data, or **3**: Modem is disconnecting the current call.

IO.TAPI.ModemStatus

Type of Tag	I/O Tag
Type of Access	Read-Only
N1 Parameter	-1 (minus one)
N2 Parameter	0 (zero)
N3 Parameter	3 (three)
N4 Parameter	2 (two)
String Configuration	IO.TAPI.ModemStatus

Returns a **String** with the current status of a modem. Possible values are the following:

- **"No status!"**: The **Modem** Interface was not open yet or was already closed
- **"Modem initialized OK!"**: The **Modem** Interface was initialized successfully
- **"Modem error at initialization!"**: A Driver could not initialize modem's line. Check that Driver's log file for more details
- **"Modem error at dial!"**: A Driver could not start or accept a call
- **"Connecting..."**: A Driver started a call successfully, and is currently processing that call
- **"Ringing..."**: Indicates that the modem is receiving an external call, but it did not accepted it yet
- **"Connected!"**: A Driver connected successfully, that is, completed or accepted an external call
- **"Disconnecting..."**: A Driver is turning the current call off
- **"Disconnected OK!"**: A Driver turned the current call off
- **"Error: no dial tone!"**: A Driver aborted a call because the available line signal was not detected
- **"Error: busy!"**: A Driver aborted a call because the line was busy
- **"Error: no answer!"**: A Driver aborted a call because no answer was received from the other modem
- **"Error: unknown!"**: Current call was aborted because of an unknown error

IO.TAPI.PhoneNumber

Type of Tag	I/O Tag
Type of Access	Reading or Writing
N1 Parameter	-1 (minus one)
N2 Parameter	0 (zero)
N3 Parameter	3 (three)
N4 Parameter	0 (zero)
String Configuration	IO.TAPI.PhoneNumber

This Tag is a **String** that reads or changes the telephone number used by the **IO.TAPI.Dial** Tag. When changing this Tag, the new value is used only on the next **Dial** command.

Properties

These properties control the configuration of a **Modem** (TAPI) Interface.

IO.TAPI.AcceptIncoming

9 Configure to False if a modem cannot accept external calls, that is, if a Driver behaves as a master, and configure to True to enable receiving calls, that is, if a Driver behaves as a slave.

IO.TAPI.ModemID

9 This is the identification number of a modem. This ID is created by Windows and used internally to identify a modem on a list of devices installed on a computer. This ID may not remain valid if a modem is reinstalled or an application is executed on another computer.

NOTE

It is advisable to configure this property as 0 (zero), indicating that a Driver must use the first available modem.

IO.TAPI.PhoneNumber

A A telephone number used by **Dial** commands, such as "0w01234566", in which the "w" character forces a modem to wait for a call sign.

RAS Interface Configuration

This section contains information about the configuration of **I/O Tags** and **Properties** of a **RAS** Interface.

I/O Tags

Tags of a RAS Interface (N2/B2 = 5)

Currently, there are no Tags defined specifically to manage a **RAS** Interface at run time.

Properties

These properties control the configuration of a **RAS** Interface.

NOTE

A **RAS** Interface uses the **Ethernet** Interface, which therefore must be also configured.

IO.RAS.ATCommand

A An **AT** command to send through a socket to force a RAS device to perform a call using the current RAS channel, such as "ATDT6265545".

IO.RAS.CommandTimeoutSec

9 Time to wait for a **CONNECT** message in response to an **AT** command, in seconds.

Driver Revision History

VERSION	DATE	AUTHOR	COMMENTS
1.0.24	09/02/2025	M. Ludwig	<ul style="list-style-type: none"> Driver updated to IOKit library version 3.0 and Visual Studio 2022 (<i>Case 38041</i>).
1.0.22	02/09/2018	A. Hertzog	<ul style="list-style-type: none"> Fixed the truncation of values on specific firmware versions.
1.0.20	05/16/2017	A. Hertzog	<ul style="list-style-type: none"> Initial version of this Driver.

Headquarters

**Rua Mostardeiro, 322/Cj. 902, 1001 e
1002**

90510-002 — Porto Alegre — RS

Phone: (+55 51) 3346-4699

Fax: (+55 51) 3222-6226

E-mail: elipse-rs@elipse.com.br

Branch in Taiwan

9F., No.12, Beiping 2nd St., Sanmin Dist.

807 — Kaohsiung City — Taiwan

Phone: (+886 7) 323-8468

Fax: (+886 7) 323-9656

E-mail: evan@elipse.com.br

Check our website for information about a representative in your country.

www.elipse.com.br

kb.elipse.com.br

forum.elipse.com.br

www.youtube.com/elipsesoftware

elipse@elipse.com.br



Gartner, Cool Vendors in Brazil 2014, April 2014.

Gartner does not endorse any vendor, product or service depicted in its research publications, and does not advise technology users to select only those vendors with the highest ratings. Gartner research publications consist of the opinions of Gartner's research organization and should not be construed as statements of fact. Gartner disclaims all warranties, expressed or implied, with respect to this research, including any warranties of merchantability of fitness for a particular purpose.

Microsoft Partner
Gold Independent Software Vendor (ISV)