

Siemens Prodave Driver

File Name	ProdaveDll.dll
Manufacturer	Siemens AG
Devices	S7-200, S7-300, and S7-400
Protocol	MPI and Industrial Ethernet
Version	2.0.5
Latest Update	05/15/2026
Platform	Win32
Dependencies	Prodave MPI/IE version 6.x
Superblock Readings	No
Level	0

Introduction

This Driver implements an interface with Siemens AG's Prodave MPI/IE version 6.x library for **Windows 7** or later, which allows **Eclipse Software** products to communicate with S7-200, S7-300, and S7-400 devices.

The Siemens Prodave Driver was developed using **Eclipse Software's IOKit** library. For more information, please check topic **Documentation of I/O Interfaces**.

NOTE

To use product **Siemens Prodave MPI version 5.6**, version **1.1** of this Driver is the compatible version with that product and the one that must be used.

Driver Requirements

For Siemens Prodave Driver to work correctly, users must first install Prodave MPI/IE version 6.x. After a successful installation, the dynamic library file Prodave6.dll must be located and accessible on Windows system folder. Siemens Prodave Driver connects directly to this library file.

Users must also define a communication interface on Windows Control Panel, on the **Setting the PG/PC interface** item. In this location there must be an Access Point named "S7ONLINE". For more information about installation and configuration of that interface, please check the manual corresponding to the product by Siemens AG.


Driver Configuration

The **[P]** configuration parameters of this Driver are not used. All settings are performed on the properties window of this Driver. On this window, the most relevant parameters on the **Setup** tab are:

- **Physical Layer:** Always select the value None, because the interface is provided by the Prodave library
- **Logging options - Log to File:** Name of a log file generated for debugging communication problems

For more information about the **Setup** tab, please check topic **Documentation of I/O Interfaces**.

The **Prodave** tab contains specific configurations for this Driver. Almost all these configurations are only relevant when configuring Tags by **[N/B]** parameters. These configurations are relative to the list of connections to declare. Therefore, when configuring Tags by symbolic addressing, this list of connections can be left blank. The exception is the **Use S5 addressing method** option, which must be considered regardless of the selected method of addressing.

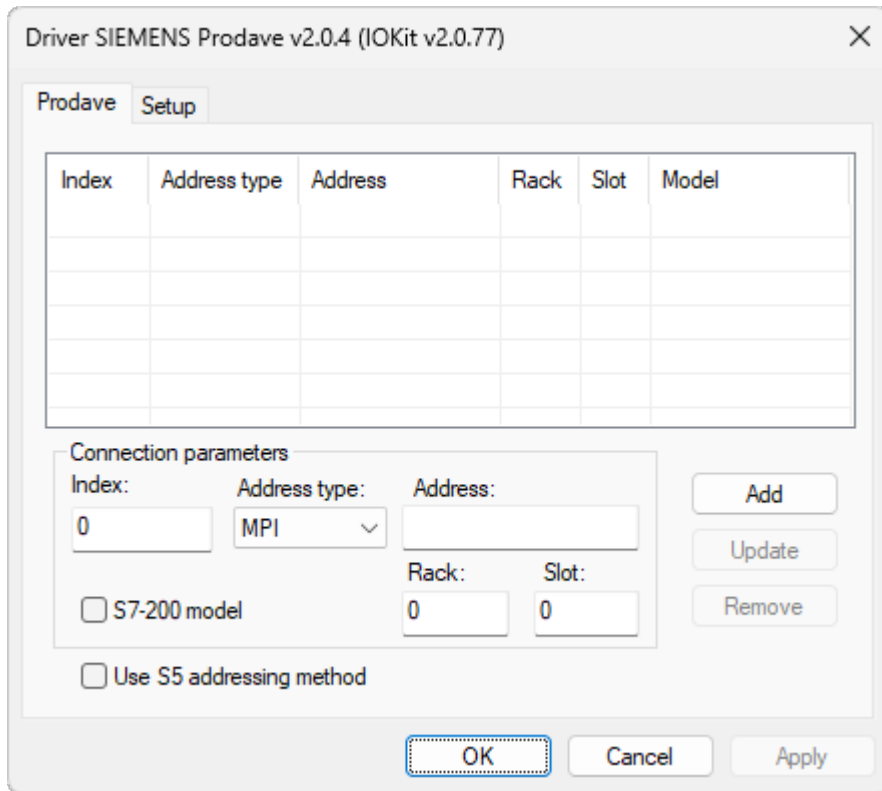

Prodave tab

All devices to communicate must be configured. To create a connection with a device, users must fill connection parameters and click **Add**. Connection parameters are described on the next table.

Configuration parameters of connections

PARAMETER	DESCRIPTION
Index	Index of a connection for use in the <i>N1</i> or <i>B1</i> parameter
Address type	Type of address. Possible values are MPI , IP , or MAC
Address	Address of a device
S7-200 model	Select this option to indicate devices from S7-200 model
Rack	Value of the rack of a device
Slot	Value of the slot of a device

The **Update** option reconfigures all parameters of the selected connection and the **Remove** option deletes the selected connection. The **Use S5 addressing method** option defines the addressing mode of data. If it is selected, addressing mode is **S5** and it addresses words sequentially, such as DW0, DW1, DW2, DW3, and so on. If it is not selected, addressing mode is **S7** and it addresses words by the address of the first byte, such as DW0, DW2, DW4, DW8, and so on.

Tag Reference

This section contains information about the configuration of Tags of this Driver. Tags can be configured by using **Addressing by [N/B] Parameters** or by using **Symbolic Addressing**.

Addressing by [N/B] Parameters

Reading and Writing

Use the next default syntax for all PLC and Block Tags.

Addressing Fields by [N/B] Parameters

- **N1 or B1:** Index of a connection on the list of connections defined on the **Prodave** tab
- **N2 or B2:** Area and data type. For more information, please check table **Configuration parameters**
- **N3 or B3:** DB number. If the selected area is not **DB**, leave it in 0 (zero)
- **N4 or B4:** DB address (offset) or area's absolute address

Configuration parameters

N2 OR B2	AREA AND DATA TYPE	S7-200	S7-300	S7-400
0	SINT -type DB (8-bit signed)		•	•
1	INT -type DB (16-bit signed)		•	•
2	DINT -type DB (32-bit signed)		•	•
3	BYTE -type DB (8-bit unsigned)		•	•
4	WORD -type DB (16-bit unsigned)		•	•
5	DWORD -type DB (32-bit unsigned)		•	•
6	REAL -type DB (32-bit floating point IEEE 754)		•	•
7	SINT -type Flag or Memory	•	•	•
8	INT -type Flag or Memory	•	•	•
9	DINT -type Flag or Memory	•	•	•
10	BYTE -type Flag or Memory	•	•	•
11	WORD -type Flag or Memory	•	•	•
12	DWORD -type Flag or Memory	•	•	•
13	REAL -type Flag or Memory	•	•	•

N2 OR B2	AREA AND DATA TYPE	S7-200	S7-300	S7-400
14	BYTE -type output	•	•	•
15	BYTE -type input	•	•	•
16	WORD -type timer	•	•	•
17	WORD -type counter	•	•	•
18	SINT -type Special Flag or Memory	•		
19	INT -type Special Flag or Memory	•		
20	DINT -type Special Flag or Memory	•		
21	BYTE -type Special Flag or Memory	•		
22	WORD -type Special Flag or Memory	•		
23	DWORD -type Special Flag or Memory	•		
24	REAL -type Special Flag or Memory	•		
25	SINT -type Variable Memory or Storage	•		
26	INT -type Variable Memory or Storage	•		
27	DINT -type Variable Memory or Storage	•		
28	BYTE -type Variable Memory or Storage	•		
29	WORD -type Variable Memory or Storage	•		
30	DWORD -type Variable Memory or Storage	•		
31	REAL -type Variable Memory or Storage	•		

NOTE

When using Block Tags, each Block Element corresponds to a multiple of an area position by data type, starting to count from the configured address.

Symbolic Addressing

Reading and Writing

Eclipse E3 starting with version **2.0**, **Eclipse Power**, and **Eclipse Water** allow configuring Tags by symbolic addressing. To do so, use the next syntax:

- The **Device** field must obey the syntax **[(<Model>)]<Address>[(<Rack>,<Slot>)]**:
 - **<Model>** is optional and, if used, it must use a literal **String** between parentheses, such as "S7-200", "S7-300", or "S7-400". Omitting the **<Model>** field considers it as any S7-300 or S7-400 model
 - **<Address>** must be filled with an address in **MPI, IP, or MAC** format
 - **<Rack>** and **<Slot>** are optional, must be between parentheses, and separated by a comma. Each one is the corresponding value of a device. Omitting these items consider these fields with a value equal to 0 (zero)

Examples

1. **MPI** address with a value 2 (two) with an S7-200 model: **Device** field filled with the value "(S7-200)2".
2. IP address 192.168.20.70 with an S7-400 model, Rack value equal to 0 (zero), and Slot value equal to 2 (two): **Device** field filled with the value "192.168.0.1(0,2)".

- The **Item** field, when addressing a DB area, must obey the syntax **<DB with type><DB number>:<Offset>**:
 - **<DB with type>** must be filled with one of the **Strings** on the table **Area Names with Data Types**
 - **<DB number>** must be filled with the number value of a DB
 - **<Offset>** must be filled with an offset value on a DB
- The **Item** field, when addressing a non-DB area, must obey the syntax **<Area name with type><Address>**:
 - **<Area name with type>** must be filled with one of the **Strings** on the table **Area Names with Data Types**
 - **<Address>** must be filled with an address on the respective area

Area Names with Data Types

AREA	AREA AND DATA TYPE	S7-200	S7-300	S7-400
DBSI	SINT -type DB (8-bit signed)		•	•
DBI	INT -type DB (16-bit signed)		•	•
DBDI	DINT -type DB (32-bit signed)		•	•
DBB	BYTE -type DB (8-bit unsigned)		•	•
DBW	WORD -type DB (16-bit unsigned)		•	•
DBD	DWORD -type DB (32-bit unsigned)		•	•
DBR	REAL -type DB (32-bit floating point IEEE 754)		•	•
MSI	SINT -type Flag or Memory	•	•	•

AREA	AREA AND DATA TYPE	S7-200	S7-300	S7-400
MI	INT -type Flag or Memory	•	•	•
MDI	DINT -type Flag or Memory	•	•	•
MB	BYTE -type Flag or Memory	•	•	•
MW	WORD -type Flag or Memory	•	•	•
MD	DWORD -type Flag or Memory	•	•	•
MR	REAL -type Flag or Memory	•	•	•
A or Q	BYTE -type output	•	•	•
E or I	BYTE -type input	•	•	•
T	WORD -type timer	•	•	•
Z or C	WORD -type counter	•	•	•
SSI	SINT -type Special Flag or Memory	•		
SI	INT -type Special Flag or Memory	•		
SDI	DINT -type Special Flag or Memory	•		
SB	BYTE -type Special Flag or Memory	•		
SW	WORD -type Special Flag or Memory	•		
SD	DWORD -type Special Flag or Memory	•		
SR	REAL -type Special Flag or Memory	•		
VSI	SINT -type Variable Memory or Storage	•		
VI	INT -type Variable Memory or Storage	•		
VDI	DINT -type Variable Memory or Storage	•		
VB	BYTE -type Variable Memory or Storage	•		
VW	WORD -type Variable Memory or Storage	•		
VD	DWORD -type Variable Memory or Storage	•		

AREA	AREA AND DATA TYPE	S7-200	S7-300	S7-400
VR	REAL-type Variable Memory or Storage	.		

Examples

1. Reading or writing a DB with number 10, a **WORD** data type, and an offset 4 (four): **Item** field filled with the value "DBW10:4".
2. Reading or writing an Output with address 10: **Item** field filled with the value "Q10".
3. Reading or writing a Special Memory with a **REAL** data type and address 16: **Item** field filled with the value "SR16".

NOTE

When using Block Tags, each Block Element corresponds to a multiple of an area position by data type, starting to count from the configured address.

Documentation of I/O Interfaces

This section contains the documentation of I/O Interfaces referring to **Prodave** Driver.

Configuration of a Driver

I/O Interface configuration is performed on a Driver's configuration dialog box. To access the configuration of this dialog box in **Eclipse E3** in version 1.0, follow these steps:

1. Right-click a Driver object (IODriver).
2. Select the **Properties** item on the contextual menu.
3. Select the **Driver** tab.
4. Click **Other parameters**.

In **Eclipse E3** version 2.0 or later, click **Configure driver**  on a Driver's toolbar. In **Eclipse SCADA**, follow these steps:

1. Open the Organizer.
2. Select a Driver on Organizer's tree.
3. Click **Extras** on the **Driver** tab.

Currently, an I/O Interface allows opening only one connection for each Driver. This means that, if users want to access two serial ports, they must add two Drivers to an application and then configure each one of these Drivers for each serial port.

Configuration Dialog Box

The dialog box of I/O Interfaces allows configuring the I/O connection used by a Driver. This dialog box contains the **Setup**, **Serial**, **Ethernet**, **Modem**, and **RAS** tabs, described on the next topics. If a Driver does not implement a specific I/O

connection, its corresponding tab is not available for configuration. Some Drivers may contain additional tabs, specific for that Driver, on the configuration dialog box.

Setup Tab

The **Setup** tab contains general configurations of a Driver. This tab is divided into the following groups:

- **General configurations:** Configurations of a Driver's physical layer, time-out, and initialization mode
- **Connection management:** Configurations on how the I/O Interface keeps a connection and which recovery policy is used on failure
- **Logging options:** Controls the generation of log files

Setup tab

General options on the Setup tab

OPTION	DESCRIPTION
Physical Layer	Select the physical layer on a list. Available options are Serial , Ethernet , Modem , and RAS . The selected interface must be configured on its specific tab
Timeout	Configure a time-out, in milliseconds, for the physical layer. This is the amount of time an I/O interface waits to receive any byte from the reception's buffer
Communication check time	Set the time, in milliseconds, to define the interval at which communication is considered to be in an inactive state. As long as an I/O Driver receives valid data, its communication state is considered active. However, if during operation an

OPTION	DESCRIPTION
	I/O Driver does not receive valid data inside this period of time, the state is considered inactive. The communication state is shown in the IO.CommunicationStatus Tag
Start driver OFFLINE	Select this option so that a Driver starts in Offline mode or stopped. This means that the I/O interface is not created until this Driver is configured to Online mode by using a Tag in an application. This mode enables a dynamic configuration of an I/O interface at run time

Options on the Connection management group

OPTION	DESCRIPTION
Mode	Selects a management mode of a connection. Selecting the Automatic option allows a Driver to manage the connection automatically, as specified in the next options. Selecting the Manual option allows an application to fully manage a connection
Retry failed connection every ... seconds	Select this option to enable a Driver's connection retry in a certain interval, in seconds. If the Give up after failed retries option is not selected, this Driver keeps retrying until a connection is performed, or until the application is stopped
Give up after ... failed retries	Enable this option to define a maximum number of connection retries. When the specified number of consecutive connection retries is reached, a Driver goes to the Offline mode, assuming that a hardware problem was detected. If a Driver establishes a successful connection, the number of unsuccessful retries is cleared. If this new connection is lost, then the retry counter starts at zero
Disconnect if non-responsive for ... seconds	Enable this option to force a Driver to disconnect if no byte was received by the I/O interface during the specified time-out, in seconds. This time-out must be greater than the time-out configured in the Timeout option

Options on the Logging Options group

OPTION	DESCRIPTION
<p>Log to File</p>	<p>Enable this option and configure the name of a file to write a log. Log files can be large, so use this option for short periods of time, only for testing and debugging purposes. If the %PROCESS% macro is used in the log file name, it is replaced by the identifier of the current process. This option is particularly useful when using several instances of the same Driver in Elipse E3, thus allowing each instance to generate a separate log file. For example, when configuring this option with value "c:\e3logs\drivers\sim_%PROCESS%.log", it generates a file named c:\e3logs\drivers\sim_00000FDA.log for process OFDAh. Users can also use the %DATE% macro in the file name. In this case a log file is generated every day, in the format aaaa_mm_dd. For example, when configuring this option with value "c:\e3logs\drivers\sim_%DATE%.log", it generates a file named c:\e3logs\drivers\sim_2005_12_31.log in 12/31/2005 and a file named c:\e3logs\drivers\sim_2006_01_01.log in 01/01/2006. Similarly, the %DATE_HOUR% macro generates one log file per hour, in the format aaaa_mm_dd_hh</p>
<p>File size limit (MB)</p>	<p>Configure the log file size limit, in megabytes. A value equal to 0 (zero) means that there is no size limit for the log file</p>

General Configurations

This section contains information about the configuration of general **I/O Tags** and **Properties** of I/O Interfaces.

I/O Tags

General I/O Interfaces Tags (N2/B2 = 0)

The Tags described next are provided for all supported I/O Interfaces.

IO.CommunicationStatus

Type of Tag	I/O Tag
Type of Access	Reading
N1 Parameter	-1 (minus one)
N2 Parameter	0 (zero)
N3 Parameter	0 (zero)
N4 Parameter	6 (six)
String Configuration	IO.CommunicationStatus

This Tag informs the communication status of a Driver. It indicates how communication works relative to receiving valid data within a time period arbitrated in the configuration. For more information, please check topic **Setup Tab**. Possible values are **0 - Inactive communication**: The Driver did not receive valid data or stopped receiving data after n milliseconds, as configured in the properties window, or **1 - Active communication**: The Driver is receiving valid data.

IO.IOKitEvent

Type of Tag	Block Tag
Type of Access	Read-Only
B1 Parameter	-1 (minus one)
B2 Parameter	0 (zero)
B3 Parameter	0 (zero)
B4 Parameter	1 (one)
Size Property	4 (four)
ParamItem Property	IO.IOKitEvent

This Block returns Driver events generated by several sources in I/O Interfaces. The **TimeStamp** property of this Block represents the moment this event occurred. The Block Elements are the following:

- **Element 0**: Type of event. Possible values are **0**: Information, **1**: Warning, or **2**: Error
- **Element 1**: Source of an event. Possible values are **0**: Driver (specific of a Driver), **-1**: IOKit (generic events of I/O Interfaces), **-2**: **Serial** Interface, **-3**: **Modem** Interface, **-4**: **Ethernet** Interface, or **-5**: **RAS** Interface
- **Element 2**: Error number, specific for each source of event
- **Element 3**: Message of an event, a **String** specific for each event

NOTE

A Driver keeps a maximum number of 100 events internally. If additional events are reported, older events are discarded.

IO.PhysicalLayerStatus

Type of Tag	I/O Tag
Type of Access	Read-Only
N1 Parameter	-1 (minus one)
N2 Parameter	0 (zero)
N3 Parameter	0 (zero)
N4 Parameter	2 (two)
String Configuration	IO.PhysicalLayerStatus

This Tag indicates the status of a physical layer. Possible values are the following:

- **0**: Physical layer stopped, that is, a Driver is in **Offline** mode, the physical layer failed when initializing, or exceeded the maximum number of reconnection attempts
- **1**: Physical layer started but not connected, that is, a Driver is in **Online** mode but the physical layer is not connected. If the **Connection management** option is configured with the value **Automatic**, the physical layer can be connecting, disconnecting, or waiting for a reconnection attempt. If the **Connection management** option is configured with the value **Manual**, then the physical layer remains in this status until forced to connect
- **2**: Physical layer connected, that is, the physical layer is ready for use. This **DOES NOT** mean a device is connected, only that the access layer is working

IO.SetConfigurationParameters

Type of Tag	Block Tag
Type of Access	Read-Only
B1 Parameter	-1 (minus one)
B2 Parameter	0 (zero)
B3 Parameter	0 (zero)
B4 Parameter	3 (three)
Size Property	2 (two)
ParamItem Property	IO.SetConfigurationParameters

Use this Tag to change any property of a Driver's configuration dialog box at run time.

This Tag works only while a Driver is in **Offline** mode. To start a Driver in **Offline** mode, select the **Start driver OFFLINE** option on that Driver's configuration dialog box. Users can write to a PLC Tag or to a Block Tag containing the parameters to change. Writing individual Block Elements is not supported, the whole Block must be written at once.

In **Eclipse SCADA**, users must use a Block Tag. Every parameter to configure uses two Block Elements. For example, if users want to configure 3 (three) parameters, then the size of the Block must be 6 (six, 3×2). The first Element is the property's name, as a **String**, and the second Element is the property's value, according to the next example.

```
// 'Block' must be a Block Tag with automatic reading,
// scan reading, and automatic writings disabled.
// Configure all parameters
Block.element001 = "IO.Type" // Parameter 1
Block.element002 = "Serial"
Block.element003 = "IO.Serial.Port" // Parameter 2
Block.element004 = 1
Block.element005 = "IO.Serial.BaudRate" // Parameter 3
Block.element006 = 19200
// Writes the whole Block
Block.Write()
```

When using **Eclipse E3**, the ability to create arrays at run time allows using an I/O Tag as well as a Block Tag. Users can use the **Write** method of a Driver to send the parameters directly to that Driver, without creating a Tag, according to the next example.

```
Dim arr(6)
' Configure all array elements
arr(1) = "IO.Type"
arr(2) = "Serial"
arr(3) = "IO.Serial.Port"
arr(4) = 1
arr(5) = "IO.Serial.BaudRate"
arr(6) = 19200
' There are two methods to send parameters
' Method 1: Using an I/O Tag
tag.WriteEx arr
' Method 2: Without using a Tag
Driver.Write -1, 0, 0, 3, arr
```

A variation of the previous example uses a bidimensional array.

```
Dim arr(10)
' Configure all array elements. Notice the array was resized
' to 10 elements. Empty array elements are ignored by a Driver
arr(1) = Array("IO.Type", "Serial")
arr(2) = Array("IO.Serial.Port", 1)
arr(3) = Array("IO.Serial.BaudRate", 19200)
Driver.Write -1, 0, 0, 3, arr
```

A Driver does not validate parameter names or passed values, therefore be careful when writing parameters and values. The **Write** method fails if the configuration array is incorrectly created. Users can check the log of a Driver or use the *writeStatus* parameter of the **WriteEx** method to find out the exact cause of an error.

```
Dim arr(10), strError
arr(1) = Array("IO.Type", "Serial")
arr(2) = Array("IO.Serial.Port", 1)
arr(3) = Array("IO.Serial.BaudRate", 19200)
If Not Driver.WriteEx -1, 0, 0, 3, arr, , , strError Then
    MsgBox "Failed configuring Driver parameters: " + strError
End If
```

IO.WorkOnline

Type of Tag	I/O Tag
Type of Access	Reading or Writing
N1 Parameter	-1 (minus one)
N2 Parameter	0 (zero)
N3 Parameter	0 (zero)
N4 Parameter	4 (four)
String Configuration	IO.WorkOnline

This Tag informs the current status of a Driver and allows starting or stopping the physical layer. Possible values are the following:

- **0 - Driver Offline:** Physical layer is closed or stopped. This mode allows a dynamic configuration of a Driver's parameters using the **IO.SetConfigurationParameters** Tag
- **1 - Driver Online:** Physical layer is open or executing. While in **Online** mode, the physical layer can be connected or disconnected and its current status can be checked using the **IO.PhysicalLayerStatus** Tag

In the next example, using **Eclipse E3**, a Driver is configured to **Offline** mode, its COM port is changed, and then configured to **Online** mode again.

```
'Configure to Offline mode
Driver.Write -1, 0, 0, 4, 0
'Change port to COM2
Driver.Write -1, 0, 0, 3, Array("IO.Serial.Port", 2)
'Configure to Online mode
Driver.Write -1, 0, 0, 4, 1
```

The **Write** method may fail when configuring a Driver to **Online** mode, that is, writing the value 1 (one). In this case, this Driver remains in **Offline** mode. The cause of failure can be:

- Type of physical layer incorrectly configured, probably an invalid value was configured in the **IO.Type** property
- This Driver may have run out of memory
- Physical layer probably did not create its working thread. Search the log file for a message "Failed to create physical layer thread!"
- Physical layer could not start. The cause of this failure depends on the type of physical layer. It can be an invalid serial port number, a failure when starting Windows Sockets, or a failure when starting TAPI (modem), among others. This cause is recorded on the log file

IMPORTANT

Even if the configuration of a Driver to **Online** mode is successful, this does not necessarily mean the physical layer is ready to use, that is, ready to execute input and output operations with an external device. The **IO.PhysicalLayerStatus** Tag must be checked to ensure the physical layer is connected and ready for communication.

Properties

These are general properties of all supported I/O Interfaces.

IO.ConnectionMode

9 Controls the management mode of a Connection. Possible values are **0**: Automatic mode, in which a Driver manages the connection or **1**: Manual mode, in which an application manages the connection.

IO.GiveUpEnable

When configured to True, defines a maximum number of reconnection attempts. If all reconnection attempts fail, a Driver enters the **Offline** mode. When configured to False, a Driver tries until a reconnection is successful.

IO.GiveUpTries

9 Number of reconnection attempts before this one is aborted. For example, if the value of this property is equal to 1 (one), a Driver tries only one reconnection when the connection is lost. If this one fails, this Driver enters the **Offline** mode.

IO.InactivityEnable

Configure to True to enable and to False to disable inactivity detection. The physical layer is disconnected if inactive for a certain period of time. The physical layer is considered inactive only if it is capable of sending data but not capable of receiving it back.

IO.InactivityPeriodSec

9 Number of seconds to check for inactivity. If the physical layer is inactive for this period of time, it is then disconnected.

IO.RecoverEnable

☑ Configure to True to enable a Driver to recover lost connections and to False to leave a Driver in **Offline** mode when a connection is lost.

IO.RecoverPeriodSec

9 Delay time between two connection attempts, in seconds.

NOTE

The first reconnection is executed immediately after a connection is lost.

IO.StartOffline

☑ Configure to True to start a Driver in **Offline** mode and to False to start a Driver in **Online** mode.

NOTE

It is pointless to change this property at run time, as it can only be changed when a Driver is already in **Offline** mode. To configure a Driver in **Online** mode at run time, write the value 1 (one) to the **IO.WorkOnline** Tag.

IO.TimeoutMs

9 Defines a time-out for the physical layer, in milliseconds. One second is equal to 1000 milliseconds.

IO.Type

A Defines the type of physical interface used by a Driver. Possible values are the following:

- **N or None:** Does not use a physical interface, that is, a Driver must provide a customized interface
- **S or Serial:** Uses a local serial port (COM n)
- **M or Modem:** Uses a local modem, internal or external, accessed via TAPI (*Telephony Application Programming Interface*)
- **E or Ethernet:** Uses a TCP/IP or UDP/IP socket
- **R or RAS:** Uses a **RAS** (*Remote Access Server*) Interface. A Driver connects to a RAS device using the **Ethernet** Interface and then sends an **AT** (*dial*) command

Statistical Configuration

This section contains information about the configuration of **I/O Tags** and **Properties** of I/O Interfaces statistics.

I/O Tags

Tags of I/O Interface Statistics (N2/B2 = 0)

The Tags described next display statistics for all I/O Interfaces.

IO.Stats.Partial.BytesRecv

Type of Tag	I/O Tag
Type of Access	Read-Only
N1 Parameter	-1 (minus one)
N2 Parameter	0 (zero)
N3 Parameter	0 (zero)
N4 Parameter	1101
Configuration by String	IO.Stats.Partial.BytesRecv

This Tag returns the number of bytes received in the current connection.

IO.Stats.Partial.BytesSent

Type of Tag	I/O Tag
Type of Access	Read-Only
N1 Parameter	-1 (minus one)
N2 Parameter	0 (zero)
N3 Parameter	0 (zero)
N4 Parameter	1100
Configuration by String	IO.Stats.Partial.BytesSent

This Tag returns the number of bytes sent through the current connection.

IO.Stats.Partial.TimeConnectedSeconds

Type of Tag	I/O Tag
Type of Access	Read-Only
N1 Parameter	-1 (minus one)
N2 Parameter	0 (zero)
N3 Parameter	0 (zero)
N4 Parameter	1102
Configuration by String	IO.Stats.Partial.TimeConnectedSeconds

This Tag returns the number of seconds a Driver is connected in the current connection or 0 (zero) if a Driver is disconnected.

IO.Stats.Partial.TimeDisconnectedSeconds

Type of Tag	I/O Tag
Type of Access	Read-Only
N1 Parameter	-1 (minus one)
N2 Parameter	0 (zero)
N3 Parameter	0 (zero)
N4 Parameter	1103
Configuration by String	IO.Stats.Partial.TimeDisconnectedSeconds

This Tag returns the number of seconds a Driver is disconnected since the last connection ended or 0 (zero) if a Driver is connected.

IO.Stats.Total.BytesRecv

Type of Tag	I/O Tag
Type of Access	Read-Only
N1 Parameter	-1 (minus one)
N2 Parameter	0 (zero)
N3 Parameter	0 (zero)
N4 Parameter	1001
Configuration by String	IO.Stats.Total.BytesRecv

This Tag returns the number of bytes received since a Driver was loaded.

IO.Stats.Total.BytesSent

Type of Tag	I/O Tag
Type of Access	Read-Only
N1 Parameter	-1 (minus one)
N2 Parameter	0 (zero)
N3 Parameter	0 (zero)
N4 Parameter	1000
Configuration by String	IO.Stats.Total.BytesSent

This Tag returns the number of bytes sent since a Driver was loaded.

IO.Stats.Total.ConnectionCount

Type of Tag	I/O Tag
Type of Access	Read-Only
N1 Parameter	-1 (minus one)
N2 Parameter	0 (zero)
N3 Parameter	0 (zero)
N4 Parameter	1004
Configuration by String	IO.Stats.Total.ConnectionCount

This Tag returns the number of connections a Driver already established, successfully, since it was loaded.

IO.Stats.Total.TimeConnectedSeconds

Type of Tag	I/O Tag
Type of Access	Read-Only
N1 Parameter	-1 (minus one)
N2 Parameter	0 (zero)
N3 Parameter	0 (zero)
N4 Parameter	1002
Configuration by String	IO.Stats.Total.TimeConnectedSeconds

This Tag returns the number of seconds a Driver remained connected since it was loaded.

IO.Stats.Total.TimeDisconnectedSeconds

Type of Tag	I/O Tag
Type of Access	Read-Only
N1 Parameter	-1 (minus one)
N2 Parameter	0 (zero)
N3 Parameter	0 (zero)
N4 Parameter	1003
Configuration by String	IO.Stats.Total.TimeDisconnectedSeconds

This Tag returns the number of seconds a Driver remained disconnected since it was loaded.

Properties

Currently, there are no properties defined specifically to display I/O Interface statistics at run time.

Driver's Revision History

VERSION	DATE	AUTHOR	COMMENTS
2.0.5	05/15/2026	M. Ludwig	<ul style="list-style-type: none">Driver updated to IOKit library version 3.0 and Visual Studio 2022 (<i>Case 38068</i>).
2.0.4	03/20/2017	M. Ludwig	<ul style="list-style-type: none">Fixed a disorder when reading or writing in M, S, and V areas for 16-bit or larger data types (<i>Case 22198</i>).
2.0.1	01/20/2015	M. Ludwig	<ul style="list-style-type: none">Driver updated to communicate with Prodrive MPI/IE version 6.x library (<i>Case 15813</i>).
1.1.1	07/20/2006	M. Ludwig	<ul style="list-style-type: none">Documentation update (<i>Case 5534</i>).
1.0.1	-	-	<ul style="list-style-type: none">All releases previous to revision control.

Headquarters

**Rua Mostardeiro, 322/Cj. 902, 1001 e
1002**

90510-002 — Porto Alegre — RS

Phone: (+55 51) 3346-4699

Fax: (+55 51) 3222-6226

E-mail: elipse-rs@elipse.com.br

Branch in Taiwan

9F., No.12, Beiping 2nd St., Sanmin Dist.

807 — Kaohsiung City — Taiwan

Phone: (+886 7) 323-8468

Fax: (+886 7) 323-9656

E-mail: evan@elipse.com.br

Check our website for information about a representative in your country.

www.elipse.com.br

kb.elipse.com.br

forum.elipse.com.br

www.youtube.com/elipsesoftware

elipse@elipse.com.br



Gartner, Cool Vendors in Brazil 2014, April 2014.

Gartner does not endorse any vendor, product or service depicted in its research publications, and does not advise technology users to select only those vendors with the highest ratings. Gartner research publications consist of the opinions of Gartner's research organization and should not be construed as statements of fact. Gartner disclaims all warranties, expressed or implied, with respect to this research, including any warranties of merchantability of fitness for a particular purpose.

Microsoft Partner
Gold Independent Software Vendor (ISV)